




Operating Instructions & Service Manual

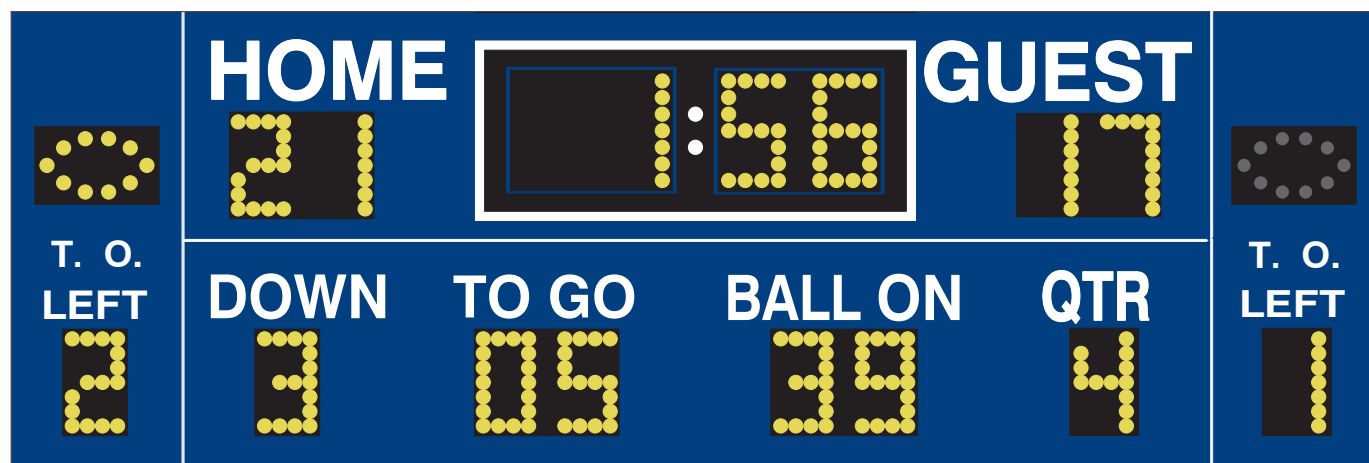

Football Scoreboard Model MP-3424R With MP-3000R Control

TABLE OF CONTENTS

	<u>PAGE</u>
<u>1. GENERAL INFORMATION</u>	3
1.1 DESCRIPTION	
1.2 IDENTIFICATION	
1.3 DAMAGE	
1.4 DAMAGE CLAIM PROCEDURE	
<u>2. INSTALLATION</u>	4
2.1 GENERAL INFORMATION	
2.2 INSTALLATION	
2.3 ELECTRICAL CONNECTIONS	
<u>3. CONTROL CONSOLE OPERATION</u>	5
3.1 SCOREBOARD POWER	
3.2 CONSOLE DISPLAY	
3.3 CONSOLE POWER	
3.4 INITIALIZING SCOREBOARD	
3.5 TIME SETTING AND CONTROL	
3.6 TEAM SCORES	
3.7 HORN (OPTIONAL)	
3.8 YARDS TO GO, BALL ON, DOWN, QUARTER, AND TIME OUTS LEFT	
3.9 DIMMER	
3.10 TRACK OPERATION	
<u>4. MAINTENANCE AND TROUBLESHOOTING</u>	8
4.1 INTRODUCTION	
4.2 TEST EQUIPMENT	
4.3 TROUBLESHOOTING	
4.4 TROUBLESHOOTING GUIDE	
<u>5. REPLACEMENT PARTS LIST</u>	10
5.1 SCOREBOARD DISPLAY PARTS	
5.2 SCOREBOARD CONTROLLER ASSEMBLY PARTS	
<u>6. DIAGRAMS</u>	13
6.1 CONTROL CONSOLE KEYBOARD AND SLIPSHEET LAYOUT	
6.2 POWER WIRING	
6.3 CONTROLLER ASSEMBLY WIRING (D-170203)	
6.4 MICROPROCESSOR 4X 7 LAMP PATTERN (8 BIT)	
6.5 FIGUREGRAM WIRING DIAGRAM (C-13137)	
6.6 JUMPER LOCATION ON 3 POSITION SYSTEM	
6.7 TRIAC PLACEMENT DIAGRAM	
6.8 INSTALLATION DRAWINGS (C-10827-2 and B-151501)	

1. GENERAL INFORMATION

1.1 Description

Your All American Scoreboard has been carefully inspected and tested before leaving the factory. It is possible, however, that components may be loosened or forced out of adjustment in transit. If this occurs, follow the troubleshooting guide (section 4). If equipment then fails to operate, contact immediately:

ALL AMERICAN Service Department
EVERBRITE Corporation
P.O. Box 100
Pardeeville, WI 53954
Telephone: (608) 429-2121
Toll Free: 800-356-8146

Parts being returned for repair are to be sent to:

ALL AMERICAN Service Department
EVERBRITE Corporation
401 S. Main Street
Pardeeville, WI 53954
E-mail score@everbrite.com

NOTE

If you need to send parts in for repair, please call the ALL AMERICAN service department for a returned goods authorization (RGA) number.

1.2 Identification

All American uses a 5 digit serial number for scoreboard identification. The serial number tags are located on the back of the control console and the lower right-hand corner on the face of the scoreboard display. When contacting the factory for assistance it is important that the model number and serial number are known.

1.3 Damage

Upon receipt, check for visible damage. If this occurs, or if damage is found after shipment has been accepted, follow the damage claim procedure.

1.4 Damage Claim Procedure

An instruction sheet is enclosed advising the consignee in case of damage in transit. If damage is noted at the time of delivery, consignee must obtain an 'Inspection of Bad Order' from the delivering carrier. In order to process your claim, this must be properly filled out with a complete statement of all damage and it must be signed by the carrier.



If damage is discovered after delivery, you should call the delivery company. Have them make out a Concealed Damage Report. Fifteen days after delivery are allowed, so this should be done PROMPTLY or it is impossible to process this claim.

Advise EVERBRITE corporation of necessary replacement parts or repairs.

Consignee will be invoiced and then should file a claim with the carrier to recover charges. TO FILE YOUR CLAIM FOLLOW THIS PROCEDURE:

- (A) Cost of replacement parts or repair charges are invoiced to the carrier by the consignee.
- (B) The following documents, properly filled out, plus invoice are forwarded to the trucking company in support of your claim:
 - (a) Original bill of lading
 - (b) Original paid freight bill
 - (c) Certified copy of original invoice
 - (d) Standard form for presentation of loss and damage claim properly filled out.

2. INSTALLATION

2.1 General Information

Shipping papers accompany each scoreboard. Check carefully to see that you receive the following:

- 1 ea Football Display (4 Pieces)
- 1 ea Control Console
- 1 ea Service Manual
- 1 ea Mounting Hardware Package
- 1 ea AC Adaptor
- 1 ea Horn (if ordered)

IMPORTANT!

The MP-40 cable supplied by ALL AMERICAN SCOREBOARDS for use on the Microprocessor based scoreboards is specifically designed for this system. Use of a substitute cable may void the warranty on the scoreboard!

2.2 Installation

Select the location best suited for visibility by the majority of spectators. Preferred position is facing east or north to avoid direct sunlight on the face of the scoreboard, if day games are played. For permanent mounting to uprights, see the enclosed installation drawing in Section 6.

2.3 Electrical Connections

The MP-3424R scoreboard requires two 120 V. 30 AMP AC circuits. This can be accomplished by a 120 volt single phase 2 wire with ground 60 amp service or a 120/240 volt single phase three wire with ground 30 amp service.

IMPORTANT!!!

To protect the control from damage, it is advisable that you disconnect the control and store in a dry secure area when not in use.

NOTE

This equipment complies with the requirements in part 15 of the FCC rules for a class A computing device. Operation of this equipment in a residential area may cause unacceptable interference to radio and television reception, requiring the operator to take whatever steps are necessary to correct the interference.

3. CONTROL CONSOLE OPERATION

3.1 Scoreboard Power

Turn on the branch circuits to the scoreboard. The Home and Guest scores will show “0”.

3.2 Console Display

The 2 line by 20 character Liquid Crystal Display module displays the scoreboard information entered from the keyboard. The following information is displayed continuously: Time, Home and Guest scores, Yards To Go, Ball On, Down, Quarter, Time Outs Left, and Auto Horn Enable.

3.3 Console Power

Plug the AC Adaptor into a wall outlet and into the control console.

Push **ON/OFF** once to turn the console on.

Push **ON/OFF** a second time to shut the console off.

When first turned on; the console display should show as follows:

 
SCOREBOARD CONTROL
1991 VERSION 3.3

3.4 Initializing Scoreboard

Enter the two digit code (61) shown in the lower left corner of the keyboard as in the following example:

Push **CODE** **6** **1** **ENTER** .

When the proper code has been entered, the console display will show as follows:



The scoreboard display will now show :00 in the time section.

3.5 Time Setting and Control

To set a 15 minute period, key in the following: **SET** **1** **5** **0** **0** **ENTER** .
Any time up to 99:59 may be preset in a similar manner.

The **UP/DN** key determines the timer mode. When in the UP mode an arrow up symbol is displayed next to the time on the LCD display. If in the DOWN mode there is no arrow displayed.

Switching the time toggle switch to the IN and OUT position, starts and stops the timer. Push **RESET** to return the timer to the previously set value.

3.6 Team Scores

The Home and Guest Scores can be changed in five different ways.

- (A) To add 1 to the existing score: Push **+1** .
- (B) To add 6 to the existing score: Push **+6** .
- (C) To add 3 to the existing score: Push **+3** .
- (D) To directly enter or correct a score: Push Home or Guest **SCORE** followed by the desired number, then **ENTER** .

Example: Present Home Score is 15. Change the score from 15 to 23.

Push: Home **SCORE** **2** **3** **ENTER** .

- (E) To clear the score: Push **SCORE** **CLEAR** .

3.7 Horn (Optional)

The horn will blow for 1/2 second each time **HORN** is pressed.

The horn will blow automatically at the end of each period for 2 seconds.

The automatic horn function may be disabled by using the **AUTO HORN** key. An 'H' is displayed on the LCD when this function is enabled.

3.8 Yards To Go, Ball On, Down, Quarter, and Time Outs Left

Entries to the above function is made in the same manner as direct entry for Team Scores.

3.9 Dimmer

Push **DIMMER** to dim the lamps during night use.

3.10 Track Operation

For track operation, use code 82. The timer will now count up from zero. When in the track mode, the console LCD will display two timers.

If you want to know the split times push **SPLIT** .

The bottom timer will stop so that you can read the time. Now if you push **RESUME** , the timer will show what the top timer shows, and resume timing.

4. MAINTENANCE AND TROUBLESHOOTING

4.1 Introduction

This section gives maintenance and troubleshooting information. Included are troubleshooting guides for typical scoreboard malfunctions. If the cause of a problem cannot be determined, please contact the Customer Service Department.

4.2 Test Equipment

A simple analog or digital voltmeter will be sufficient for all user repairable problems. Printed circuit boards requiring troubleshooting should be returned to the factory.

4.3 Troubleshooting

Whenever possible, follow the troubleshooting guides prior to contacting the customer service department. If a problem not described in the guides exists, contact the customer service department immediately. Refer to the diagrams provided for assistance in troubleshooting scoreboard malfunctions.

4.4 Troubleshooting Guides

(A) Scoreboard doesn't light and console doesn't work:

- (a) Check that the main power switch is turned on.
- (b) Replace any defective or blown fuses.
- (c) Check the power connections and voltages at the scoreboard.
- (d) Contact the Customer Service Department.

(B) Scoreboard digits don't light but the console works:

- (a) With the main power switch "OFF"; remove the cover over the controller assembly.
- (b) Check all connections.
- (c) Turn the main power "ON".
- (d) If the scoreboard still doesn't light, check the transformer voltage going to the receiver PCB (printed circuit board) assembly (blue wires) using a voltmeter set on the 12 VAC or higher scale.

If the voltage is less than 8 VAC contact the Customer Service Department.

If the voltage is between 8-12 VAC see the replacement parts list for a receiver PCB assembly, and contact the Customer Service Department.

(C) The scoreboard digits light but the console doesn't work:

- (a) Check for continuity between the scoreboard and the junction box.
- (b) If an open circuit is found, the problem is either the cable or a cable connection.

- (c) If the continuity test checks good, check the voltage between the green wire and the white wire in the junction box, using a voltmeter set on the 12 VAC or higher scale.

If the voltage is 0 VAC see the controller parts list for a transformer assembly.

If the voltage is less than 8 VAC consult the controller wiring diagram for instructions on long cable compensation.

If the voltage is between 8 VAC and 12 VAC contact the Customer Service Department.

- (D) The scoreboard digits light, the console works but there is no control of the scoreboard:
- (a) Check the voltage between the black and red wires in the junction box with a voltmeter set on the 3 VDC or higher scale. The voltage should read somewhere between 2-3 VDC when the console is working properly.
 - (b) If the voltage is 0 VDC contact the Customer Service Department for assistance.
 - (c) If the voltage is correct, (2-3 VDC) check that this reading also appears at the scoreboard.
 - (d) If the correct voltage also appears at the scoreboard, see the replacement parts list for a receiver PCB assembly.
- (E) The scoreboard works, but some lights stay on all the time:
- (a) With the main power “OFF”, switch the plug from the bad digit with the plug for a known good digit. EXAMPLE: Plug “C” into “D” and “D” into “C” locations.
 - (b) Turn the power back on. If the same lamps remain lit all the time, the problem is a shorted lamp socket. If the lamps on a different digit now stay lit all the time, the problem is on the driver PCB assembly. See the replacement parts list for the proper replacement part.
- (F) The scoreboard works but some lights do not come on:
- (a) Check for burned out lamps.
 - (b) Check for a broken wire or bad connection on the 12 pin connector.
 - (c) See the replacement parts list for the proper replacement driver board.

IMPORTANT !!!

In this scoreboard the 120 volt line is on the lamp socket all the time, and the common is switched to turn the lamps on and off. For this reason, to avoid damage to the equipment or personal injury, it is important to turn the main power off when changing the lamps.

5. REPLACEMENT PARTS

5.1 Scoreboard Display Parts

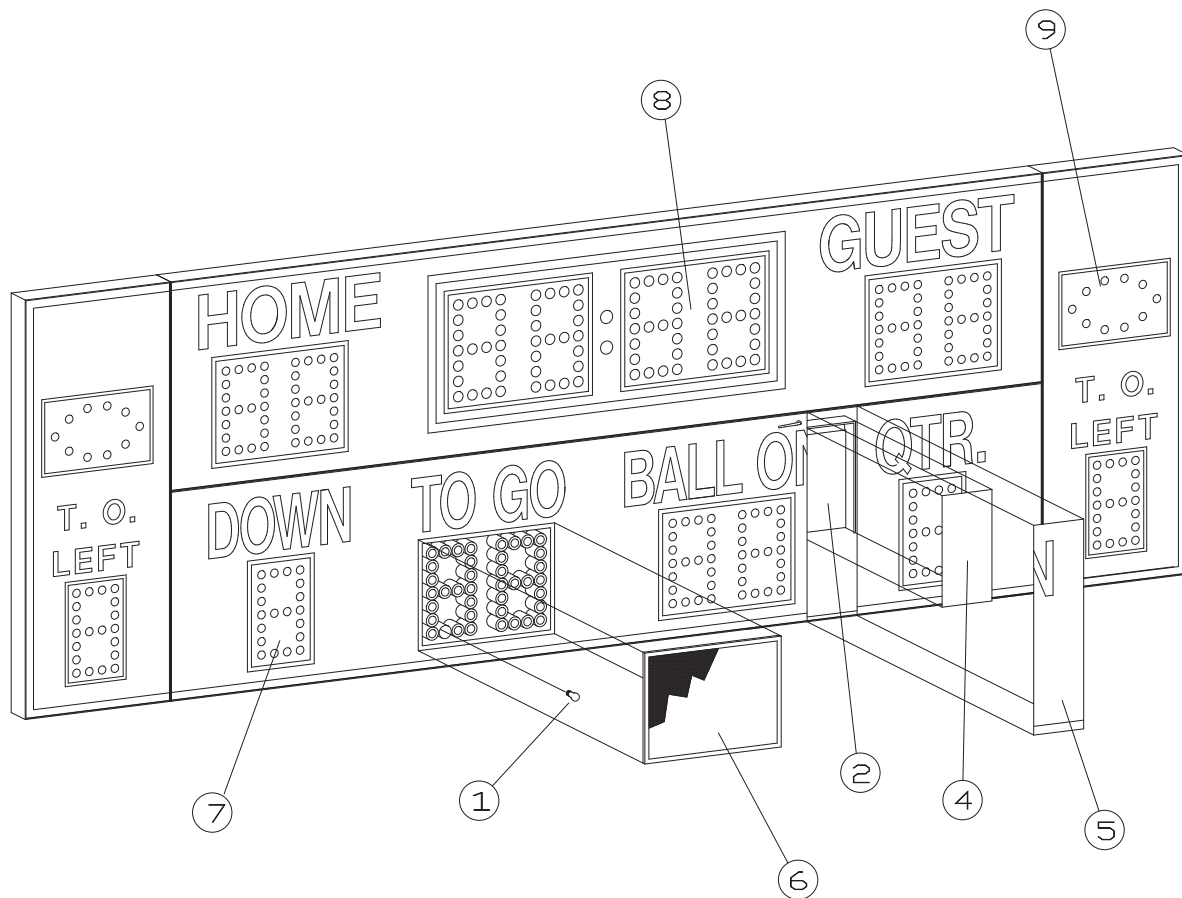


figure 1

DISPLAY ASSEMBLY

REPLACEMENT PARTS LIST (MP-3424R Football)

fig.& index	MFG PART NUMBER	DESCRIPTION	REF DES	VENDOR PART #
1- 1-1 1-1A	151090 850022 850026	Display Set Lamp, 15W/130V Clear Lamp, 25W/130V I.F.		151090 15A15CL 25A15IF
1-2	151213	Controller Assembly, MP-3424R *****SEE DETAIL FIGURE 2*****	A2	151213
1-3 1-3A	SU00038 121880	Fuse box, Fuse, 15A 250V 1/4 X 1 1/4"	F1-F7	SU00038 ABC-15
1-4	EL00083	Rain Shield		EL00083
1-5	000000	Service Door		000000
1-6	705909	Screen, Score, Ball On, Y.T.G. (QTY 4)		705909
1-7	705916	Screen, Down, Qtr, T.O.L. (QTY 4)		705916
1-8	705920	Screen, Timer (QTY 2)		705920
1-9	705906	Screen, Poss. (QTY 2)		705906
1-10	EL00474P	Antenna, External		RFX-A7P Maxrad
1-10A	WI00018P	Antenna Cable, 2.4 GHZ		RFX-C8
1-11	EL044100	Resistor, 2 OHM 30 WATT Wire Wound		HL-24-09Z
	150021 HB005500 150031 EL00479P EL00473P SW005100 EL053000 HB002400 WH009100 122763	Control Console, 3000 Radio Slipsheet Pair HB005500 Transmitter PCB Assembly ***** PROGRAM MP3S001W ***** Tranceiver, 2.4 GHZ Zeus Antenna, Internal Toggle Switch, LCD Display, 2 Line 20 Character Keyboard Assembly, Ribbon Cable Assembly, 14C 8" Enclosure,	A1 S1	150021 150031 EL00475P EL00473P SW005100 HB002400 WH009100
	EL00478P	Power Adaptor, 9 VDC 300 mA		EL00478P

5.2 Scoreboard Controller Assembly Parts

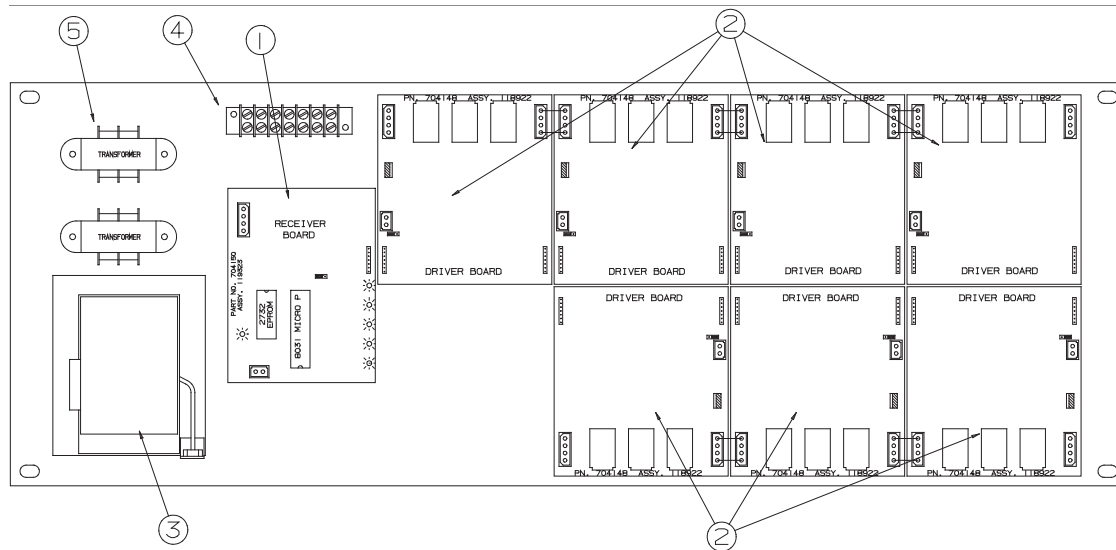



figure 2

CONTROLLER ASSEMBLY


REPLACEMENT PARTS LIST (MP-3424R) Controller Assembly				
fig.& index	MFG PART NUMBER	DESCRIPTION	REF DES	VENDOR PART #
2-	151213	Controller Assembly	A2	151213
2-1	150040	Receiver PCB Assy, 11.0592 MHZ crystal *** PROGRAM 3432.CNTW ***	A3	150040
2-2	118922	Driver PCB Assembly, 3 Position	A4-A10	118922
2-3	EL00479P	Transceiver, 2.4 GHZ Zeus OEM	A16	EL00479P
2-4	701137	Terminal Block, 7C	TB1&2	670-7
2-5	703719	Transformer, 8V/18V	T1/T2	CS-697
2-6	705723	Spacer, P.C.Board		LCBS-6-01

6. **DIAGRAMS**

6.1 Control Console Keyboard and Slipsheet Layout

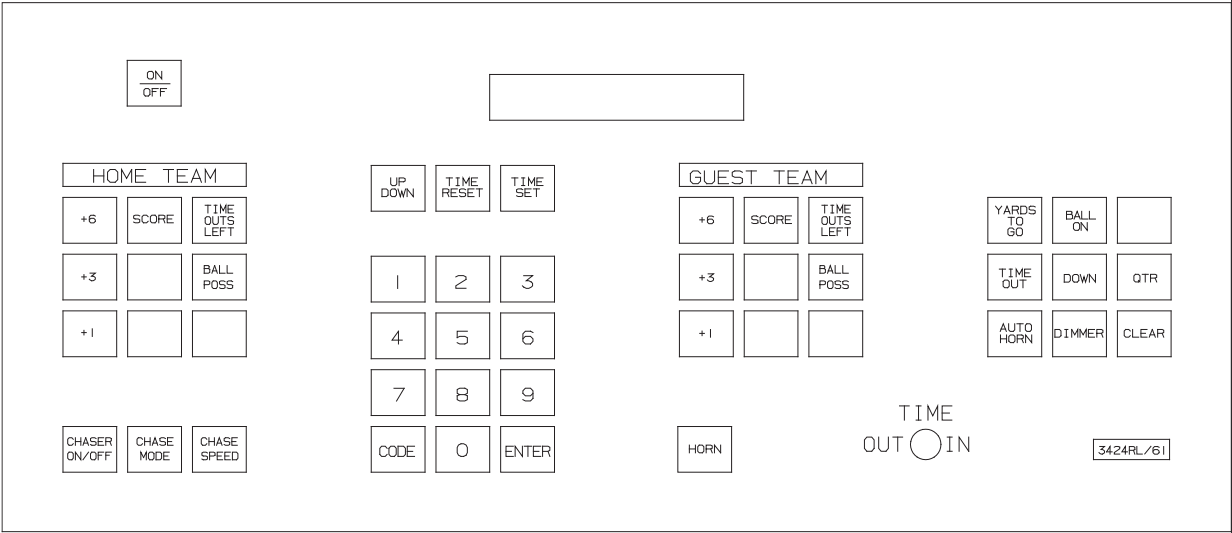


FOOTBALL

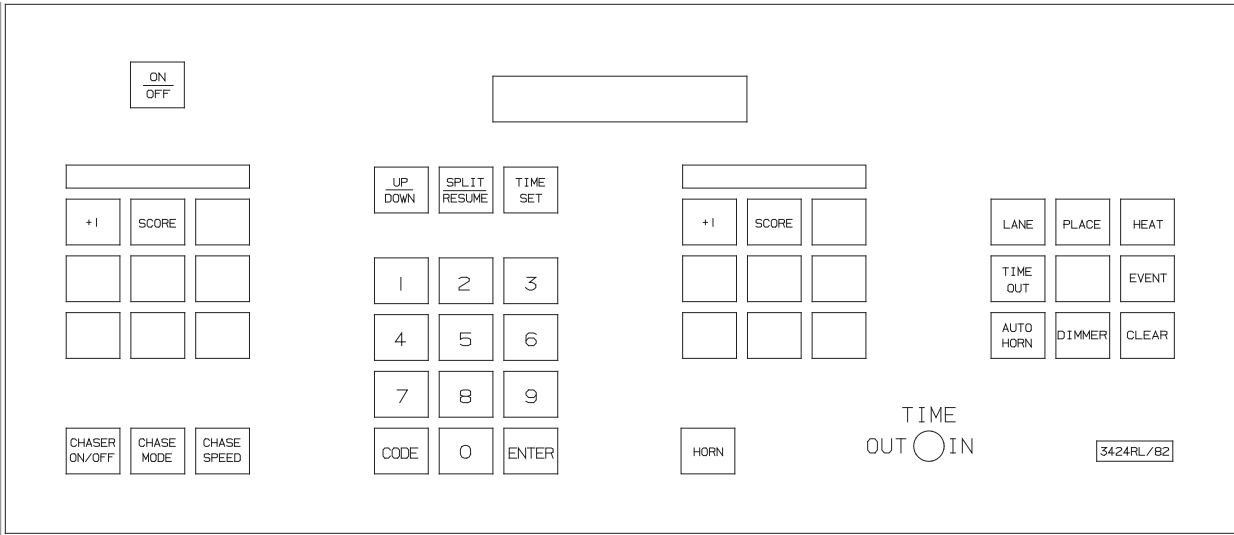

TRACK


CONSOLE KEYBOARD

6.2 Power Wiring

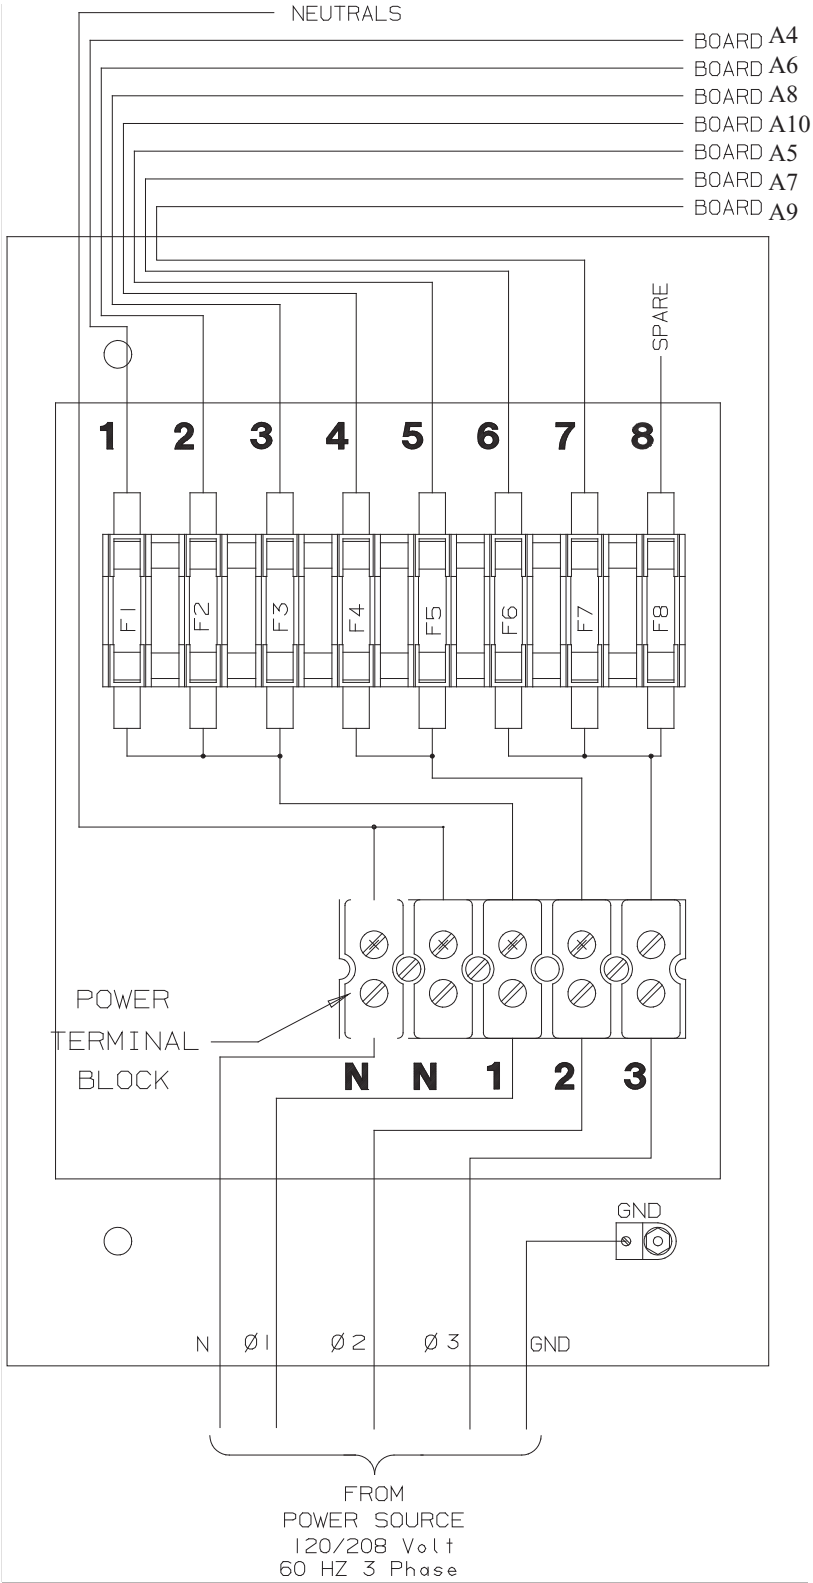



POWER WIRING

6.3 Controller Assembly Wiring

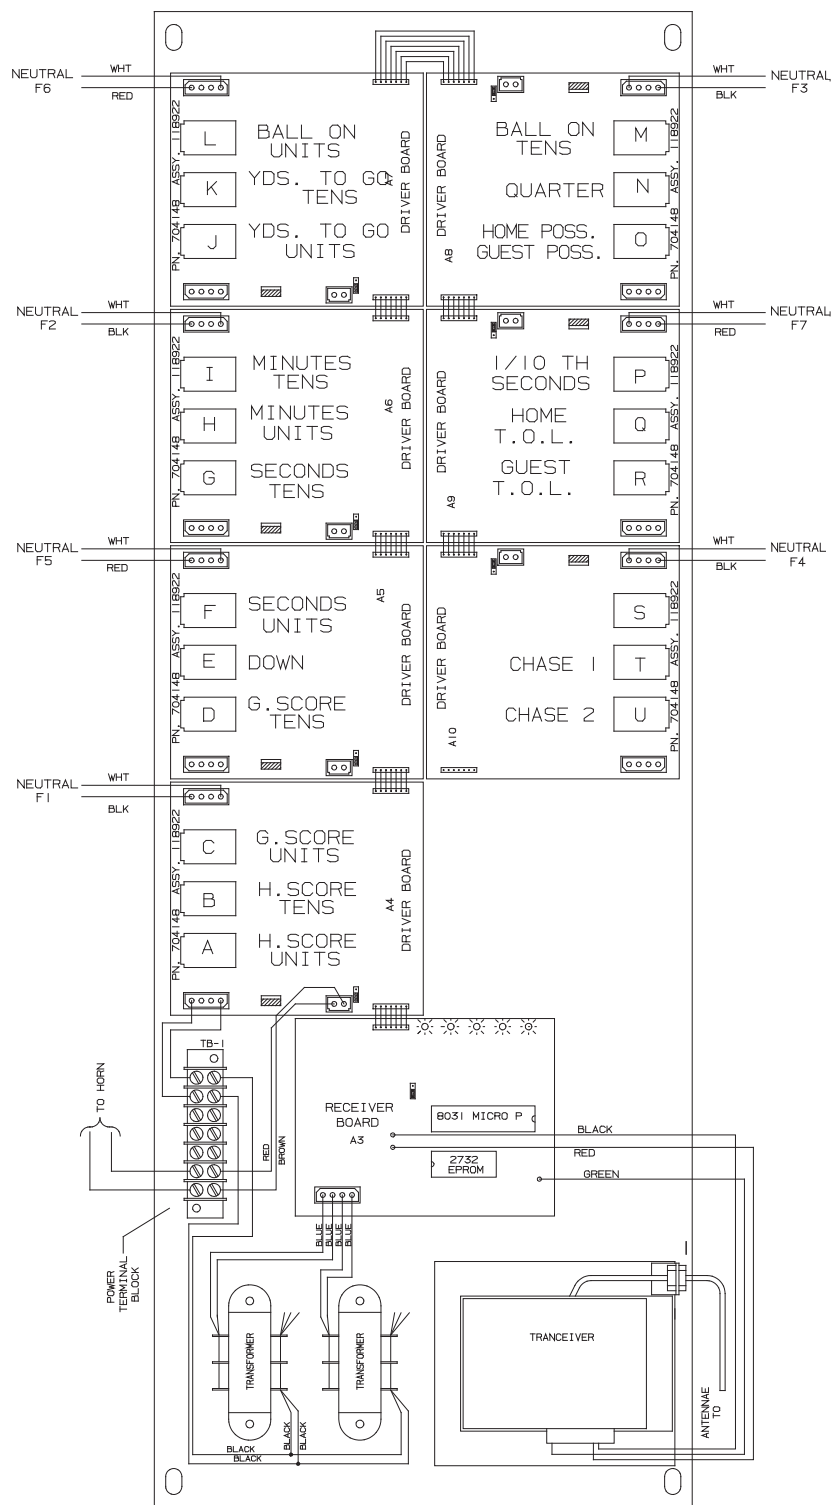

CONTROLLER ASSEMBLY

6.4 Microprocesor 4 X 7 Lamp Pattern (8 Bit)

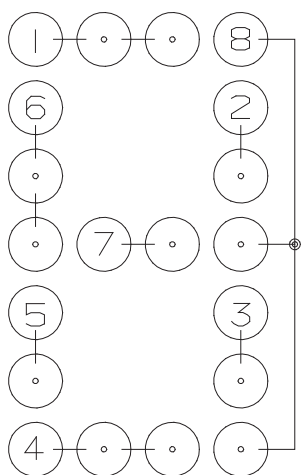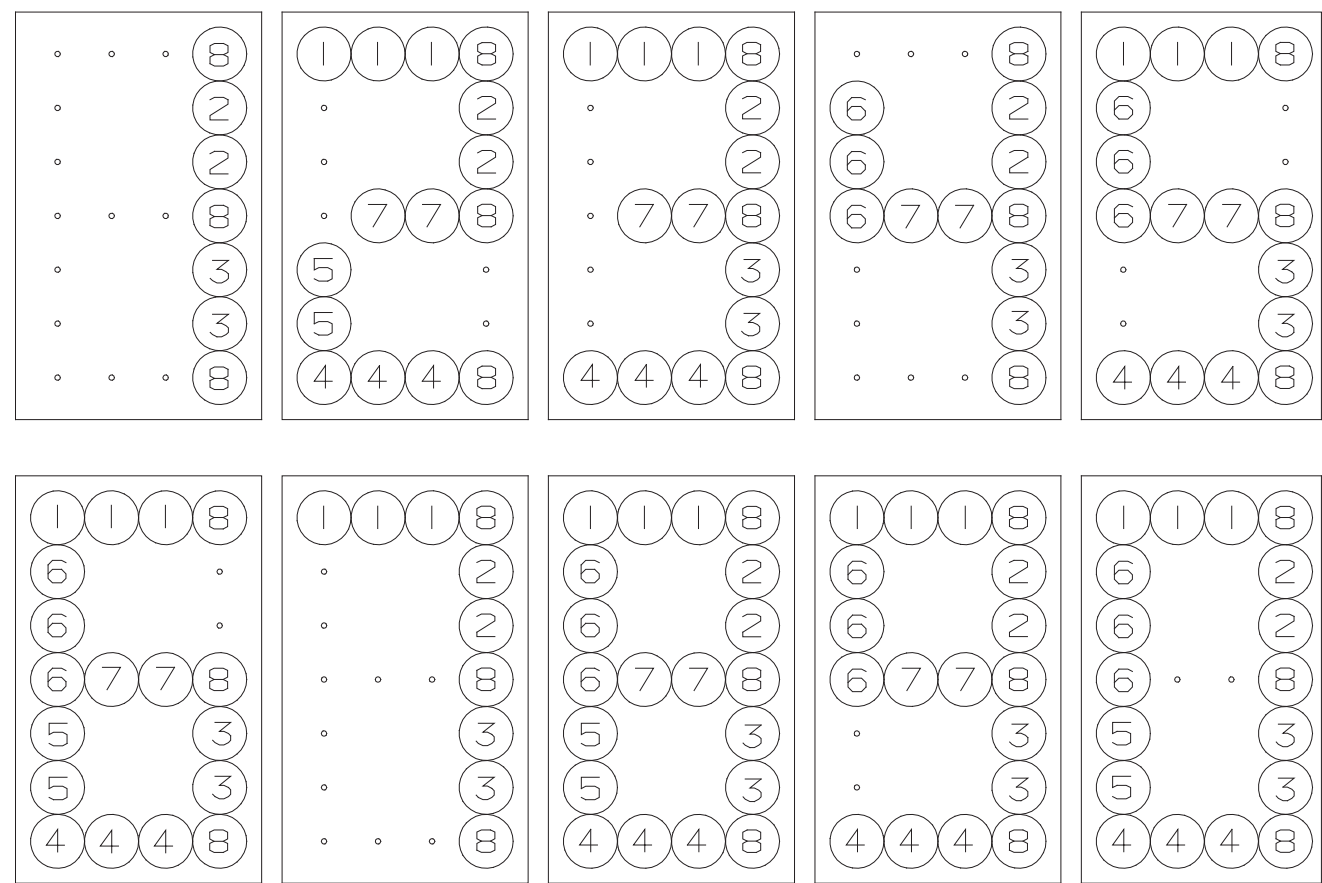


NUMERALS


	0	1	2	3	4	5	6	7	8	9
1	0	.	2	3	.	5	6	7	8	9
2	0	1	2	3	4	.	.	7	8	9
3	0	1	.	3	4	5	6	7	8	9
4	0	.	2	3	.	5	6	.	8	9
5	0	.	2	.	.	.	6	.	8	.
6	0	.	.	.	4	5	6	.	8	9
7	.	.	2	3	4	5	6	.	8	9
8	0	1	2	3	4	5	6	7	8	9

MICROPROCESSOR 4 X 7 (8 BIT) LAMP PATTERN

6.5 Figuregram Wiring

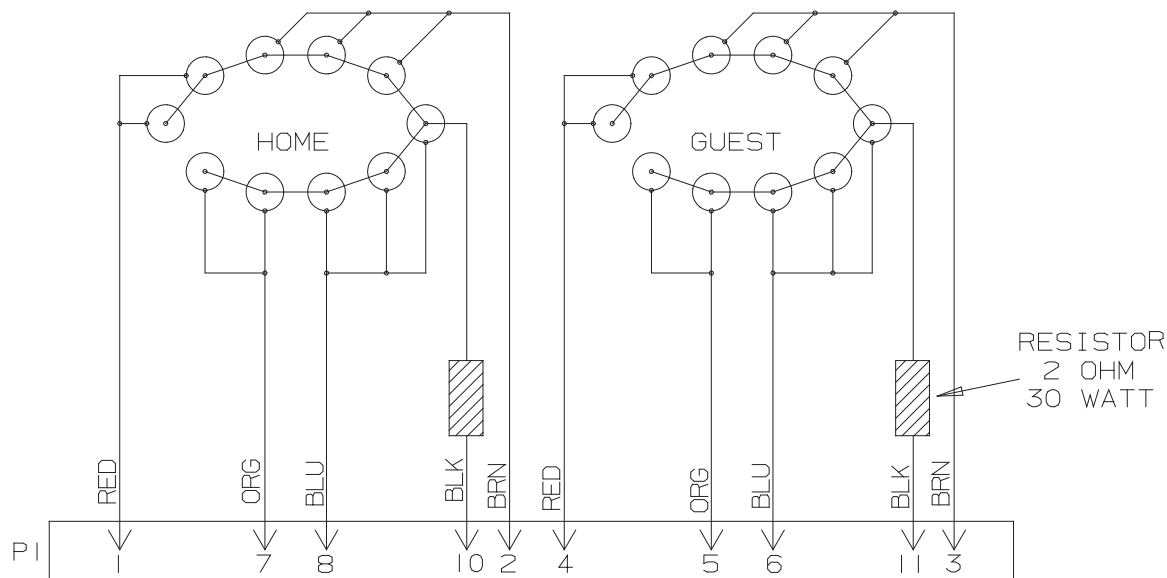

POSSESSION WIRING

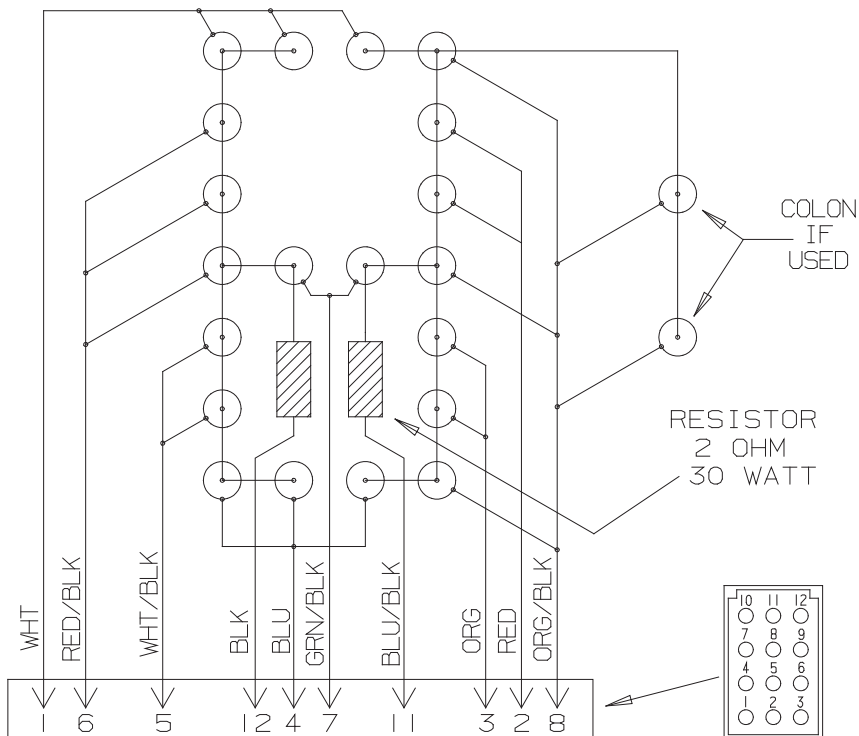

0-9 FIGUREGRAM WIRING


12C MALE CONNECTOR

8 BIT FIGUREGRAM WIRING

6.7 Jumper Location on 3 Position System

All of the 3 position drivers and receivers are identical except for the jumper on each board. Make sure the jumpers are set for the model of scoreboard you are installing them into.


- (A) On the receiver board (refer to figure 11); Jumper pins 2 & 3 for models MP-3385, MP-3312, MP-3529, and MP-3549. Jumper pins 1 & 2 for all other models.
- (B) On the driver board (refer to figure 10); Jumper pins 1 & 2 for use of a horn. Jumper pins 2 & 3 for all others.

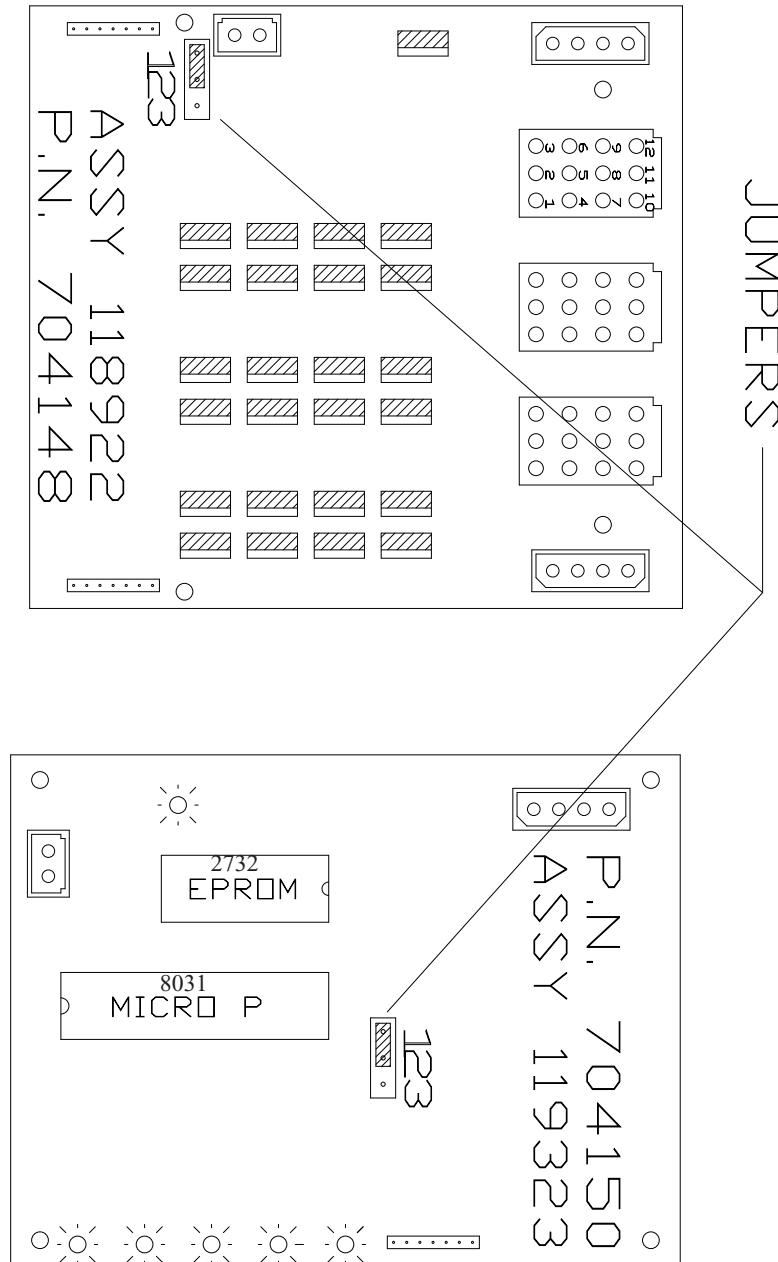

JUMPER LOCATION


6.8 Triac Placement

The triac is the switch that controls the figuregram lamps. The triacs for any given figuregram are adjacent to the twelve pin connector on the driver board that controls that figuregram. Shown below is the triac placement and bit designation relative to the figuregram bit pattern.

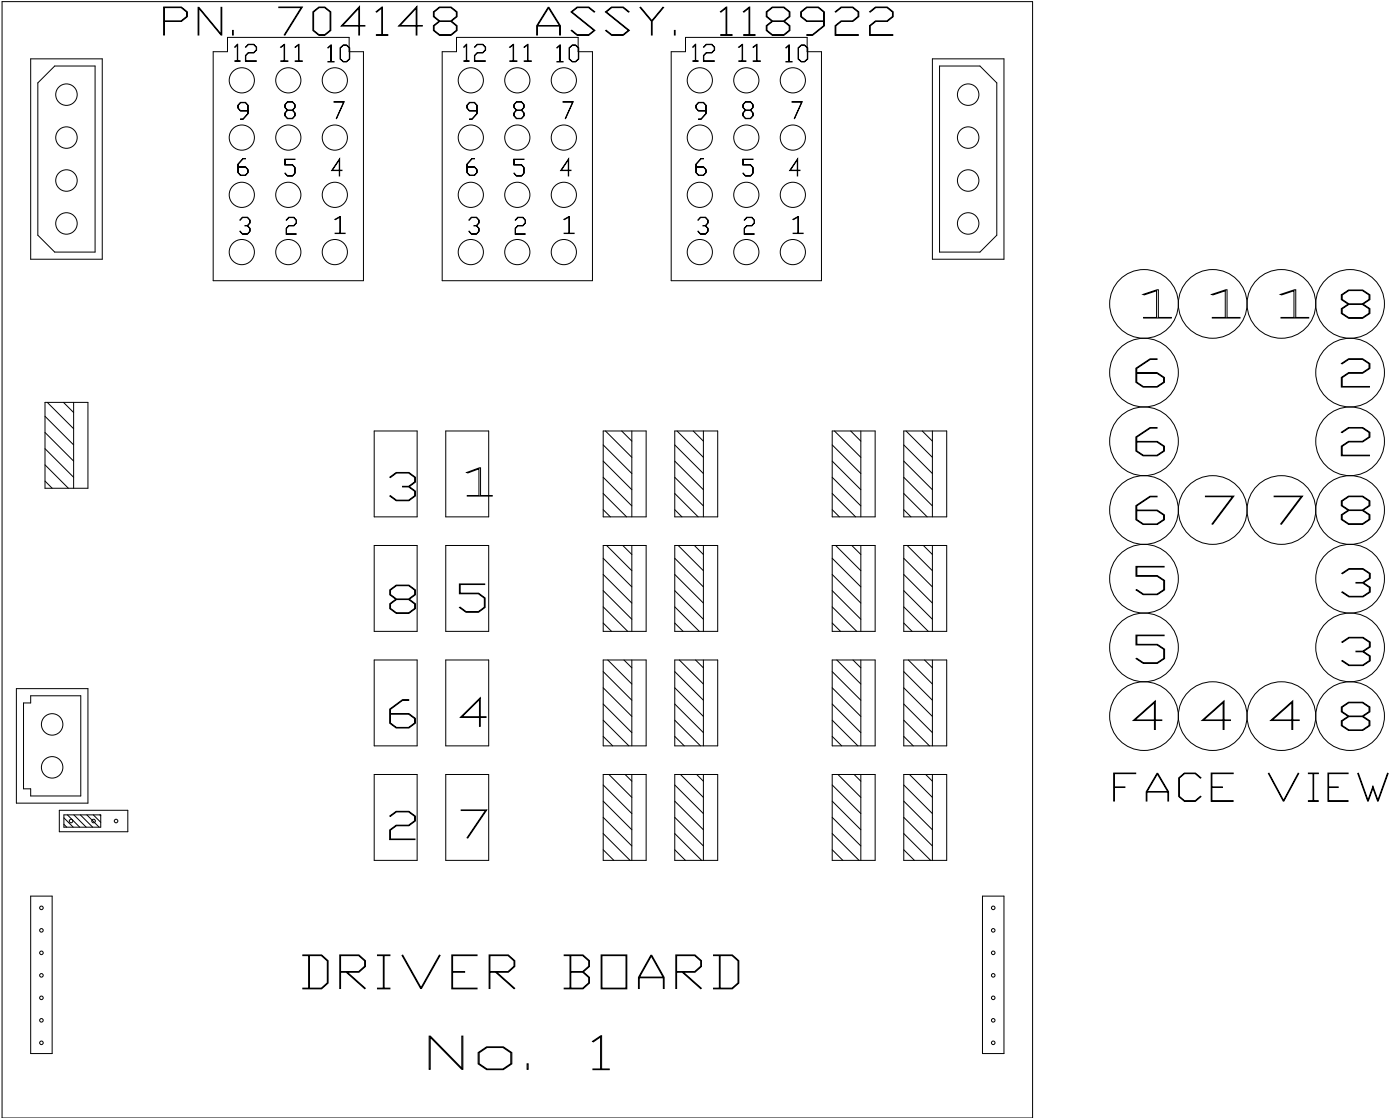


MP TRIAC PLACEMENT

6.9 Installation Drawing

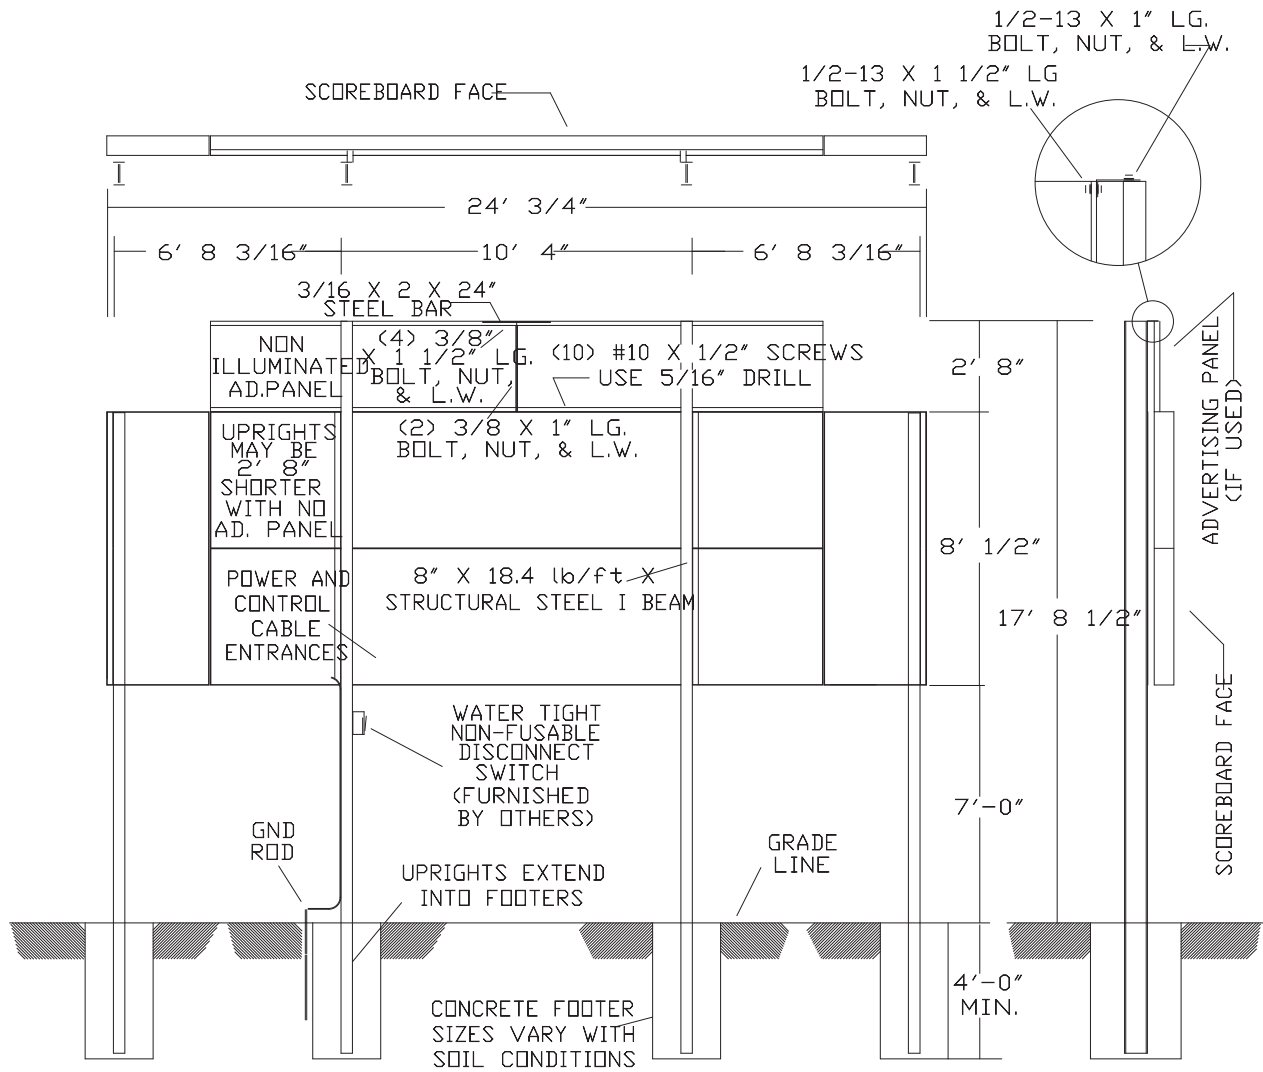



INSTALLATION DRAWING

6.9 Installation Drawing

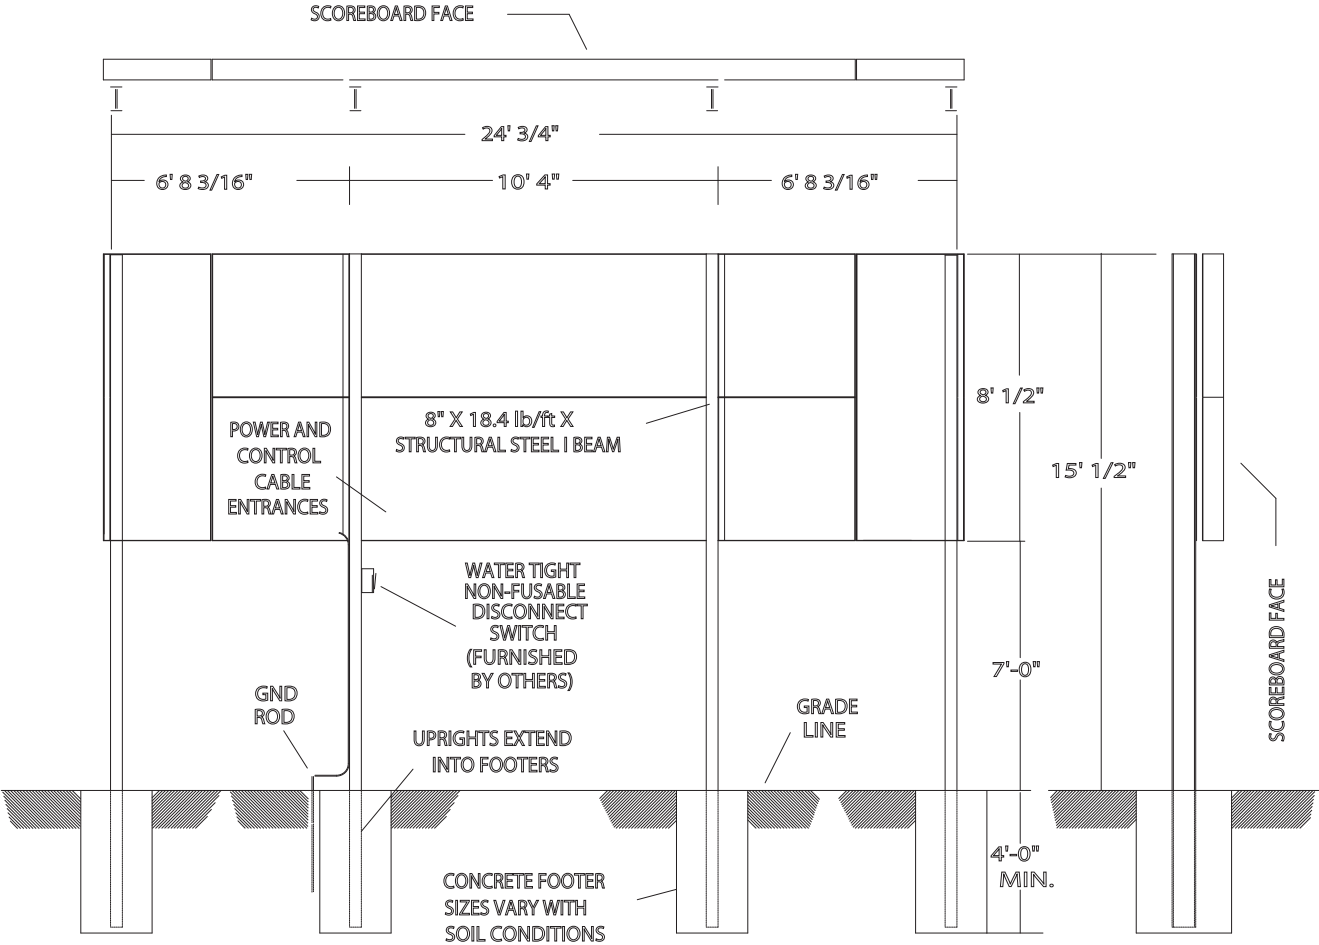

INSTALLATION DRAWING


6.9 Installation Drawing

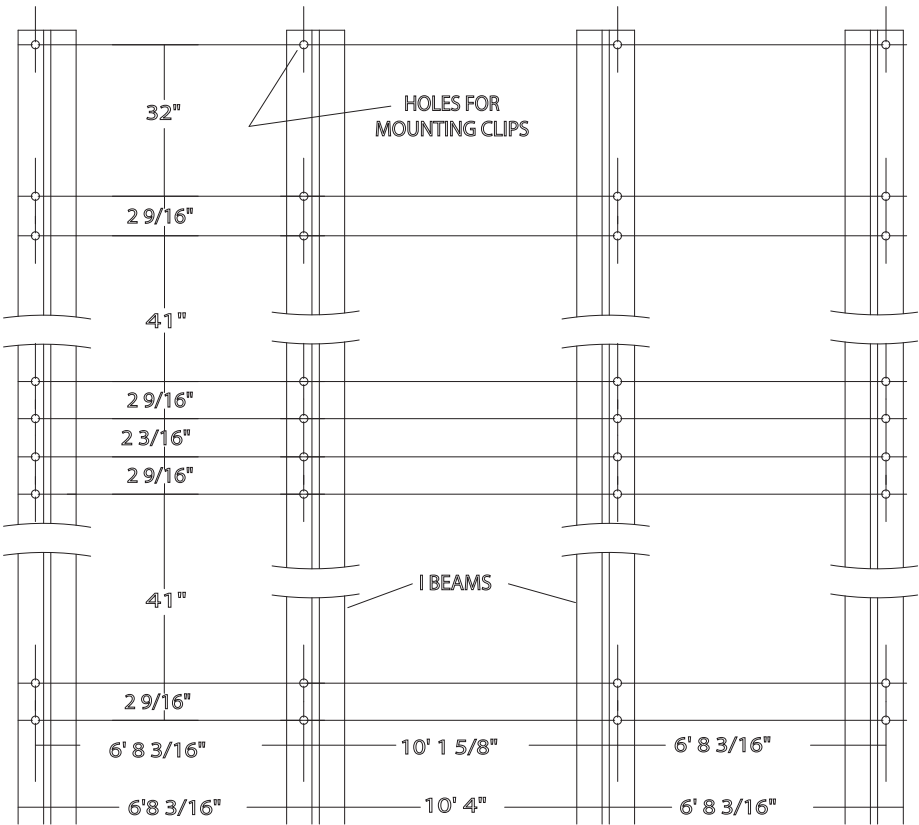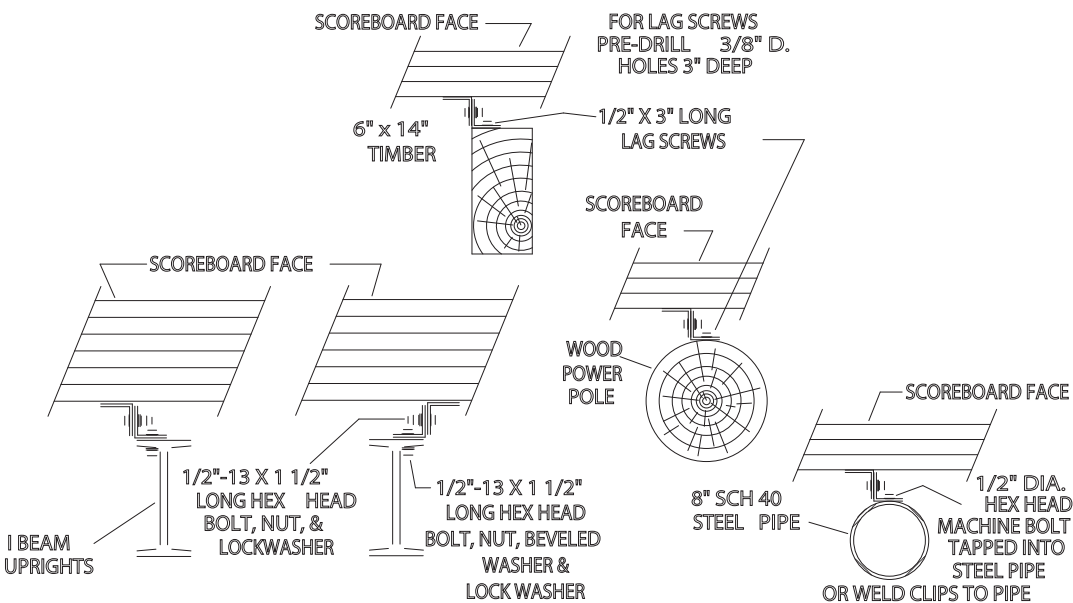

FRONT VIEW MOUNTING DETAIL

INSTALLATION DRAWING

6.9 Installation Drawing

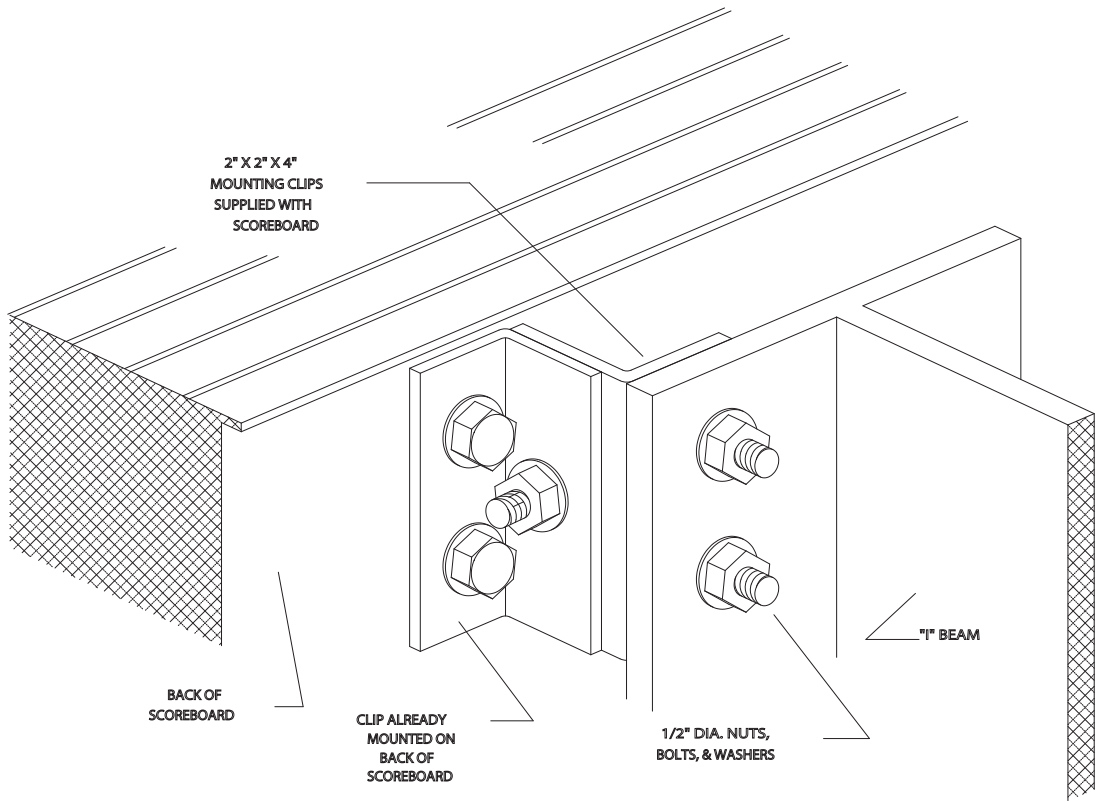

INSTALLATION DRAWING