



OPERATING INSTRUCTIONS AND SERVICE MANUAL

MODEL MP-3915 TIMER

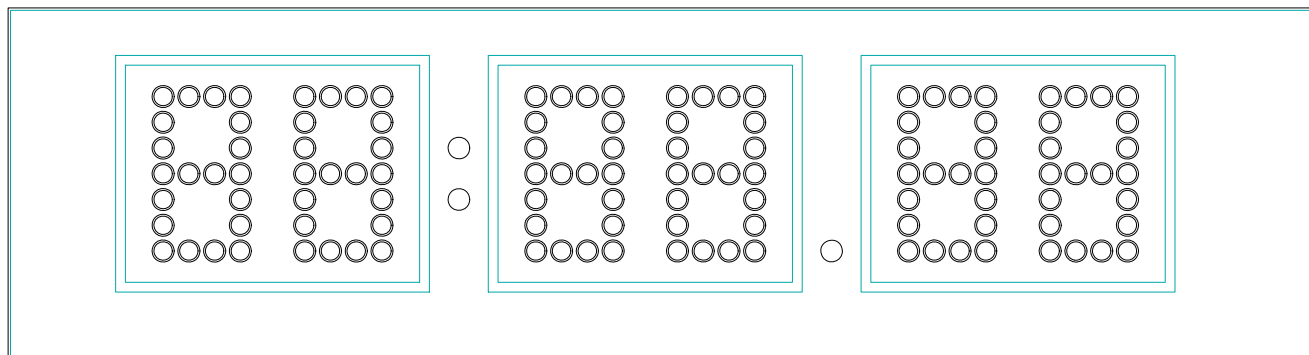


TABLE OF CONTENTS

1 General Information

- 1.1 Description
- 1.2 Identification
- 1.3 Damage
- 1.4 Damage Claim Procedure

2 Installation

- 2.1 General Information
- 2.2 Mounting
- 2.3 Data Cable Installation
- 2.4 Electrical Connection

3 Control Console Operation

- 3.1 Timer Power
- 3.2 Control Console Power
- 3.3 Control Console Display
- 3.4 Time Setting and Control
- 3.5 Direction Arrow

4 Maintenance and Troubleshooting

- 4.1 Introduction
- 4.2 Test Equipment
- 4.3 Troubleshooting
- 4.4 Troubleshooting Guide

5 Replacement Parts List

- 5.1 Timer Parts
- 5.2 Controller Assembly

6 Diagrams

- 6.1 Control Console Keyboard Layout (Slipsheet)
- 6.2 Scoreboard System Layout
- 6.3 Wall Junction Box Wiring (B-121273)
- 6.4 Controller Assembly Wiring and Layout
- 6.5 Microprocessor 4 x 7 Lamp Pattern (8 Bit)
- 6.6 Figuregram Wiring Diagram
- 6.7 Jumper Location on 3 Position Driver
- 6.8 Triac Placement Diagram
- 6.9 Installation Drawings

1. GENERAL INFORMATION

1.1 DESCRIPTION

Your All-American scoreboard has been carefully inspected and tested before leaving the factory. It is possible, however, that components may be loosened or forced out of adjustment in transit. If this occurs, follow the troubleshooting guide (section 4). If equipment then fails to operate, contact immediately:

ALL-AMERICAN Service Department
EVERBRITE LLC
P.O. Box 100
Pardeeville, WI 53954
Telephone: (608) 429-2121
Toll Free: 800-356-8146
E-mail: score@everbrite.com

Parts being returned for repair are to be sent to:

ALL-AMERICAN Service Department
EVERBRITE LLC
401 S. Main Street
Pardeeville, WI 53954

NOTE

If you need to send parts in for repair, please call the ALL AMERICAN service department for a returned goods authorization (RGA) number.

1.2 Identification

ALL-AMERICAN uses a 5 digit serial number for scoreboard identification. The serial number tags are located on the back of the control console and the lower right hand corner on the face of the scoreboard display. When contacting the factory for assistance it is important that the model number and serial numbers are known.

1.3 Damage

Upon receipt, check for visible damage. If this occurs, or if damage is found after shipment has been accepted, follow the damage claim procedure.

1.4 Damage Claim Procedure

An instruction sheet is enclosed advising the consignee in case of damage in transit. If damage is noted at the time of delivery, consignee must obtain an 'Inspection of Bad Order' from the delivering carrier. In order to process your claim, this must be properly filled out with a complete statement of all damage and it must be signed by the carrier.

If damage is discovered after delivery, you should call the delivery company. Have them make out a Concealed Damage Report. Fifteen days after delivery are allowed, so this should be done promptly or it is impossible to process this claim.

Advise EVERBRITE corporation of necessary replacement parts, or repairs. Consignee will be invoiced and then should file a claim with the carrier to recover charges. To file your claim follow this procedure:

- (A) Cost of replacement parts or repair charges are invoiced to the carrier by the consignee.
- (B) The following documents, properly filled out, plus invoice, are forwarded to the trucking company in support of your claim:
 - (a) Original bill of lading
 - (b) Original paid freight bill
 - (c) Certified copy of original invoice
 - (d) Standard form for presentation of loss and damage claim

2. INSTALLATION

2.1 General Information

Shipping papers accompany each scoreboard. Check carefully to see that you receive the following:

- 1 ea Timer Display
- 1 ea Control Console (with 20' cable)
- 1 ea Service Manual
- 1 ea Wall Junction Box
- ? ft MP-41 Control Cable (if ordered)

IMPORTANT!

The MP-40 cable supplied by ALL AMERICAN SCOREBOARDS for use on the Microprocessor based timers is specifically designed for this system. Use of a substitute cable may void the warranty on the scoreboard!

2.2 Mounting

For permanent mounting, see the enclosed installation drawing in Section 6.

2.3 Data Cable Installation

The MP-40 data cable carries only low voltage signals and therefore can be installed with or without conduit. Consult Section 6 for junction box and scoreboard wiring.

2.4 Electrical connections

The MP-3915 timers require a 120 VAC, 15 AMP circuit.

IMPORTANT !!!

To protect the MP-2002 control from damage, it is advisable to disconnect the control and store in a dry secure area when not in use.

NOTE

This equipment complies with the requirements in part 15 of the FCC rules for a class A computing device. Operation of this equipment in a residential area may cause unacceptable interference to radio and television reception, requiring the operator to take whatever steps are necessary to correct the interference.

3. CONTROL CONSOLE OPERATION

3.1 Scoreboard Power

Turn on the branch circuits to the scoreboard. The Home and Guest scores will show "0".

3.2 Console Display

The 2 line by 20 character Liquid Crystal Display module displays the scoreboard information entered from the keyboard. The following information is displayed continuously: Time, Home and Guest scores, Yards To Go, Ball On, Down, Quarter, Time Outs Left, and Auto Horn Enable.

3.3 Console Power

Plug the control console cable into the Press Box junction box.

Push **ON/OFF** once to turn the console on.

Push **ON/OFF** a second time to shut the console off.

When first turned on; the console display should show as follows:

SCOREBOARD CONTROL
MP-3418 V 1.11

3.4 Initializing Scoreboard

Enter the two digit code (82) shown in the lower left corner of the keyboard as in the following

example:

Push **CODE** **8** **2** **ENTER** .

When the proper code has been entered, the console display will show as follows.

0 ^ 00.00 0
L P E00 H0

The scoreboard display will now show :00 in the time section.

3.5 Time Setting and Control

To set a 15 minute period, key in the following: **SET** **1** **5** **0** **0** **0** **0** **ENTER** .

Any time up to 99:59.00 may be preset in a similar manner.

The **UP/DN** key determines the timer mode. When in the UP mode an arrow up symbol is displayed next to the time on the LCD display. If in the DOWN mode there is no arrow displayed.

Switching the time toggle switch to the IN and OUT position, starts and stops the timer.

Push **RESET** to return the timer to the previously set value.

3.6 Team Scores

The Home and Guest Scores can be changed in three different ways.

(A) To add 1 to the existing score: Push **+1** .

(B) To directly enter or correct a score: Push Home or Guest **SCORE** , followed by the desired number, then **ENTER** .

Example: Present Home Score is 15. Change the score from 15 to 23.

Push: Home **SCORE** **2** **3** **ENTER** .

(C) To clear the score: Push **SCORE** **CLEAR** .

3.7 Horn (Optional)

The horn will blow for 1/2 second each time **HORN** is pressed.

The horn will blow automatically at the end of each period for 1/2 second.

3.8 Dimmer

Push **DIMMER** to dim the lamps during night use.

3.9 Track Operation

For track operation, use code 82. The timer will now count up from zero and the 1/10, and 1/100 second digits will now display. The tenth second digit will display while the timer is running, but the 1/100 and 1/1000 seconds will only display when the timer is stopped.

When in the track mode, the console LCD will display two timers. If you want to know the split times push **SPLIT**. The bottom timer will stop so that you can read the time.

Now if you push **RESUME** the timer will show what the top timer shows, and resume timing.

WARNING

120 VAC wires are exposed whenever the cover over the controller assembly is removed from the scoreboard. Use extreme caution during troubleshooting or repair. To avoid possible damage to equipment or personal injury, always turn off the main power before removing the cover or replacing assemblies, or replacing lamps.

4. MAINTENANCE AND TROUBLESHOOTING

4.1 Introduction

This section gives maintenance and troubleshooting information. Included are troubleshooting guides for typical scoreboard malfunctions. If the cause of a problem cannot be determined, please contact the Customer Service Department.

4.2 Test Equipment

A simple analog or digital voltmeter will be sufficient for all user repairable problems. Printed circuit boards requiring troubleshooting should be returned to the factory.

4.3 Troubleshooting

Whenever possible; follow the troubleshooting guides prior to contacting the Customer Service Department. If a problem not described in the guides exists, contact the customer service department immediately. Refer to the diagrams provided for assistance in troubleshooting scoreboard malfunctions.

4.4 Troubleshooting Guides

(A) Timers don't light and console doesn't work

- (a) Check that the main power switch is turned on.
- (b) Replace any defective or blown fuses.
- (c) Check the power connections and voltages at the timers.
- (d) If the timer still doesn't light, check the transformer voltage going to pins 5 & 6 of the data input connector using a voltmeter set on the 12 VAC or higher scale.

If the voltage is less than 8 VAC contact the Customer Service Department.

If the voltage is between 8-12 VAC check the voltage again at the control console end of the cable.

If the voltage is less than 8 VAC check the cables and connectors.

If the voltage is between 8-12 VAC see the replacement parts list for a control or transmitter PCB assembly, and contact the Customer Service Department.

(B) Timer digits don't light, but the console works

- (a) With the main power switch "off"; remove the cover over the controller assembly.
- (b) Check all connections.
- (c) Turn the main power "on".
- (d) If the scoreboard still doesn't light, check the transformer voltage going to the receiver PCB (printed circuit board) assembly (blue wires) using a voltmeter set on the 12 VAC or higher scale.

If the voltage is less than 8 VAC contact the Customer Service Department.

If the voltage is between 8-12 VAC see the replacement parts list for a receiver PCB assembly, and contact the Customer Service Department.

(C) The timer digits light but the console doesn't work

- (a) Check for continuity between the timer and the junction box.
- (b) If an open circuit is found, the problem is either the cable or a cable connection.
- (c) If the continuity test checks good, check the voltage between the blue wire and

the white wire in the junction box, using a voltmeter set on the 12 VAC or higher scale.

If the voltage is 0 VAC, see the controller parts list for a transformer assembly.

If the voltage is less than 8 VAC, consult the controller wiring diagram for instructions on long cable compensation.

If the voltage is between 8 VAC and 12 VAC, consult the parts list for a control console and contact the Customer Service Department.

(D) The timer digits light, the console works, but there is no control of the timer.

- (a) Check the voltage between the black and green wires in the junction box with a voltmeter set on the 3 VDC or higher scale. The voltage should read somewhere between 2-3 VDC when the console is working properly.
- (b) If the voltage is 0 VDC contact the Customer Service Department for assistance.
- (c) If the voltage is correct, (2-3 VDC) check that this reading also appears at the timer.
- (d) If the correct voltage also appears at the timer, see the replacement parts list for a receiver PCB assembly.

(E) The timer works, but some lights stay on all the time

- (a) With the main power "OFF", switch the plug from the bad digit with the plug for a known good digit.

EXAMPLE: Plug "C" into "D" and "D" into "C" locations.

- (b) Turn the power back on. If the same lamps remain lit all the time, the problem is a shorted lamp socket. If the lamps on a different digit now stay lit all the time, the problem is on the driver PCB assembly. See the replacement parts list for the proper replacement part.

(F) The timer works, but some lights do not come on.

- (a) Check for burned out lamps.
- (b) Check for a broken wire or bad connection on the 12 pin connector.
- (c) See the replacement parts list for the proper replacement driver board.

IMPORTANT !!!

In this scoreboard the 120 volt line is on the lamp socket all the time, and the common is switched to turn the lamps on and off. For this reason, to avoid damage to the equipment or personal injury, it is important to turn the main power off when changing the lamps.

5. REPLACEMENT PARTS LIST

5.1 Scoreboard Display Parts

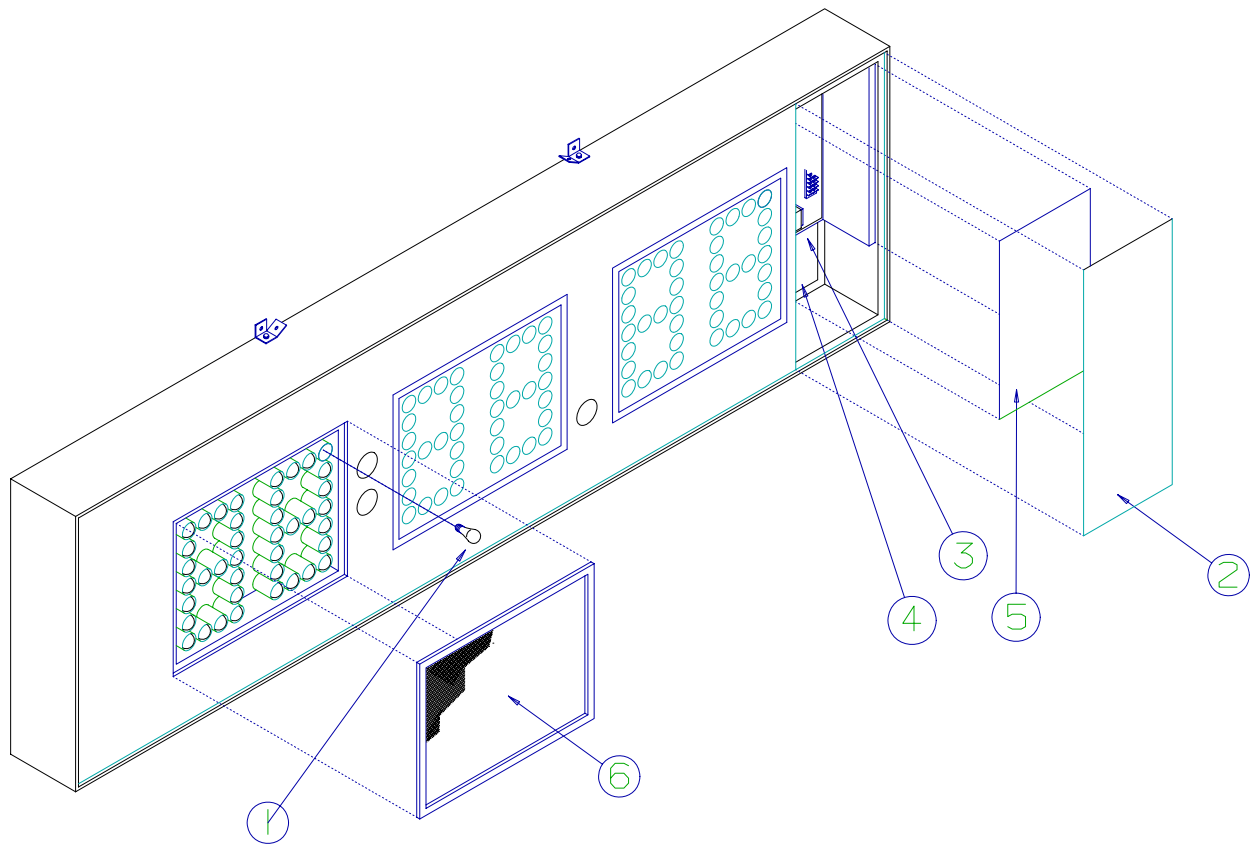


figure 1

DISPLAY ASSEMBLY

REPLACEMENT PARTS LIST (MP-3915 Timer)

fig.& index	MFG PART NUMBER	DESCRIPTION	REF DES	VENDOR PART #
1- 1-1 1-2	000000 850022 000000	Display Assy, MP-3915 Lamp, 15W/130V clear Service Door		000000 15A15 CLEAR 000000
1-3	150002	Controller Assembly, W/2 3Pos.Drvr *****SEE DETAIL FIGURE 2*****	A2	150002
1-4 1-4A 1-5 1-6 1-7	SU00038 121880 000000 000000 EL044100	Fuse Box Assy, Fuse, 15A 250V Rain Shield Cover, Screen, Resistor, 2 OHM 30 WATT Wire Wound	F1/F2	SU00038 ABC-15 000000 000000 HL-24-09Z
	SU4450X HB005500 HB002300X SW005100 702785 EL053000 HB002400 WH009100 122763	Control Console, with Radio Crystal ***** PROGRAM MP3418TR V1.11 ***** Slipsheet Pair Transmitter PCB Assembly, with radio crystal Toggle Switch, Connector, 5 Pin Male Cable LCD Display, 2 Line 20 Character Keyboard Assembly, Ribbon Cable Assembly, 14C 8" Enclosure,	A1 S1 P1	SU4450 HB005500 HB002300 SW005100 RM12BPG5P HB002400 WH009100
	151002 702786 701137 150500	Junction Box, Single Press Box Connector, 5 Pin Female BM Terminal Block, 7C Cable, MP-41 Control	J1	151002 RM12BRD-5S 670-7 Kulka 8723 Belden

5.2 Scoreboard Controller Assembly Parts

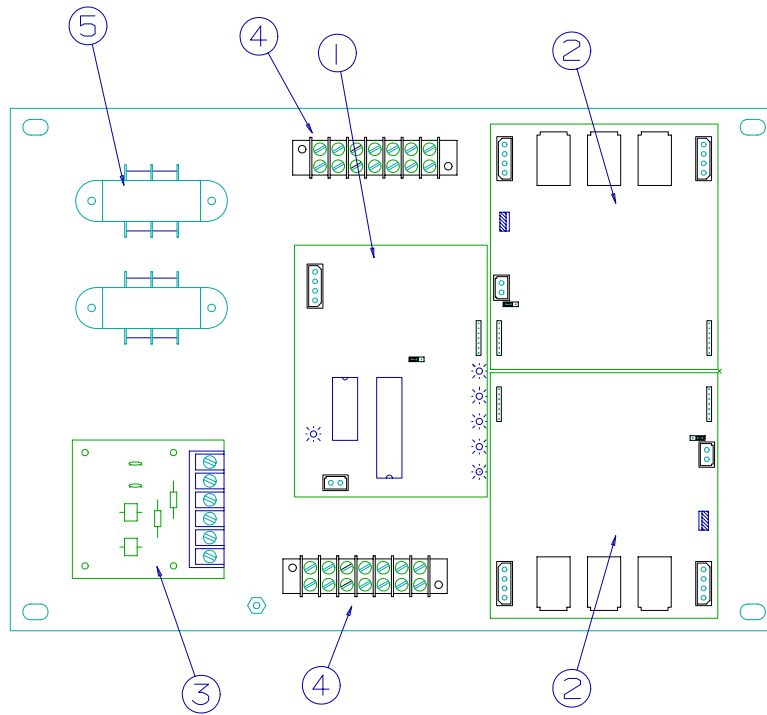



figure 2

CONTROLLER ASSEMBLY

REPLACEMENT PARTS LIST (MP-3915) Controller Assembly				
fig.& index	MFG PART NUMBER	DESCRIPTION	REF DES	VENDOR PART #
2-	150002X	Controller Assembly, with radio crystal	A2	150002
2-1	119323X	Receiver PCB Assembly with Radio Crystal *** PROGRAM RX 3915 V1.00 ***	A3	119323
2-2	118922	Driver PCB Assembly	A4/A5	118922
2-2A	930674	Cable Assy, 3" ribbon (Panduit)		CE100F22-7
2-3	118522	Transient Suppressor PCB Assembly	A12	118522
2-4	701137	Terminal Block, 7C	TB1&2	670-7
2-5	703719	Transformer, 8V/18V	T1/T2	CS-697
2-6	705723	Spacer, P.C. Board		LCBS-6-01


6. DIAGRAMS

6.1 Control Console Keyboard and Slipsheet Layout

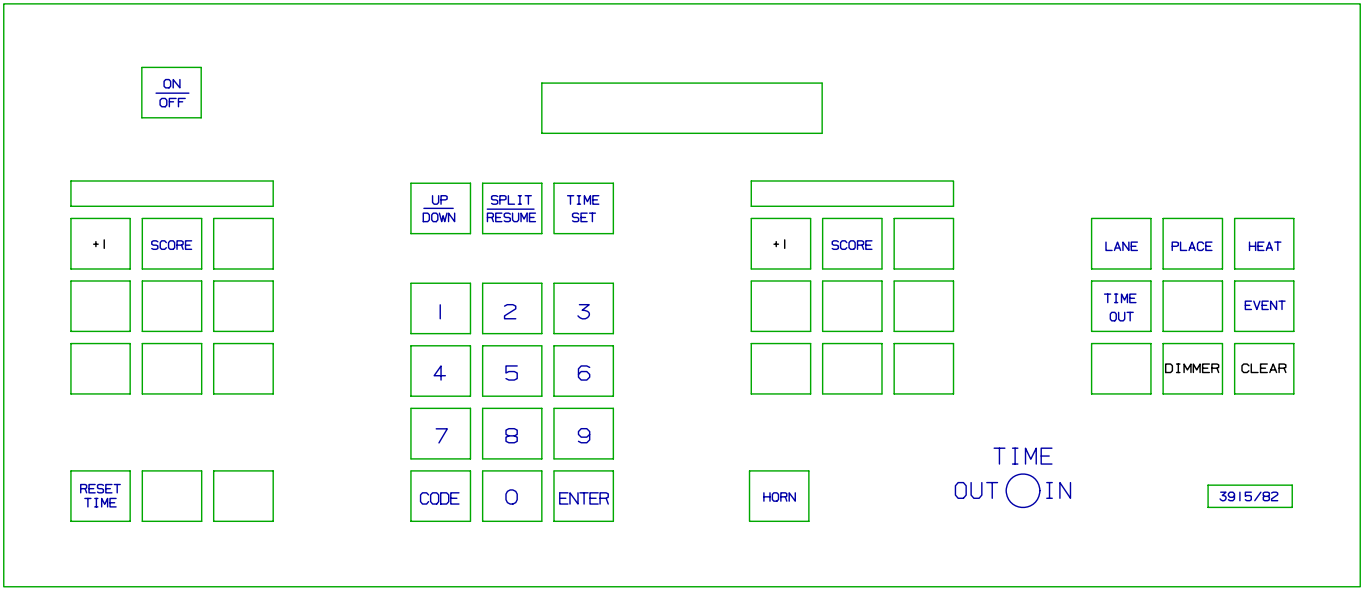


CONSOLE KEYBOARD

6.2 Scoreboard System Layout

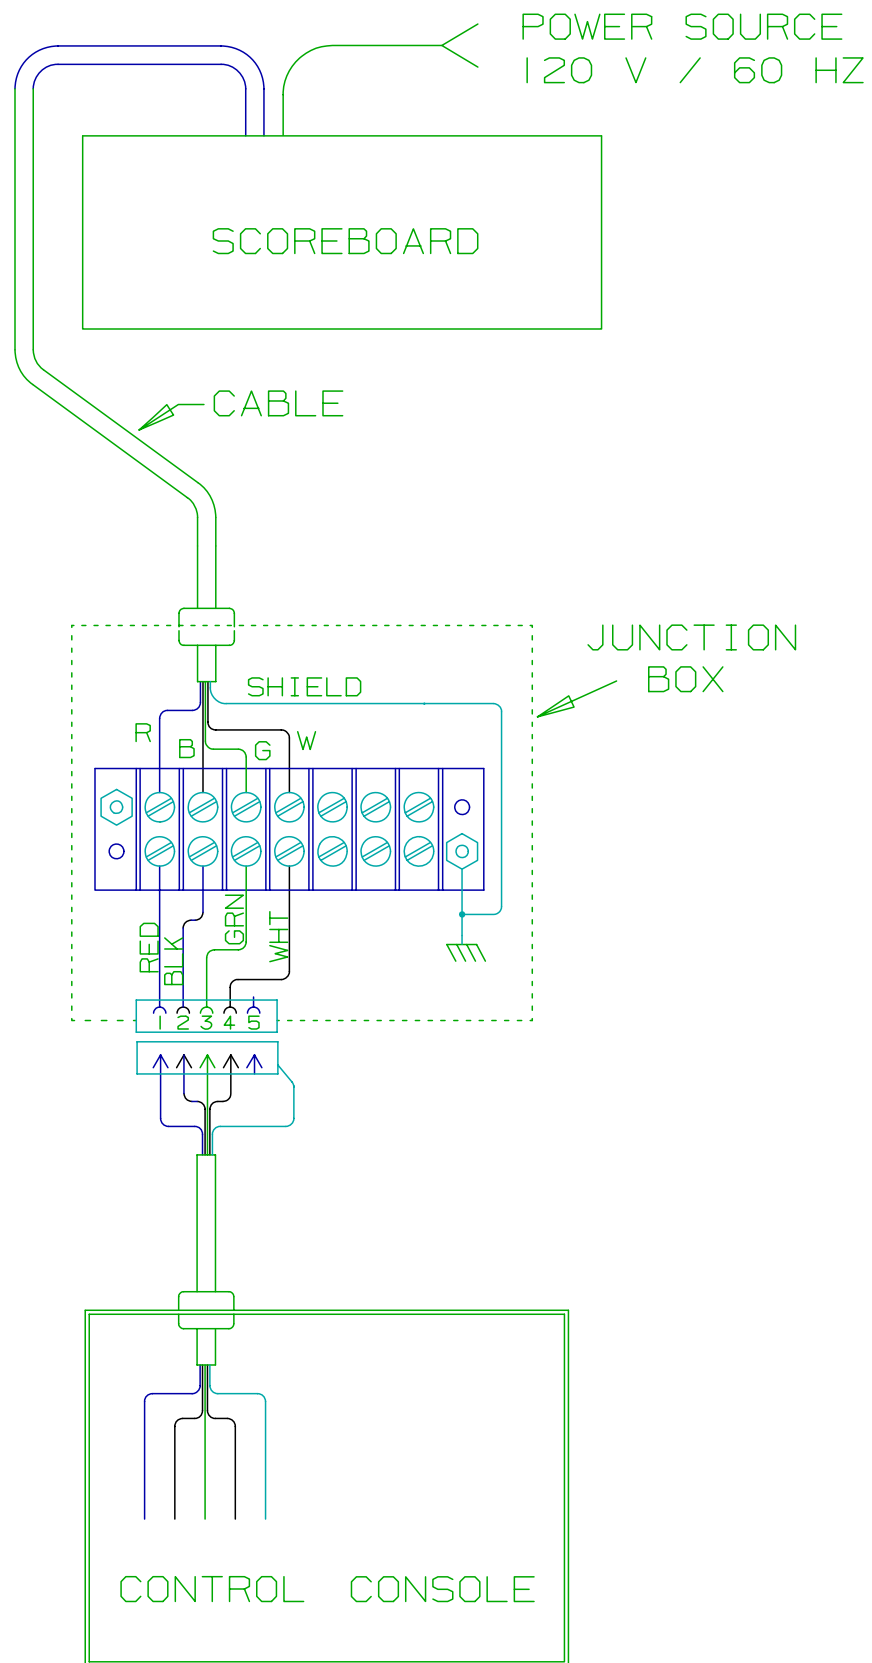


SYSTEM LAYOUT

6.3 Single Junction Box Wiring

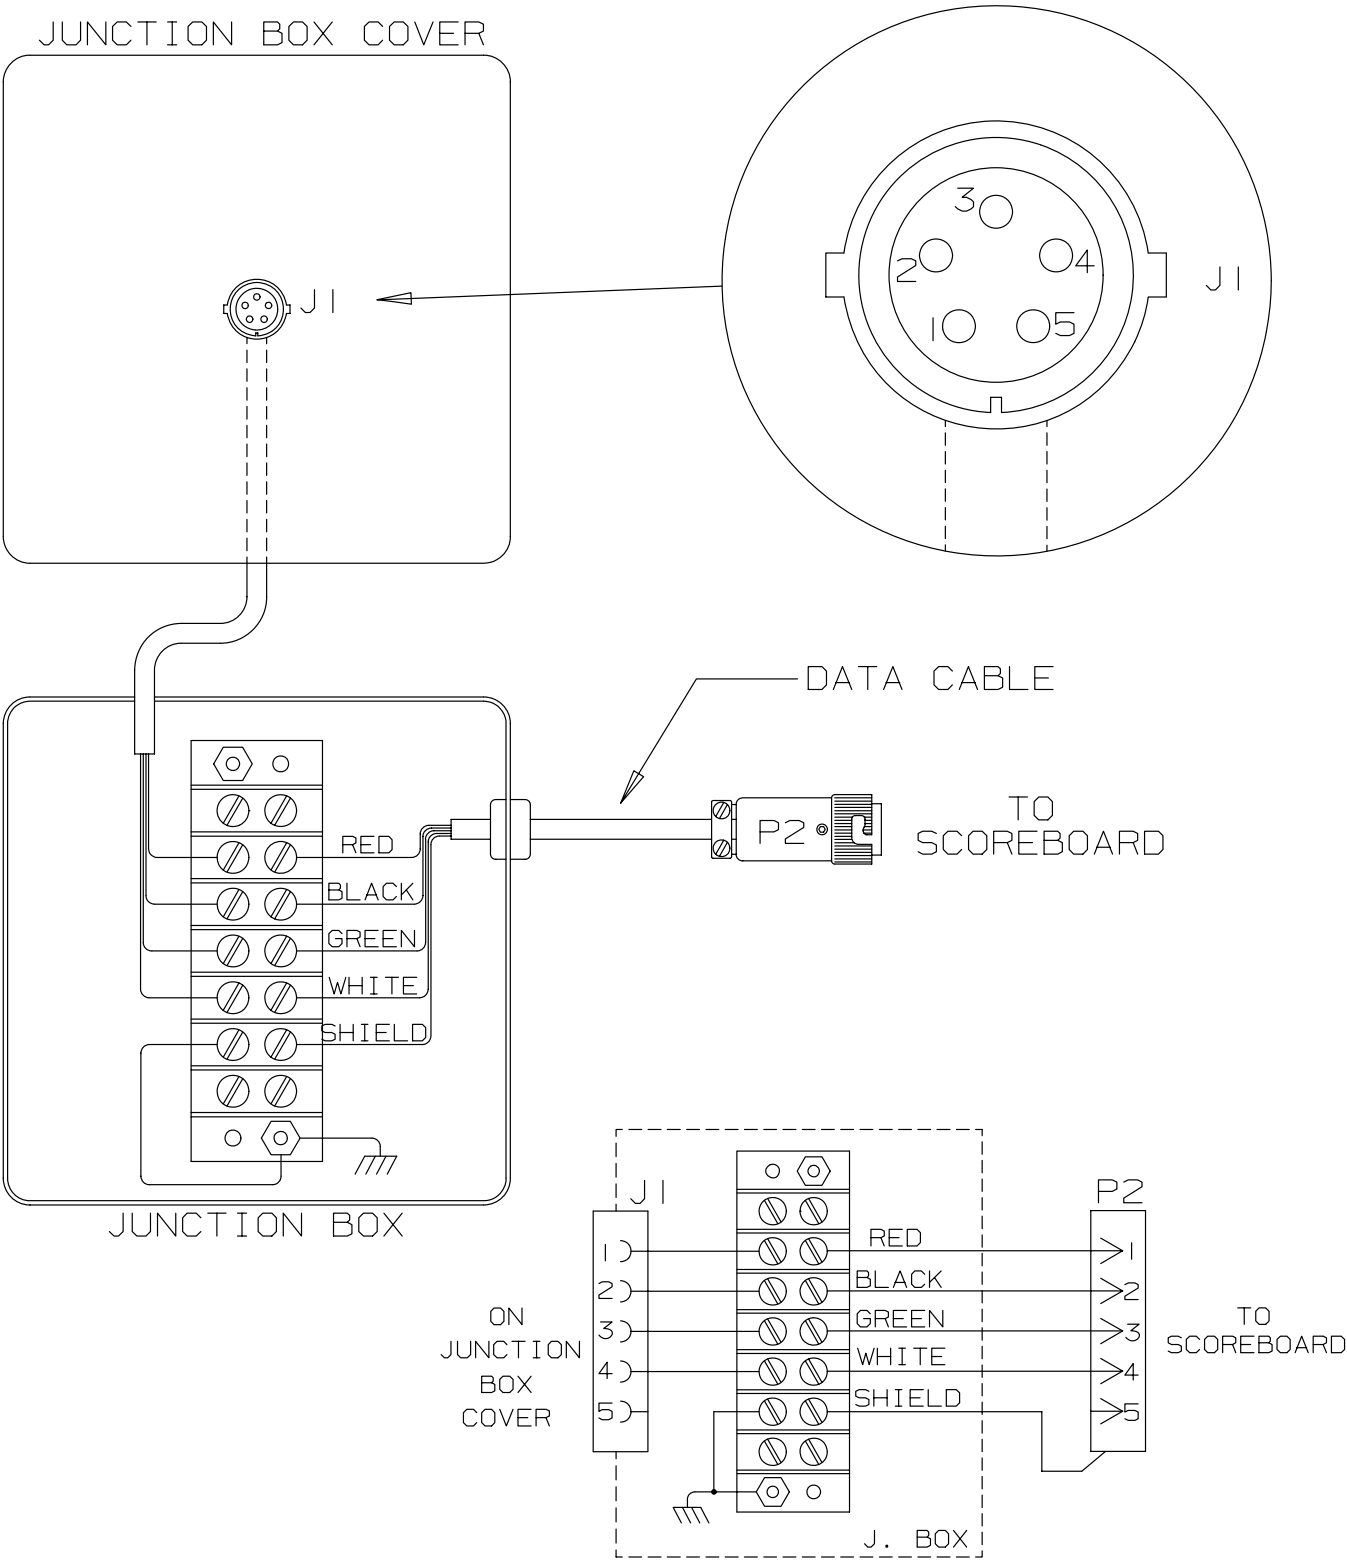



SINGLE JUNCTION BOX WIRING

6.4 Controller Assembly Wiring

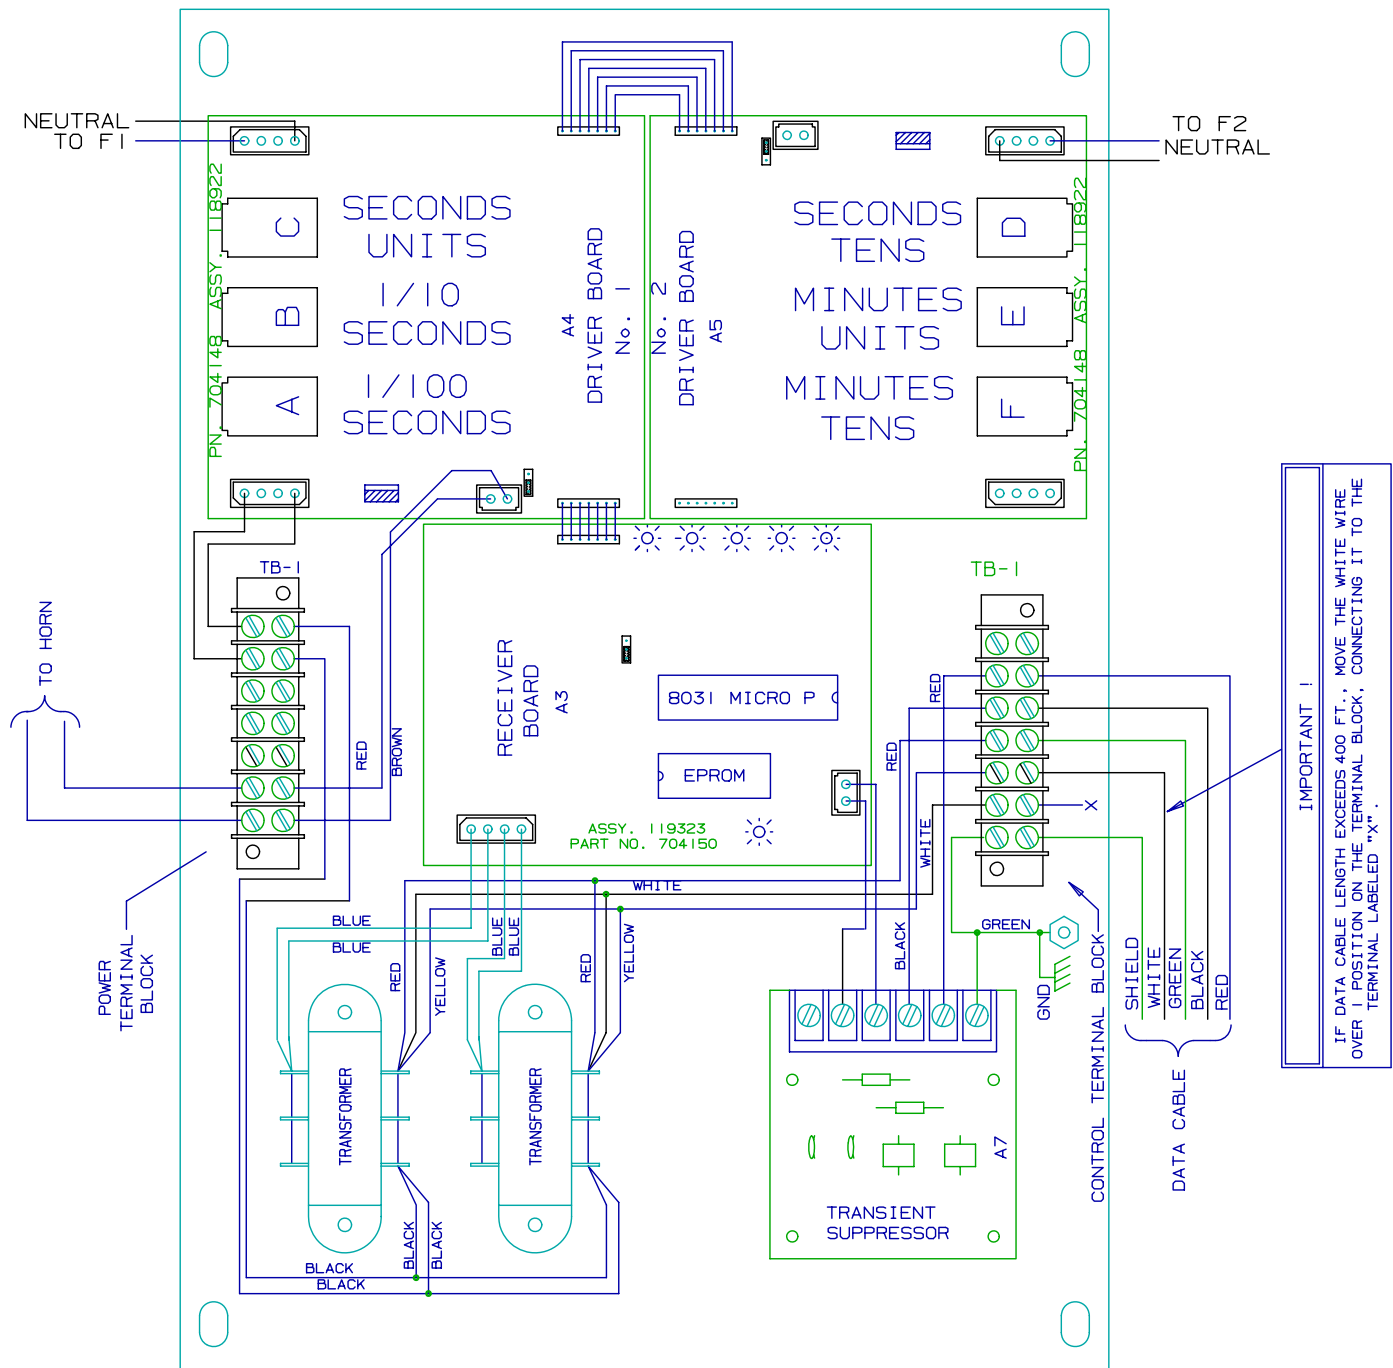

CONTROLLER ASSEMBLY


6.5 Microprocessor 4 X 7 Lamp Pattern

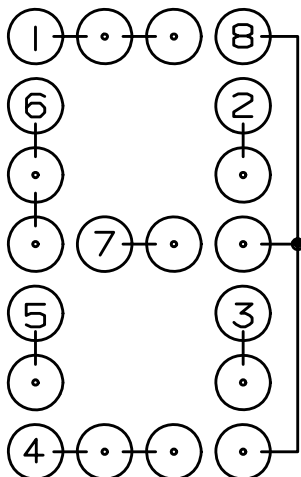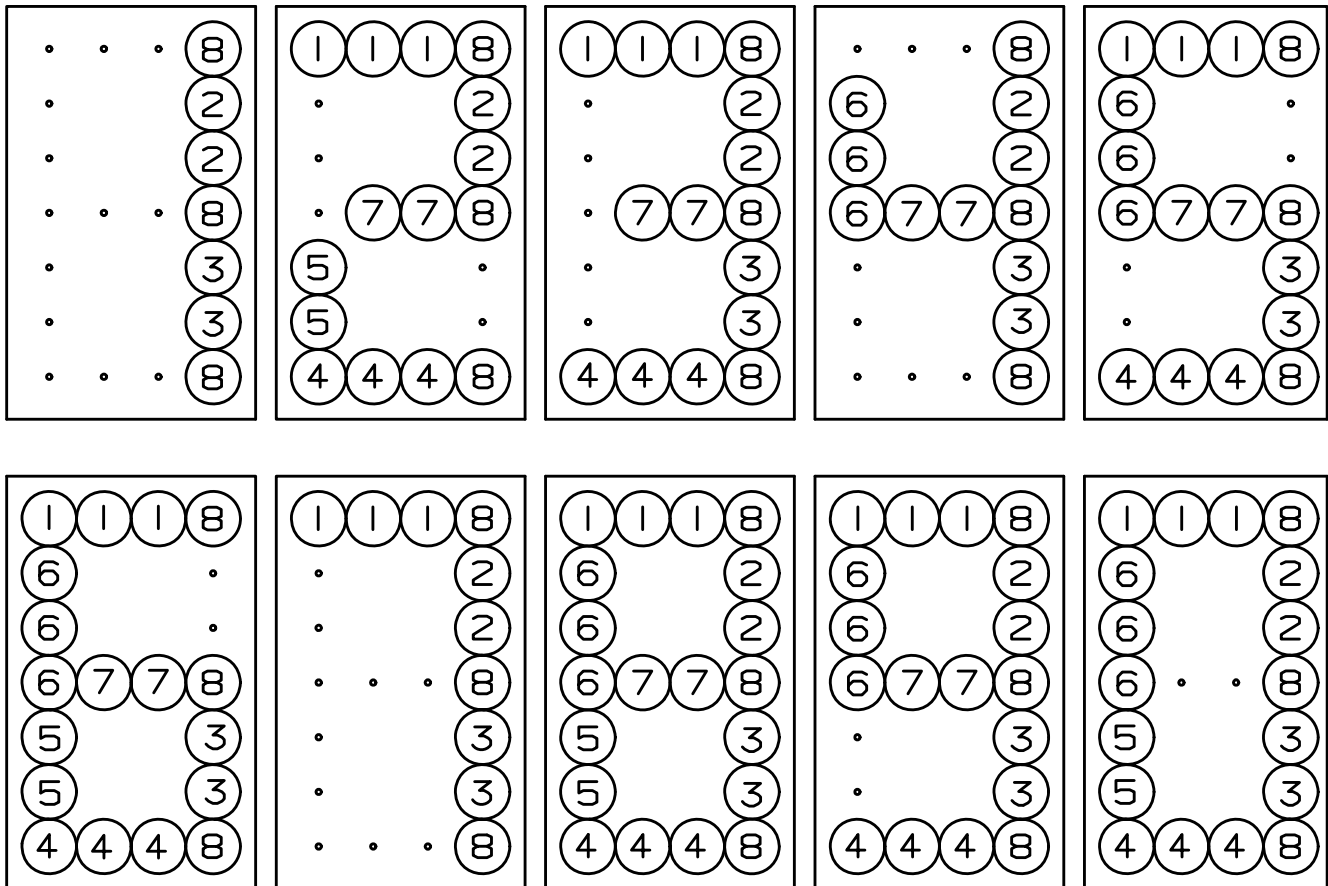

		NUMERALS									
		0	1	2	3	4	5	6	7	8	9
BIT NUMBERS	1	0	.	2	3	.	5	6	7	8	9
	2	0	1	2	3	4	.	.	7	8	9
	3	0	1	.	3	4	5	6	7	8	9
	4	0	.	2	3	.	5	6	.	8	9
	5	0	.	2	.	.	.	6	.	8	.
	6	0	.	.	.	4	5	6	.	8	9
	7	.	.	2	3	4	5	6	.	8	9
	8	0	1	2	3	4	5	6	7	8	9

MICROPROCESSOR 4 X 7 (8 BIT) LAMP PATTERN

6.6 Figuregram Wiring

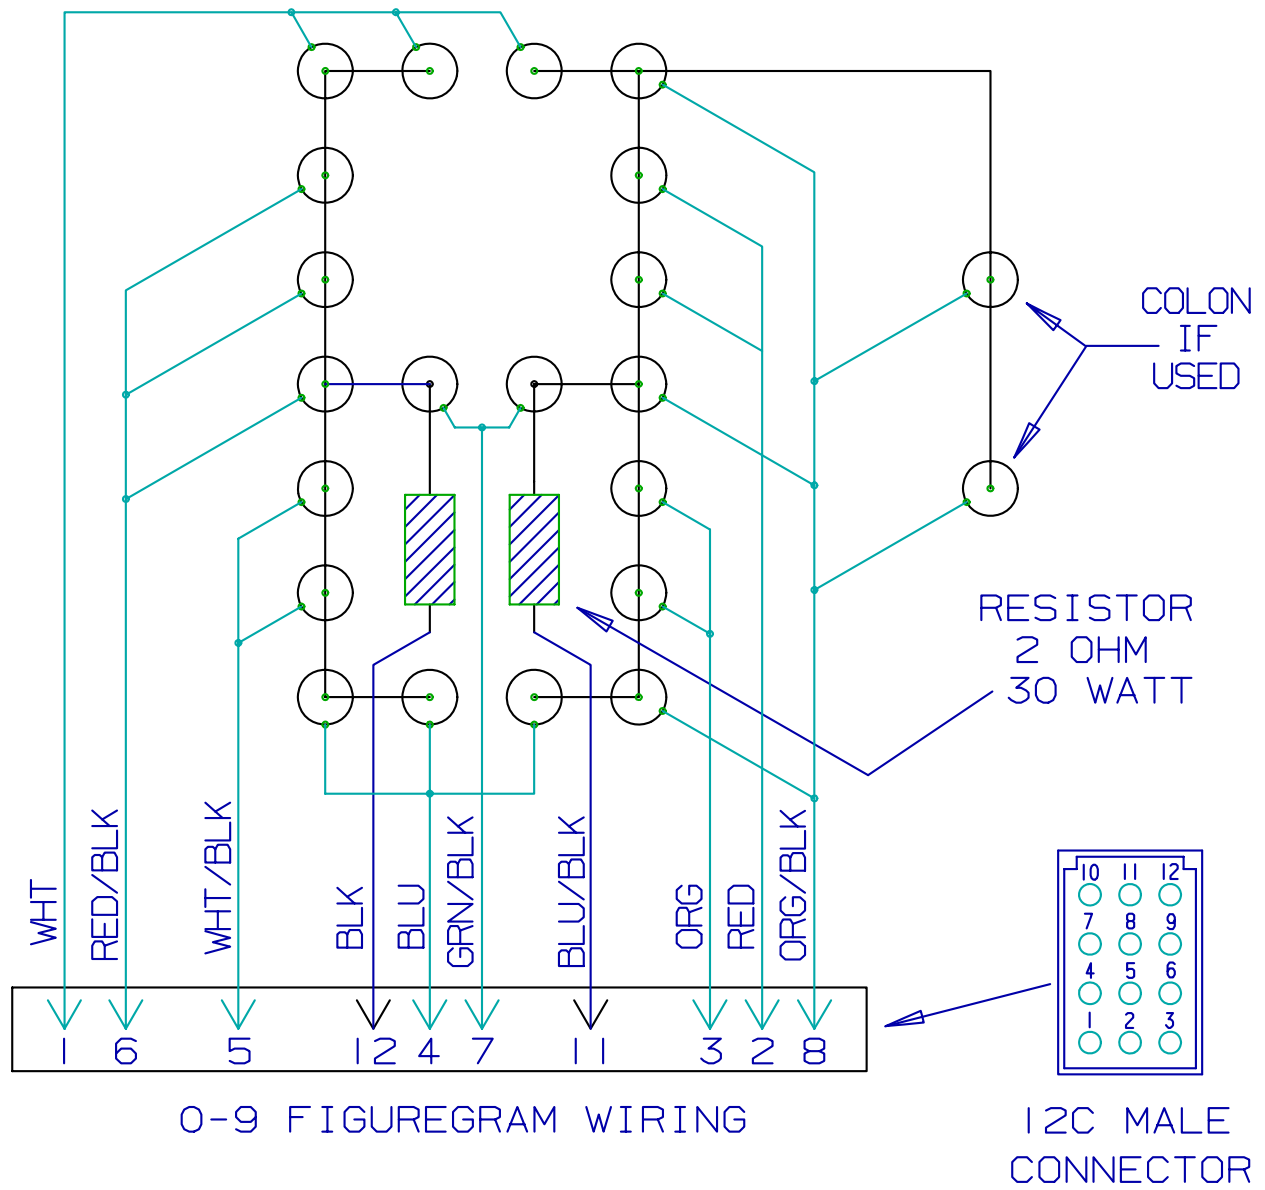

FIGUREGRAM WIRING

6.7 Jumper Location on 3 Position System

All of the 3 position drivers and receivers are identical except for the jumper on each board. Make sure the jumpers are set for the model of scoreboard you are installing them into.

- (A) On the receiver board (refer to figure); Jumper pins 2 & 3 for models MP-3385, MP-3312, MP-3529, and MP-3549. Jumper pins 1 & 2 for all other models.
- (B) On the driver board (refer to figure); Jumper pins 1 & 2 for use of a horn. Jumper pins 2 & 3 for all others.

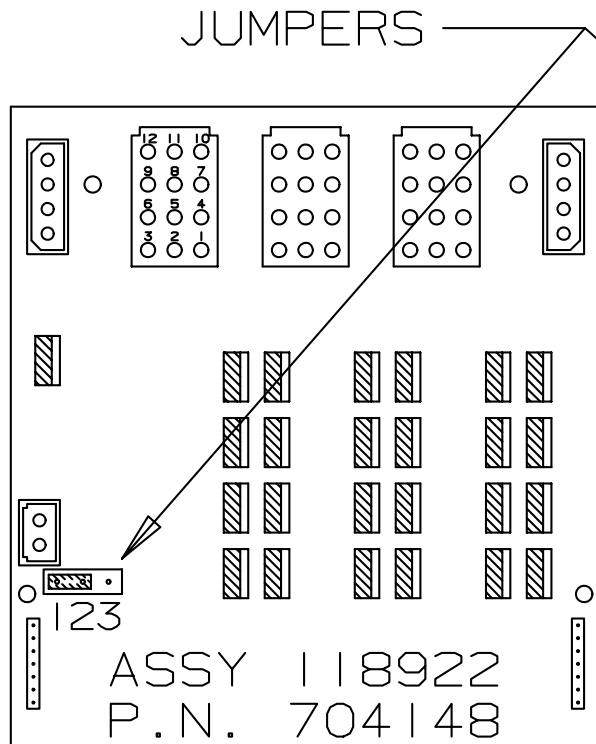


FIGURE A


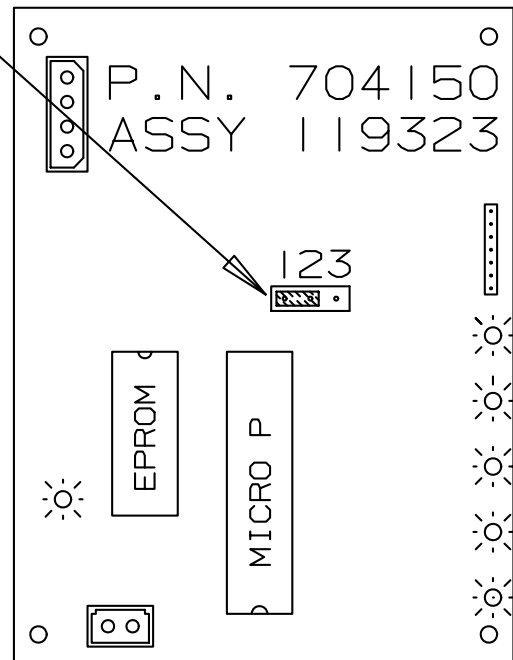


FIGURE B

JUMPER LOCATION

6.8 Triac Placement

The triac is the switch that controls the figuregram lamps. The triacs for any given figuregram are adjacent to the twelve pin connector on the driver board that controls that figuregram. Shown below is the triac placement and bit designation relative to the figuregram bit pattern.

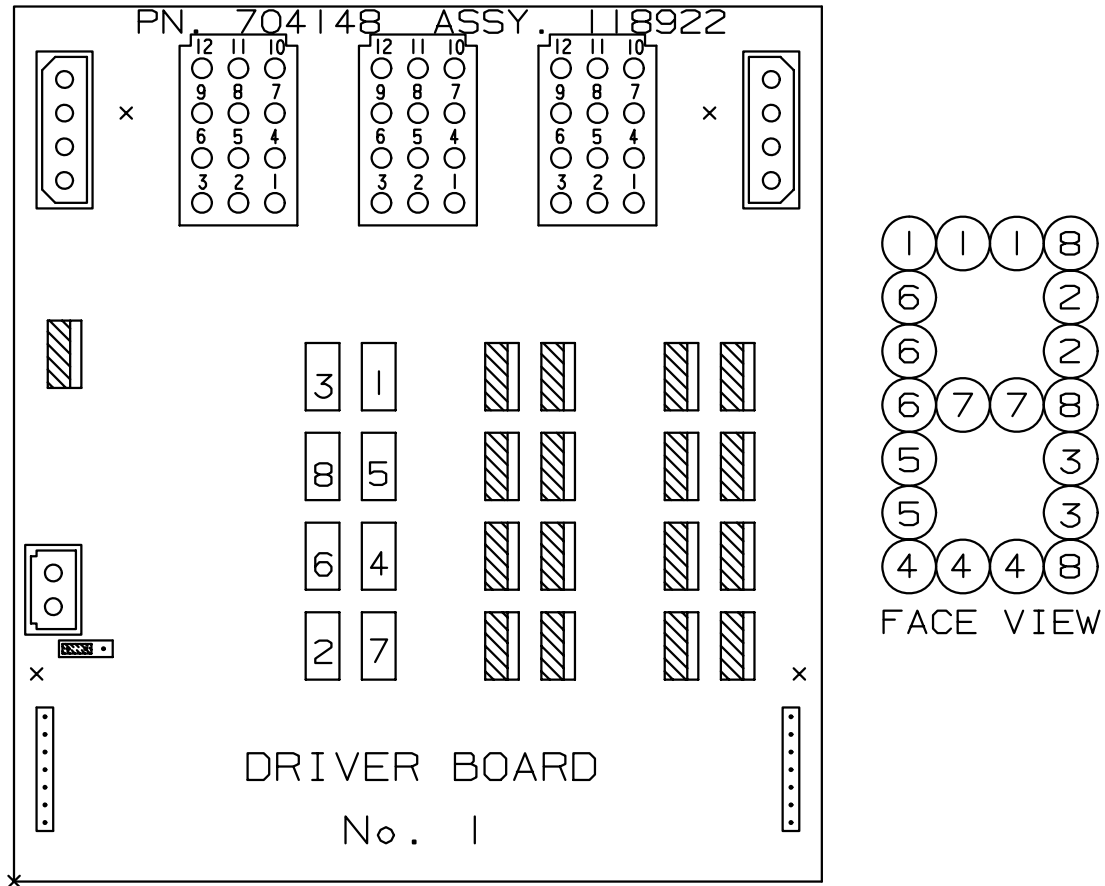

MP TRIAC PLACEMENT

6.9 Installation Drawing

