




A product of **Everbrite**

401 S Main St  
Pardeeville, WI 53954  
(608) 429-2121 / (800) 356-8146

OPERATING INSTRUCTIONS AND SERVICE MANUAL

BASKETBALL SCOREBOARD

MODEL MP-2206 WITH MP-3000 CONTROL

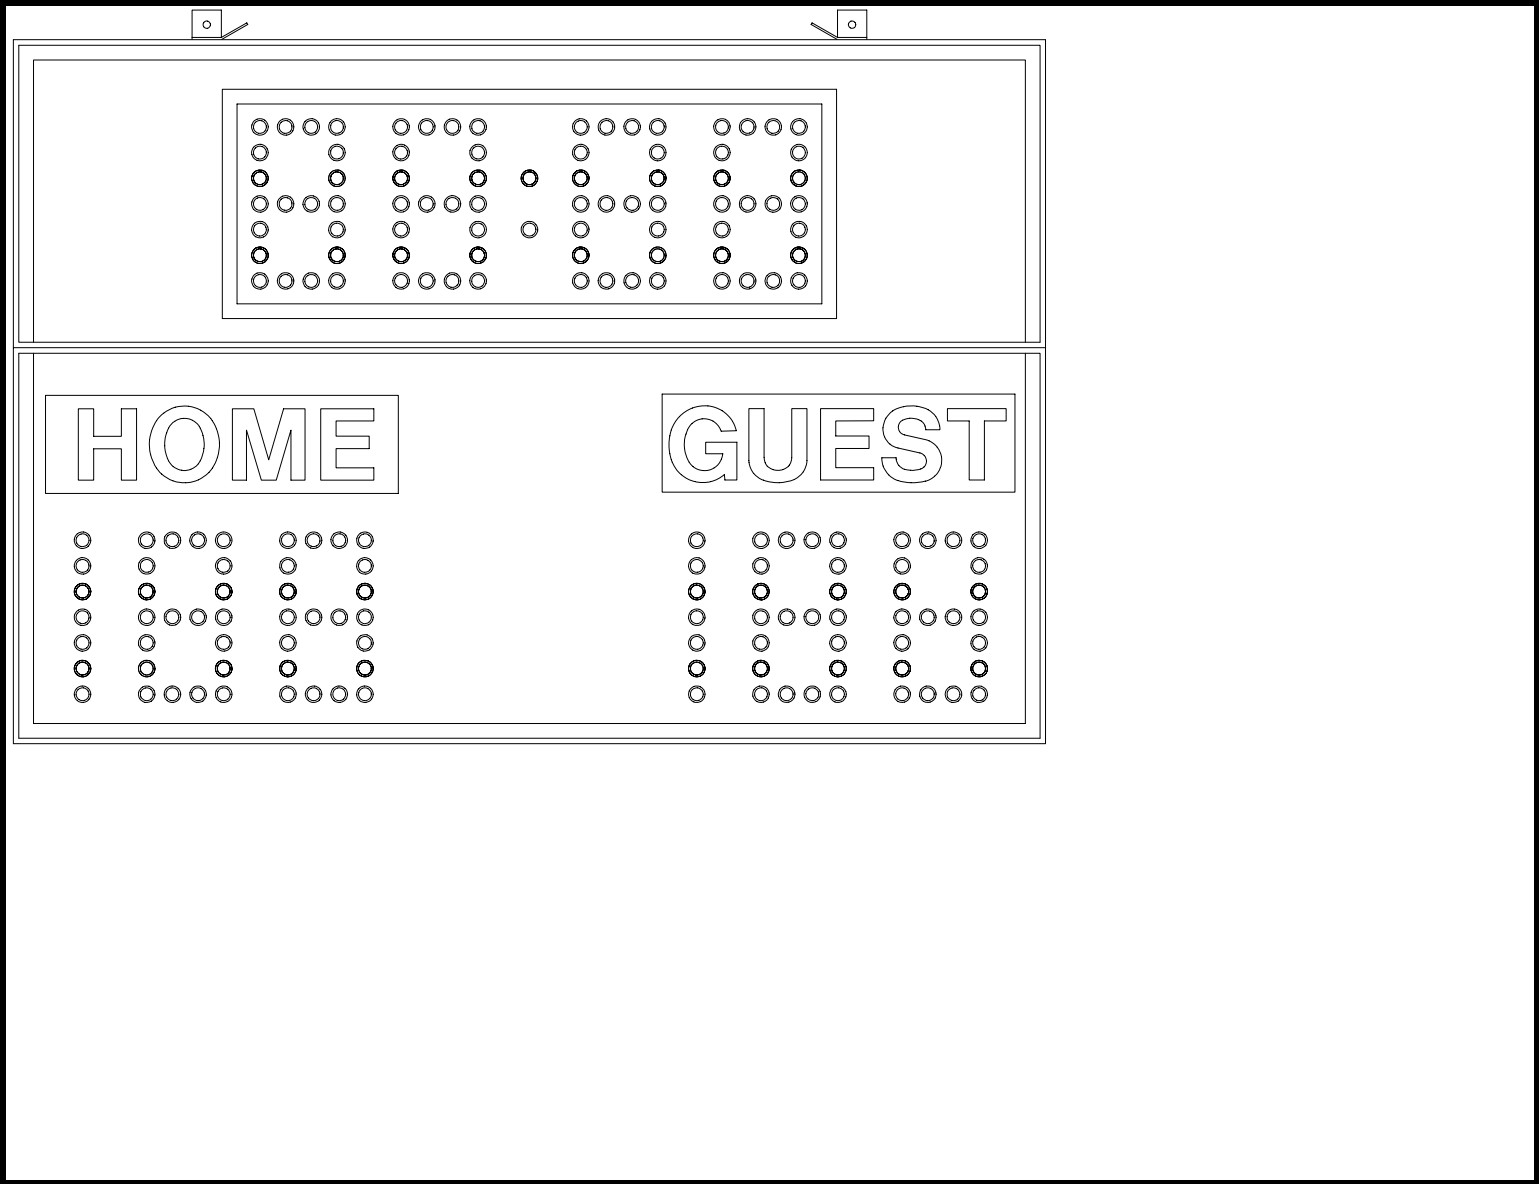

# TABLE OF CONTENTS

## 1. GENERAL INFORMATION

- 1.1 DESCRIPTION
- 1.2 IDENTIFICATION
- 1.3 DAMAGE
- 1.4 DAMAGE CLAIM PROCEDURE

## 2. INSTALLATION

- 2.1 GENERAL INFORMATION
- 2.2 INSPECTION
- 2.3 PRE-TEST
- 2.4 DATA CABLE INSTALLATION
- 2.5 ELECTRICAL CONNECTIONS

## 3. CONTROL CONSOLE OPERATION

- 3.1 SCOREBOARD POWER
- 3.2 CONSOLE DISPLAY
- 3.3 CONSOLE POWER
- 3.4 INITIALIZING SCOREBOARD
- 3.5 TIME SETTING AND CONTROL
- 3.6 FINAL MINUTE 1/10 SECOND TIME OPTION
- 3.7 TEAM SCORES
- 3.8 HORN
- 3.9 TIMEOUT PERIOD

## 4. MAINTENANCE AND TROUBLESHOOTING

- 4.1 INTRODUCTION
- 4.2 TEST EQUIPMENT
- 4.3 TROUBLESHOOTING
- 4.4 TROUBLESHOOTING GUIDE

## 5. REPLACEMENT PARTS LIST

- 5.1 SCOREBOARD DISPLAY PARTS
- 5.2 SCOREBOARD CONTROLLER ASSEMBLY PARTS

## 6. DIAGRAMS

- 6.1 CONTROL CONSOLE KEYBOARD AND SLIPSHEET LAYOUT
- 6.2 SCOREBOARD SYSTEM LAYOUT
- 6.3 SINGLE WALL JUNCTION BOX WIRING DIAGRAM (C-12675-2)
- 6.4 DUAL WALL JUNCTION BOX WIRING DIAGRAM (C-12675-3)
- 6.5 CONTROLLER PLATE WIRING AND LAYOUT (D-13202)
- 6.6 LINE FILTER WIRING DIAGRAM (B-151507)
- 6.7 MICROPROCESSOR 4 X 7 LAMP PATTERN (8 BIT)
- 6.8 FIGUREGRAM WIRING DIAGRAM (C-150429)
- 6.9 FIVE POSITION DRIVER BOARD JUMPER LOCATION (B-151285)
- 6.10 TRIAC PLACEMENT DIAGRAM
- 6.11 INSTALLATION DRAWING

## 1. GENERAL INFORMATION

### 1.1 DESCRIPTION

Your All-American scoreboard has been carefully inspected and tested before leaving the factory. It is possible, however, that components may be loosened or forced out of adjustment in transit. If this occurs, follow the troubleshooting guide (section 4). If equipment then fails to operate, contact immediately:

ALL-AMERICAN Service Department  
EVERBRITE Corporation  
P.O. Box 97  
Pardeeville, WI 53954  
Telephone: (608) 429-2121  
Toll Free: 800-356-8146

Parts being returned for repair are to be sent to:

ALL-AMERICAN Service Department  
EVERBRITE Corporation  
401 S. Main Street  
Pardeeville, WI 53954

#### NOTE

If you need to send parts in for repair, please call the ALL AMERICAN service department for a returned goods authorization (RGA) number.

### 1.2 Identification

ALL-AMERICAN uses a 4 or 5 digit serial number for scoreboard identification. The serial number tags are located on the back of the control console and the lower right hand corner on the face of the scoreboard display. When contacting the factory for assistance it is important that the model number and serial number are known.

### 1.3 Damage

Upon receipt, check for visible damage. If this occurs, or if damage is found after shipment has been accepted, follow the damage claim procedure.

## 1.4 Damage Claim Procedure

An instruction sheet is enclosed advising the consignee in case of damage in transit. If damage is noted at the time of delivery, consignee must obtain an 'Inspection of Bad Order' from the delivering carrier. In order to process your claim, this must be properly filled out with a complete statement of all damage and it must be signed by the carrier.

If damage is discovered after delivery, you should call the delivery company. Have them make out a Concealed Damage Report. Fifteen days after delivery are allowed, so this should be done promptly or it is impossible to process this claim.

Advise EVERBRITE corporation of necessary replacement parts, or repairs.

Consignee will be invoiced and then should file a claim with the carrier to recover charges. To file your claim follow this procedure:

- (A) Cost of replacement parts or repair charges are invoiced to the carrier by the consignee.
- (B) The following documents, properly filled out, plus invoice, are forwarded to the trucking company in support of your claim:
  - (a) Original bill of lading
  - (b) Original paid freight bill
  - (c) Certified copy of original invoice
  - (d) Standard form for presentation of loss and damage claim

## 2. INSTALLATION

### 2.1 General Information

Shipping papers accompany each scoreboard. Check carefully to see that you receive the following:

- 1 ea Basketball Display
- 1 ea Control Console
- 1 ea Service Manual
- 1 ea Wall Junction Box
- 1 ea Basketball Horn
- ? ft Control Cable (if ordered)

#### **IMPORTANT!**

The MP-41 cable supplied by ALL AMERICAN SCOREBOARDS for use on the Microprocessor based scoreboards is specifically designed for this system. Use of a substitute cable may void the warranty on the scoreboard!

## 2.2 Inspection

Inspect each unit and tighten all screws, lamps, and fittings that may have loosened in shipment.

### NOTE

A small length of rubber hose may be used as a lamp extractor. Simply taper the inside of the hose with a sharp knife to fit the lamp.

## 2.3 Pre-Test

Before installing the scoreboard, pre-test all functions.

- (A) Connect the scoreboard to a 20 AMP, 120 Volt AC circuit.
- (B) Plug the control console into the top of the scoreboard.
- (C) Test operate all functions on the scoreboard according to operating instructions in section 3 of this manual.
- (D) When all the functions test out, disconnect the power and the control console before hanging the scoreboard.

## 2.4 Data Cable Installation

The MP-41 data cable carries only low voltage signals and therefore can be installed with or without conduit. consult section 6 for junction box and scoreboard wiring.

## 2.5 Electrical connections

This scoreboard requires a 120 V. 15 AMP AC circuit for the exclusive use of the scoreboard.

### NOTE

To protect the MP-3000 control from damage, it is advisable that you disconnect the control and store in a dry secure area when not in use.

### NOTE

This equipment is **ETL** (Electronics Testing Laboratories) **CSA** and **NRTL** approved and complies with the requirements in part 15 of the FCC rules for a class A computing device. Operation of this equipment in a residential area may cause unacceptable interference to radio and television reception, requiring the operator to take whatever steps are necessary to correct the interference.

## 3. CONTROL CONSOLE OPERATION

### 3.1 Scoreboard Power

Turn on the branch circuits to the scoreboard. The Home and Guest scores will show "0", and the timer will show ":00".

### 3.2 Console Display

The 2 line by 20 character Liquid Crystal Display module displays the scoreboard information entered from the keyboard. The following information is displayed during normal operation: Time, Home and Guest scores, Home and Guest Team Fouls, Period, Home and Guest Bonus, Ball Possession, Auto Horn Enable, and 1/10 Second Enable.

### 3.3 Console Power

Plug the control console cable into the wall junction box.

Push **ON/OFF** once to turn the console on.

Push **ON/OFF** a second time to shut the console off.

When first turned on; the console display should show as follows.

SCOREBOARD CONTROL  
1991 VERSION 3.3

### 3.4 To Use Scoreboard

Enter the two digit code (55) shown in the lower right corner of the keyboard as in the following example:

Push **CODE** **5** **5** **ENTER**

When the proper code has been entered, the console display will show as follows.

0	:00	0
0 H		0

### 3.5 Time Setting and Control

To set an 8 minute period, Push: SET 8 0 0 ENTER .

Any time up to 99:59 may be preset in a similar manner.

The UP/DN key determines the timer mode. When in the UP mode an arrow up symbol is displayed next to the time on the LCD display. If in the DOWN mode there is no arrow displayed.

Switching the time toggle switch to the IN and OUT position, starts and stops the timer.

Push RESET to return the timer to the previously set value.

### 3.6 Final Minute 1/10 Second Option

The control console is capable of displaying 1/10 second during the final minute of the period.

Push FINAL MIN 1/10 to enable the scoreboard to display the 1/10 second

during the final minute of the period. A 'T' is displayed on the LCD to indicate this function is enabled.

The scoreboard timer digits shift two positions to the left in the final minute of play and 1/10 seconds are displayed.

Push FINAL MIN 1/10 again to disable this function.

### 3.7 Team Scores

The Home and Guest Scores can be changed in five different ways.

(A) To add 1 to the existing score: Push +1 .

(B) To add 2 to the existing score: Push +2 .

(C) To add 3 to the existing score: Push +3 .

(D) To directly enter or correct a score: Push Home or Guest **SCORE** followed by the desired number, then **ENTER** .

Example: Present Home Score is 15. Change the score from 15 to 23.

Push: Home **SCORE** **2** **3** **ENTER** .

(E) To clear the score: Push **SCORE** **CLEAR** .

### 3.8 Horn

The horn will blow for 1/2 second each time **HORN** is pressed.

The horn will blow automatically at the end of each period for 2 seconds.

The automatic horn function may be disabled by using the **AUTO HORN** key.

An 'H' is displayed on the LCD when this function is enabled.

### 3.9 Timeout Period

An automatic timeout period of 1 minute is provided for "Time Outs" when the main timer is not running.

Push: **TIME OUT TIMER** to start the 1 minute timer. The LCD will show

"TIME OUT = 1:00" and start to count down. When 1 minute has elapsed the internal beeper sounds, and the display returns to the current game time.

If you want to return to play before the Time Out Timer gets back to zero,

push: **CLEAR** and the console will return to play mode.

## 4. MAINTENANCE AND TROUBLESHOOTING

### 4.1 Introduction

This section gives maintenance and troubleshooting information. Included are troubleshooting guides for typical scoreboard malfunctions. If the cause of a problem cannot be determined, please contact the customer service department.

#### WARNING !!!

120 VAC wires are exposed whenever the cover over the controller assembly is



removed from the scoreboard. Use extreme caution during troubleshooting or repair. To avoid possible damage to equipment or personal injury, always turn off the main power before removing the cover or replacing assemblies, or replacing lamps.

#### 4.2 Test Equipment

A simple analog or digital voltmeter will be sufficient for all user repairable problems. Printed circuit boards requiring troubleshooting should be returned to the factory.

#### 4.3 Troubleshooting

Whenever possible, follow the troubleshooting guides prior to contacting the customer service department. If a problem not described in the guides exists, contact the customer service department immediately. Refer to the diagrams provided for assistance in troubleshooting scoreboard malfunctions.

#### 4.4 Troubleshooting Guides

##### (A) Scoreboard doesn't light and console doesn't work

- (a) Check that the main power switch is turned on.
- (b) Replace any defective or blown fuses.
- (c) Check the power connections and voltages at the scoreboard.
- (d) Contact the customer service department.

##### (B) Scoreboard digits don't light, but the console works

- (a) With the main power switch "off"; remove the cover over the controller assembly.
- (b) Check all connections.
- (c) Turn the main power on.
- (d) If the scoreboard still doesn't light, check the transformer voltage going to the receiver PCB (printed circuit board) assembly (blue wires) using a voltmeter set on the 12 VAC or higher scale.

If the voltage is less than 8 VAC contact the customer service department.

If the voltage is between 8-12 VAC see the replacement parts list for a receiver PCB assembly, and contact the customer service department.

##### (C) The scoreboard digits light but the console doesn't work

- (a) Check for continuity between the scoreboard and the junction box.
- (b) If an open circuit is found, the problem is either the cable or a cable connection.

- (c) If the continuity test checks good, check the voltage between the green wire and the white wire in the junction box, using a voltmeter set on the 12 VAC or higher scale.

If the voltage is 0 VAC see the controller parts list for a transformer assembly.

If the voltage is less than 8 VAC consult the controller wiring diagram for instructions on long cable compensation.

If the voltage is between 8 VAC and 12 VAC contact the customer service department.

- (D) The scoreboard digits light, the console works, but there is no control of the scoreboard.

- (a) Check the voltage between the black and red wires in the junction box with a voltmeter set on the 3 VDC or higher scale. The voltage should read somewhere between 2-3 VDC when the console is working properly.
- (b) If the voltage is 0 VDC contact the customer service department for assistance.
- (c) If the voltage is correct, (2-3 VDC) check that this reading also appears at the scoreboard.
- (d) If the correct voltage also appears at the scoreboard, see the replacement parts list for a receiver PCB assembly.

- (E) The scoreboard works, but some lights stay on all the time

- (a) With the main power "OFF", switch the plug from the bad digit with the plug for a known good digit.

EXAMPLE: Plug "C" into "D" and "D" into "C" locations.

- (b) Turn the power back on. If the same lamps remain lit all the time, the problem is a shorted lamp socket. If the lamps on a different digit now stay lit all the time, the problem is on the driver PCB assembly. See the replacement parts list for the proper replacement part.

- (F) The scoreboard works, but some lights do not come on.

- (a) Check for burned out lamps.

### **IMPORTANT !!!**

In this scoreboard the 120 volt line is on the lamp socket all the time, and the common is switched to turn the lamps on and off. For this reason, to avoid damage to the

equipment or personal injury, it is important to turn the main power off when changing the lamps.

- (b) Check for a broken wire or bad connection on the 12 pin connector.
- (c) See the replacement parts list for the proper replacement driver board.

## 5. REPLACEMENT PARTS LIST

### 5.1 Scoreboard Display Parts


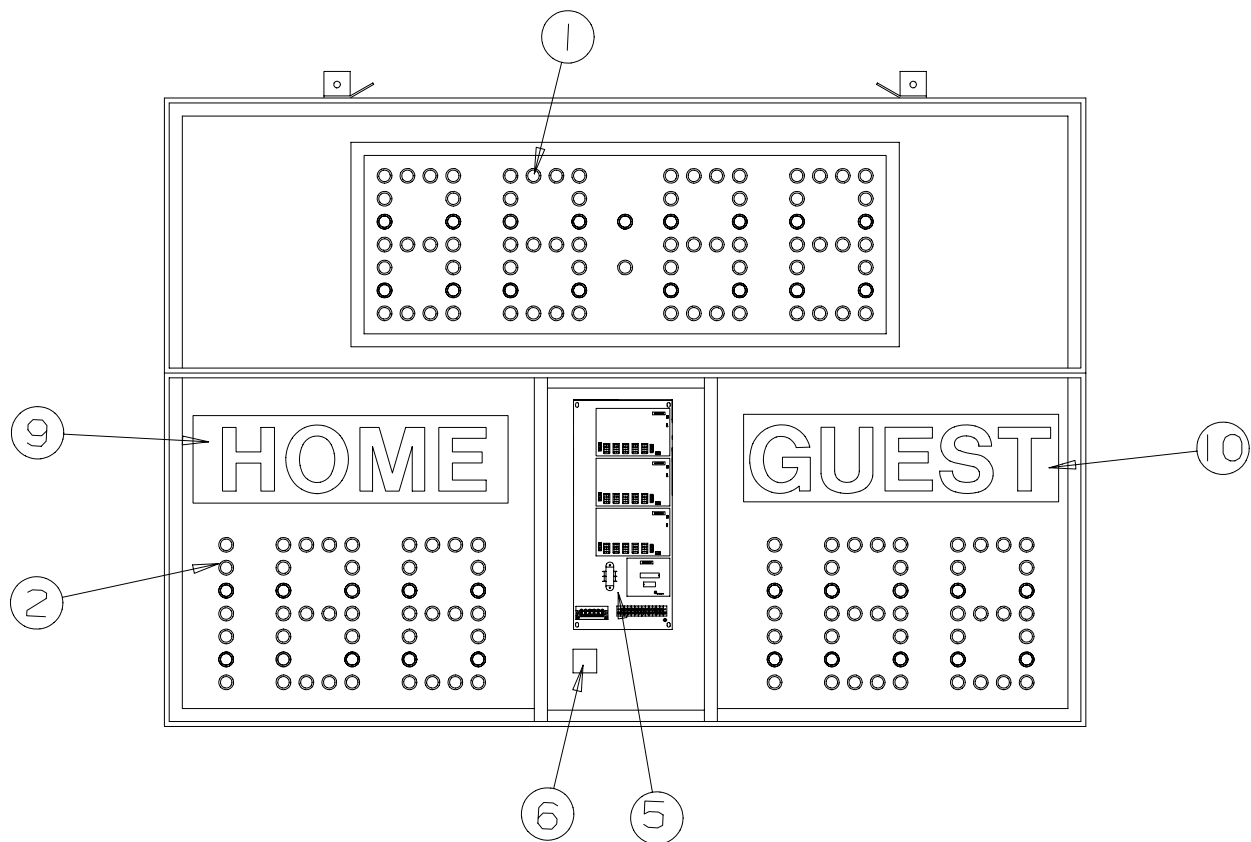


figure 1

## DISPLAY ASSEMBLY

REPLACEMENT PARTS LIST (MP-2206 Basketball)				
fig.& index	MFG PART NUMBER	DESCRIPTION	REF DES	VENDOR PART #
1-	000000	Display Assembly		000000
1-1	850001	Lamp, 7C7/125V White		7C7/W
1-2	850002	Lamp, 7C7/125V Amber		7C7/A
1-3				
1-4	850029	Lamp, 25W/130V Inside Frosted		25A19IF
1-5	180156	Controller Assembly *****SEE FIGURE 2*****		180156
1-6	119337	Line Filter, Mallory		20VB1
1-7	120363	Service Door		
1-8				
1-9	150036	Placard, Home		150036
1-10	150037	Placard, Guest		150037
1-11	700102	Resistor, 2 OHM 10 WATT		HLM-10-10Z
	SU4450 HB005500 HB002300 SW005100 702785 EL053000 HB002400 WH009100 122763	Control Console Slipsheet Pair Transmitter PCB Assembly Toggle Switch, Connector, 5 Pin Male Cable LCD Display, 2 Line 20 Character Keyboard Assembly, Ribbon Cable Assembly, 14C 8" Enclosure,	A1 S1 P1	SU4450 HB005500 HB002300 SW005100 RM12BPG5P  HB002400 WH009100
	151204 702786 150500	Wall Junction Box, Single Connector, 5 Pin Female Cable, MP-41 Control	J1	151204 RM12BRD5S 8723
	150205 702786 150500	Wall Junction Box, Dual Connector, 5 Pin Female Cable, MP-41 Control	J1-J3	150205 RM12BRD5S 8723

## 5.2 Scoreboard Controller Assembly Parts

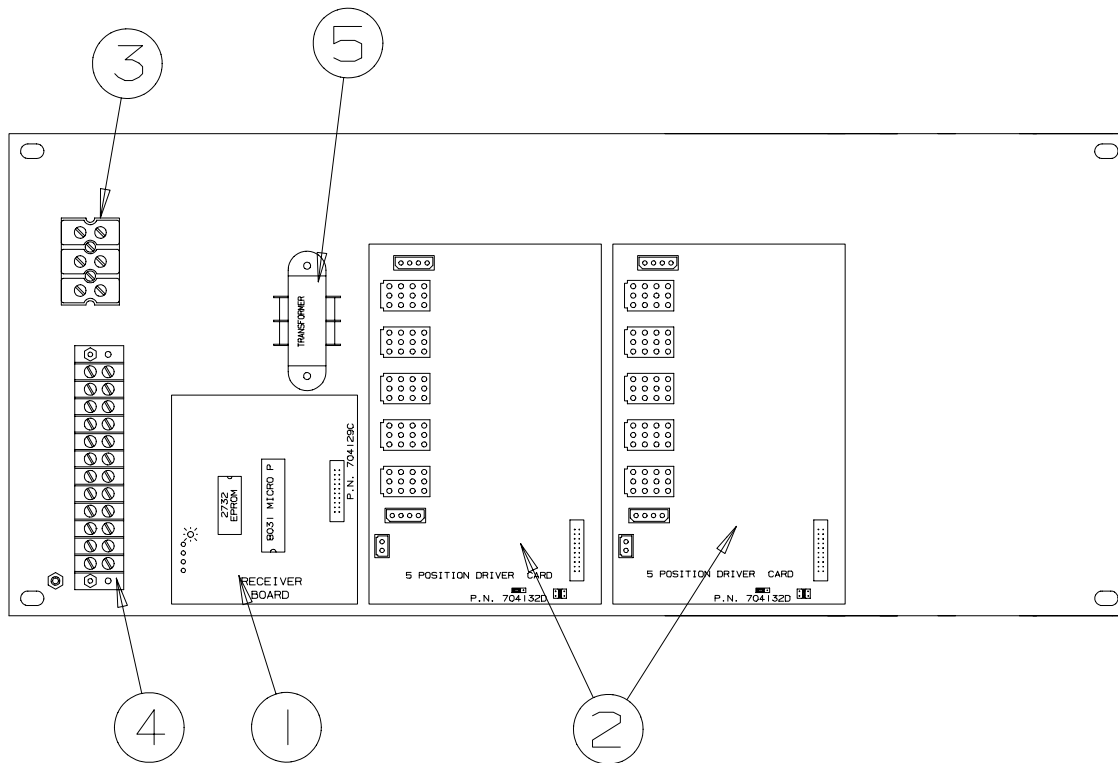

2

figure 2


## CONTROLLER ASSEMBLY

REPLACEMENT PARTS LIST (MP-2206 Controller Assembly)				
fig.& index	MFG PART NUMBER	DESCRIPTION	REF DES	VENDOR PART #
2-	180156	Controller Assembly	A2	180156
2-1	150366	Receiver PCB Assembly *** PROGRAM 3MP-CNT-V00***	A3	150366
2-2	150368	Driver PCB Assembly, 5 Position	A4-A5	150368
2-3	EL055800	Terminal Block, 3C	TB-1	B-03 EAGLE
2-4	701103	Terminal Block, 12C	TB-2	670-12
2-5	151301	Transformer, 8V/18V	T1	CS-697

2-6	151300	Horn Suppressor Assy.	151300
2-7	700520	Varistor,	ERZ-C20DK201U
2-8	700850	Capacitor, 0.02 MFD 400V.	CD-1000203M0Z5U
2-9	705075	Ribbon Cable Assy, W/2 Fem.Connectors	AS-1053
2-10	HB005600	Cover	HB005600
2-11	705723	Spacer, P.C.Board	LCBS-6-01


## 6. DIAGRAMS

### 6.1 Control Console Keyboard and Slipsheet Layout

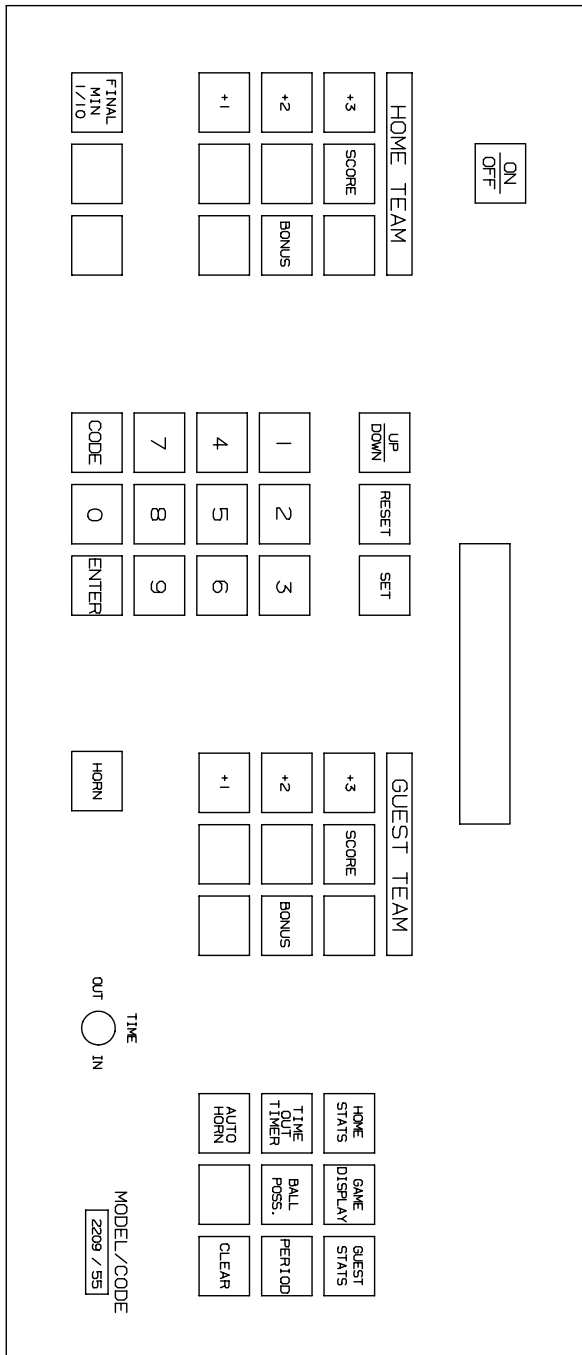

## CONSOLE KEYBOARD


### 6.2 Scoreboard System Layout

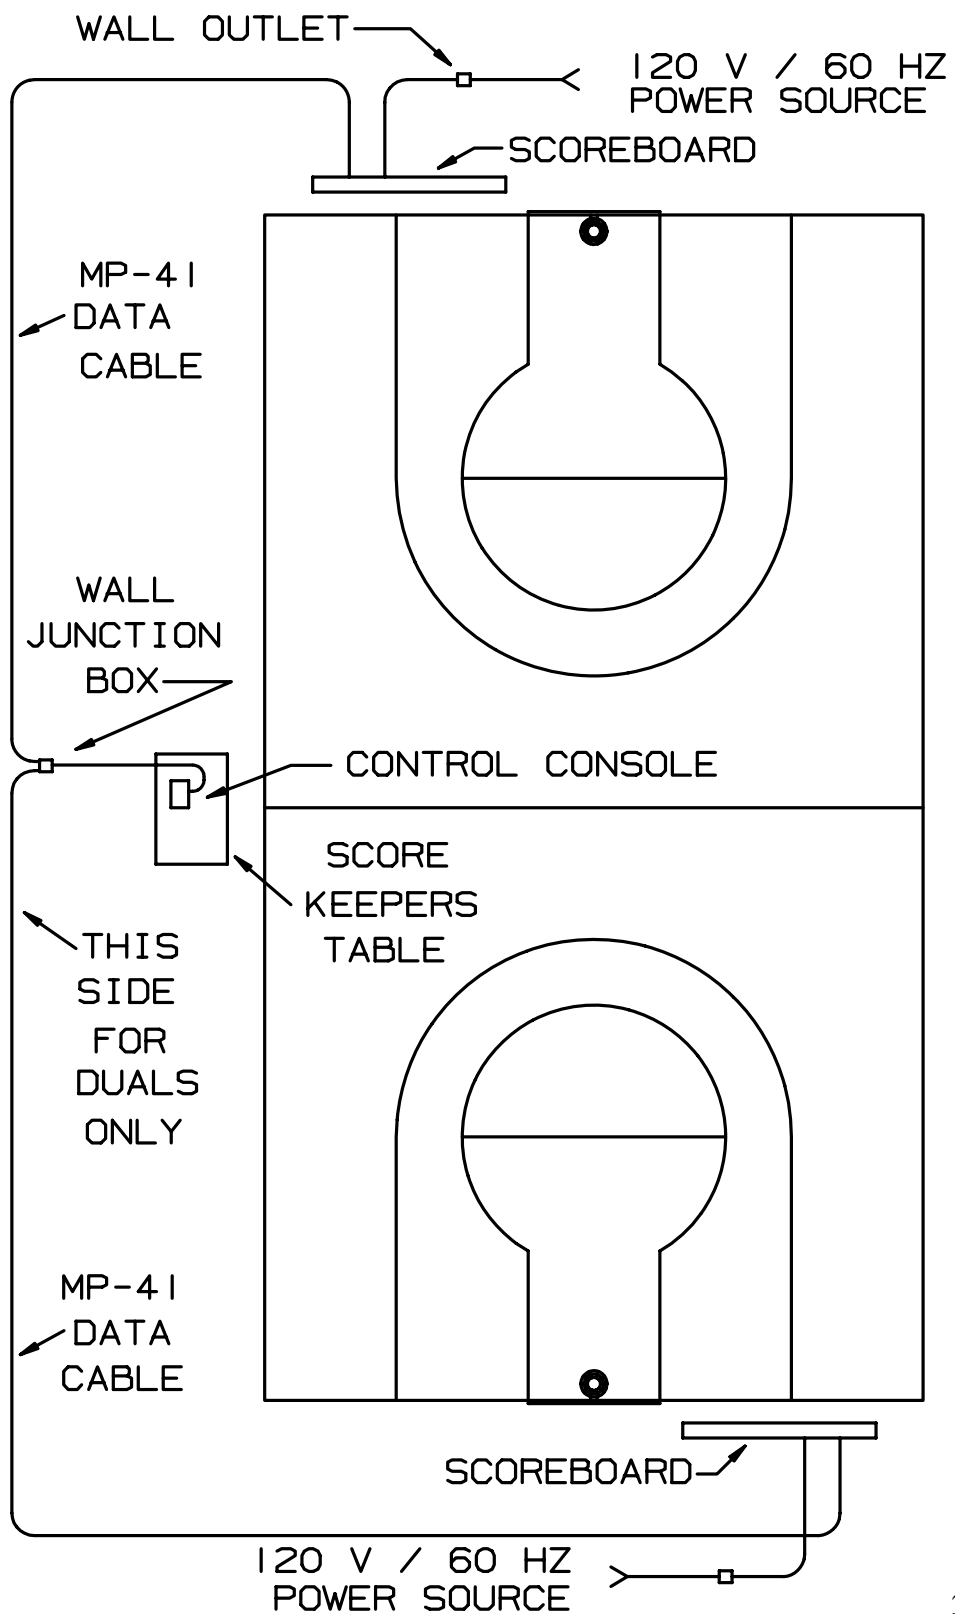

SYSTEM LAYOUT

### 6.3 Single Wall Junction Box Wiring




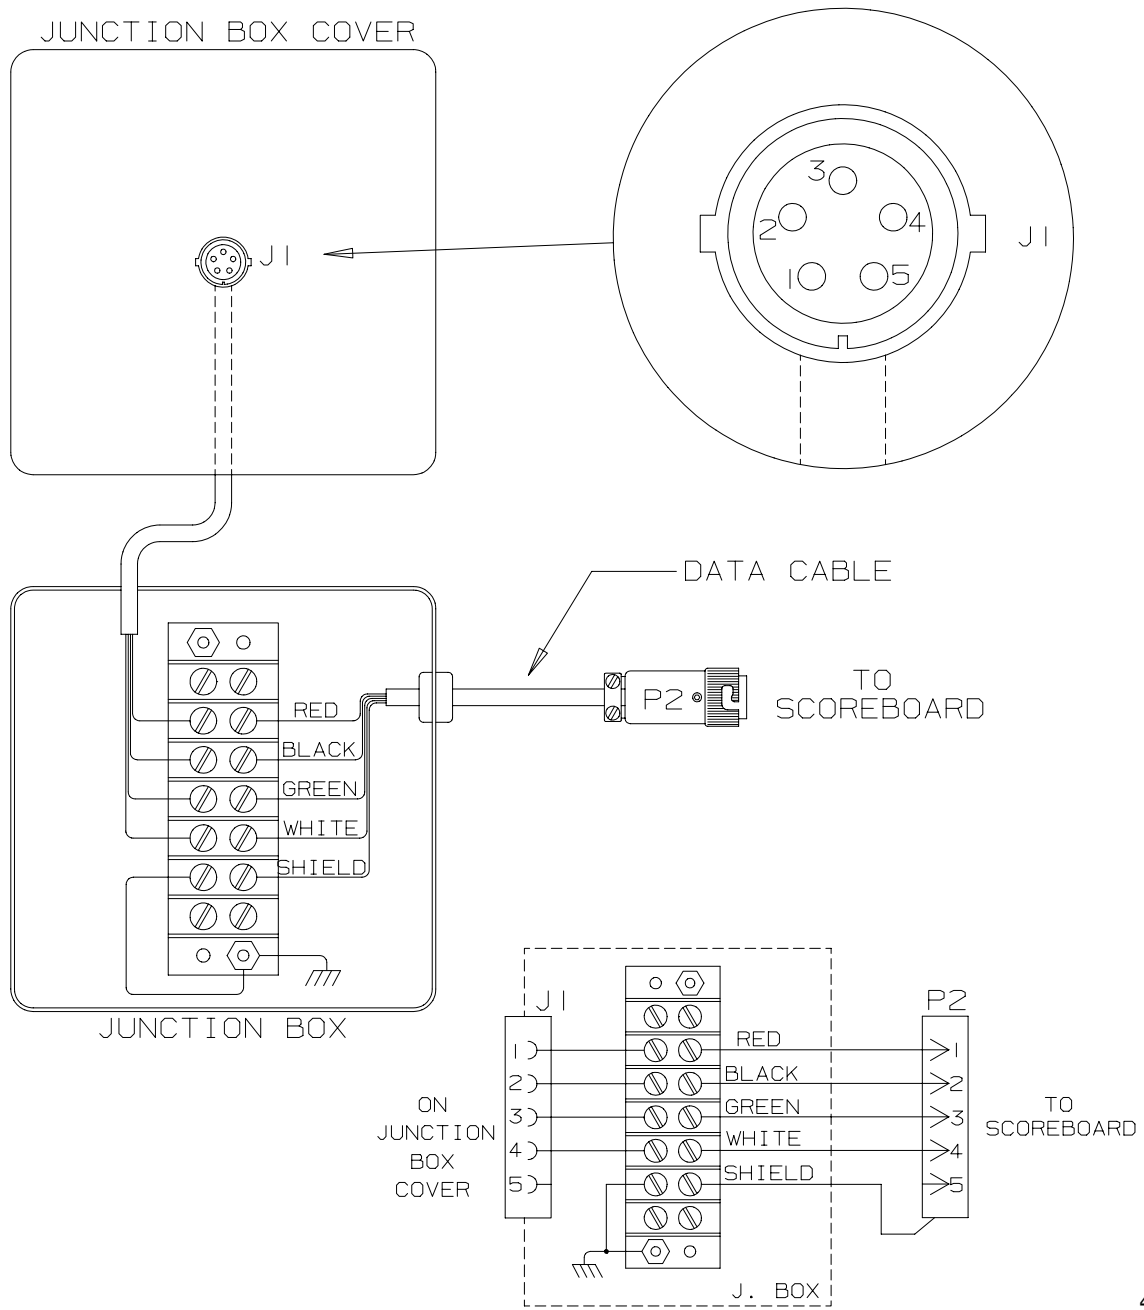

4

## SINGLE JUNCTION BOX WIRING


### 6.4 Dual Wall Junction Box Wiring

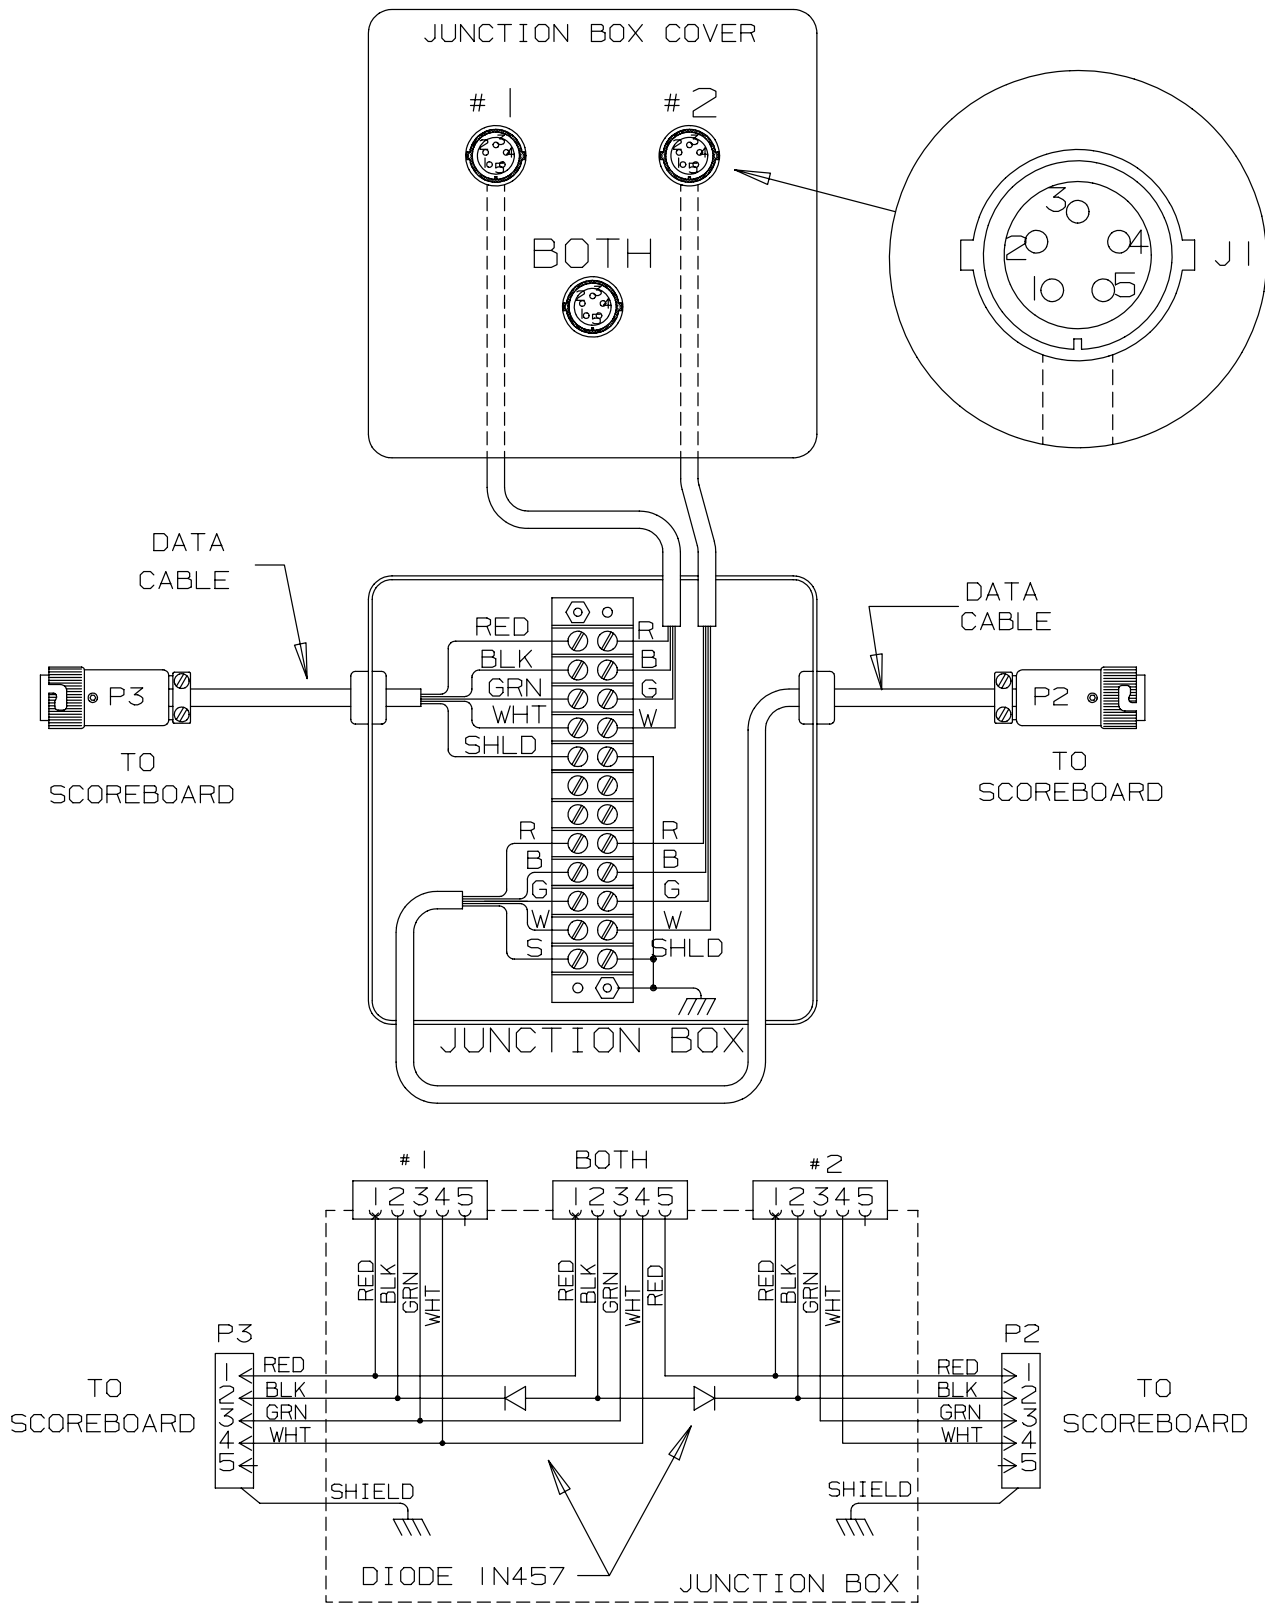

5


## DUAL JUNCTION BOX WIRING

6.5 Controller Assembly Wiring

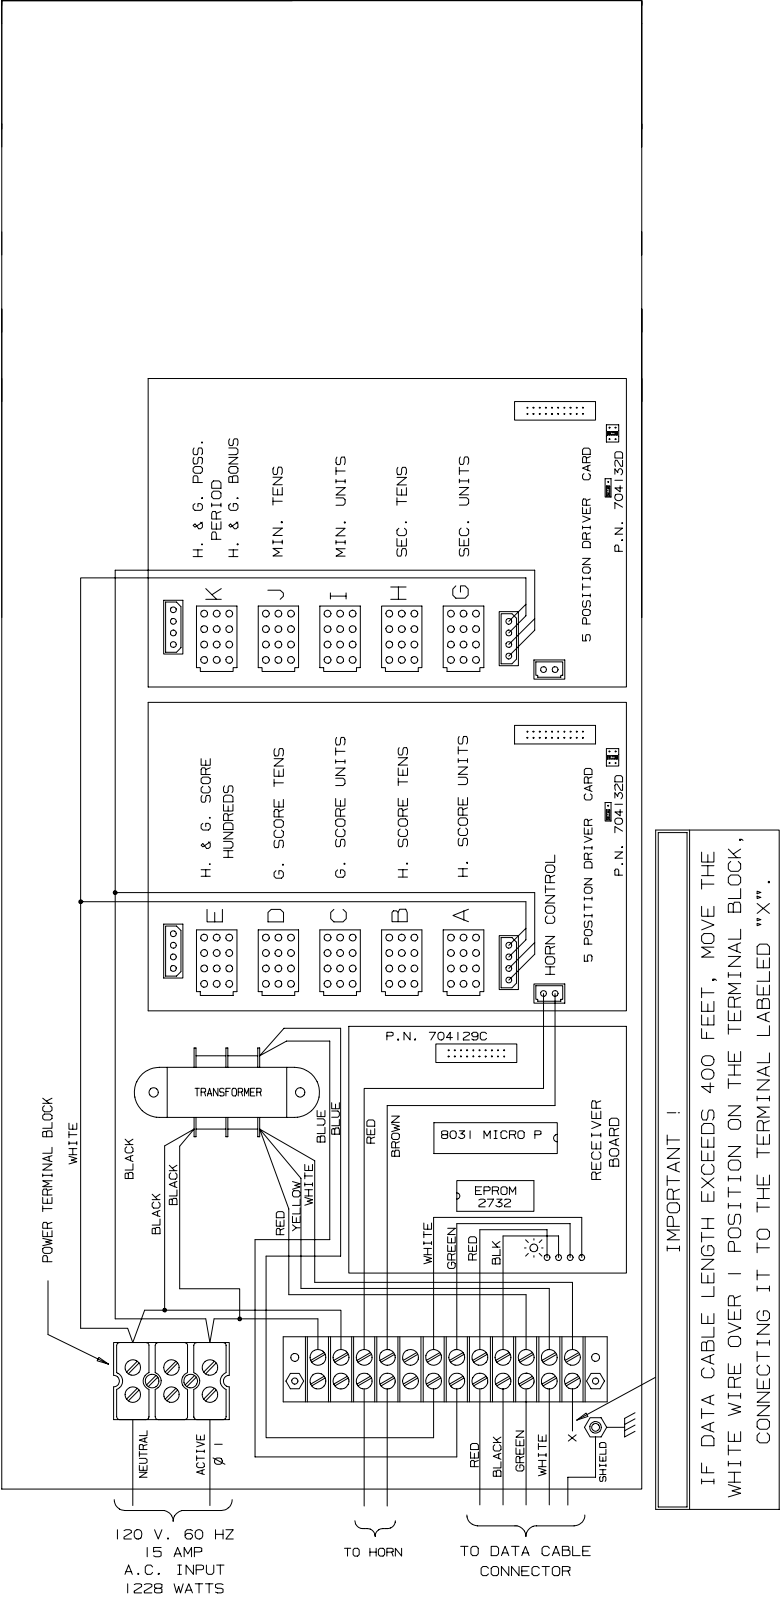



CONTROLLER ASSEMBLY

6.6 Line Filter Wiring Diagram

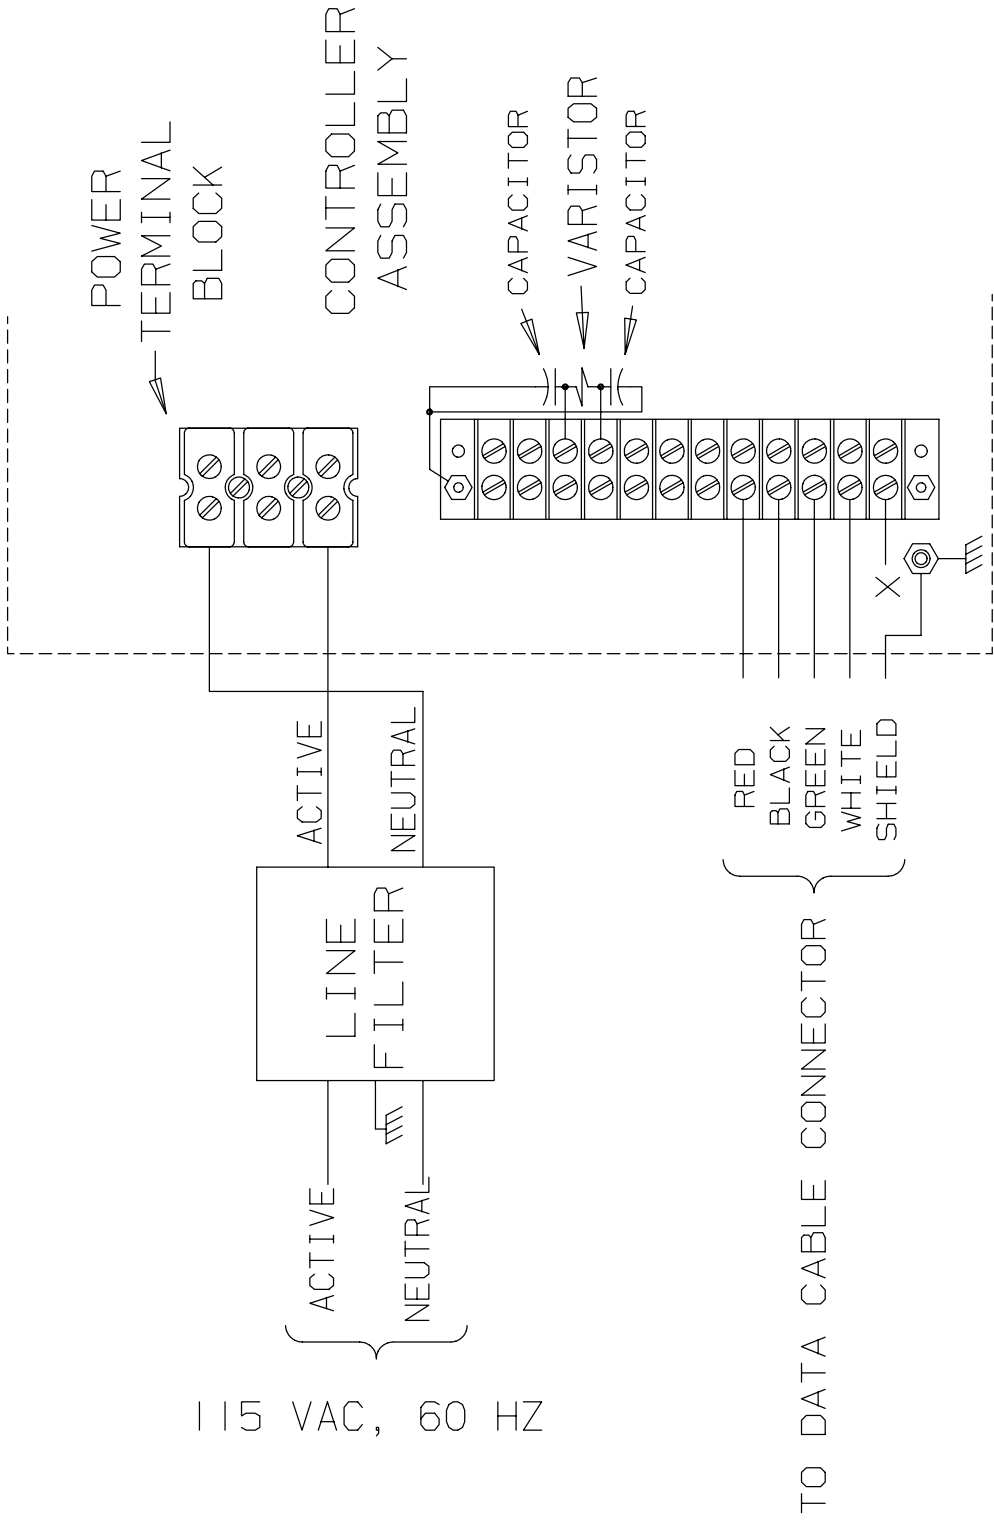

## LINE FILTER WIRING

### 6.7 Microprocessor 4 X 7 Lamp Pattern (8 Bit)

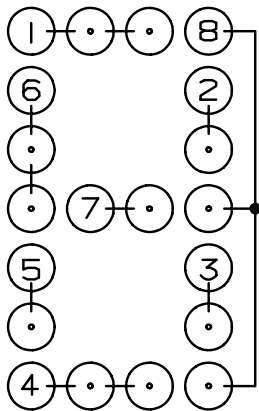
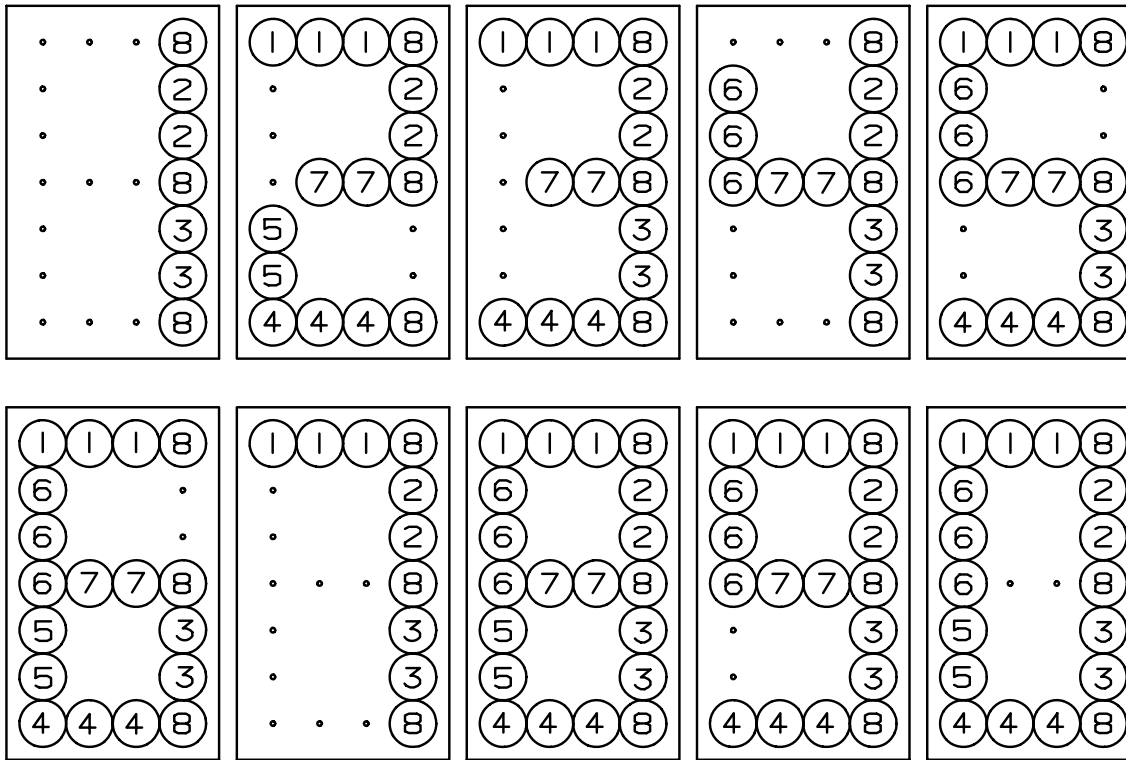


		NUMERALS									
BIT ↑ NUMBERS		0	1	2	3	4	5	6	7	8	9
	1	0	.	2	3	.	5	6	7	8	9
	2	0	1	2	3	4	.	.	7	8	9
	3	0	1	.	3	4	5	6	7	8	9
	4	0	.	2	3	.	5	6	.	8	9
	5	0	.	2	.	.	.	6	.	8	.
	6	0	.	.	.	4	5	6	.	8	9
	7	.	.	2	3	4	5	6	.	8	9
	8	0	1	2	3	4	5	6	7	8	9

7

### MICROPROCESSOR 4 X 7 (8 BIT) LAMP PATTERN


### 6.8 Figuregram Wiring

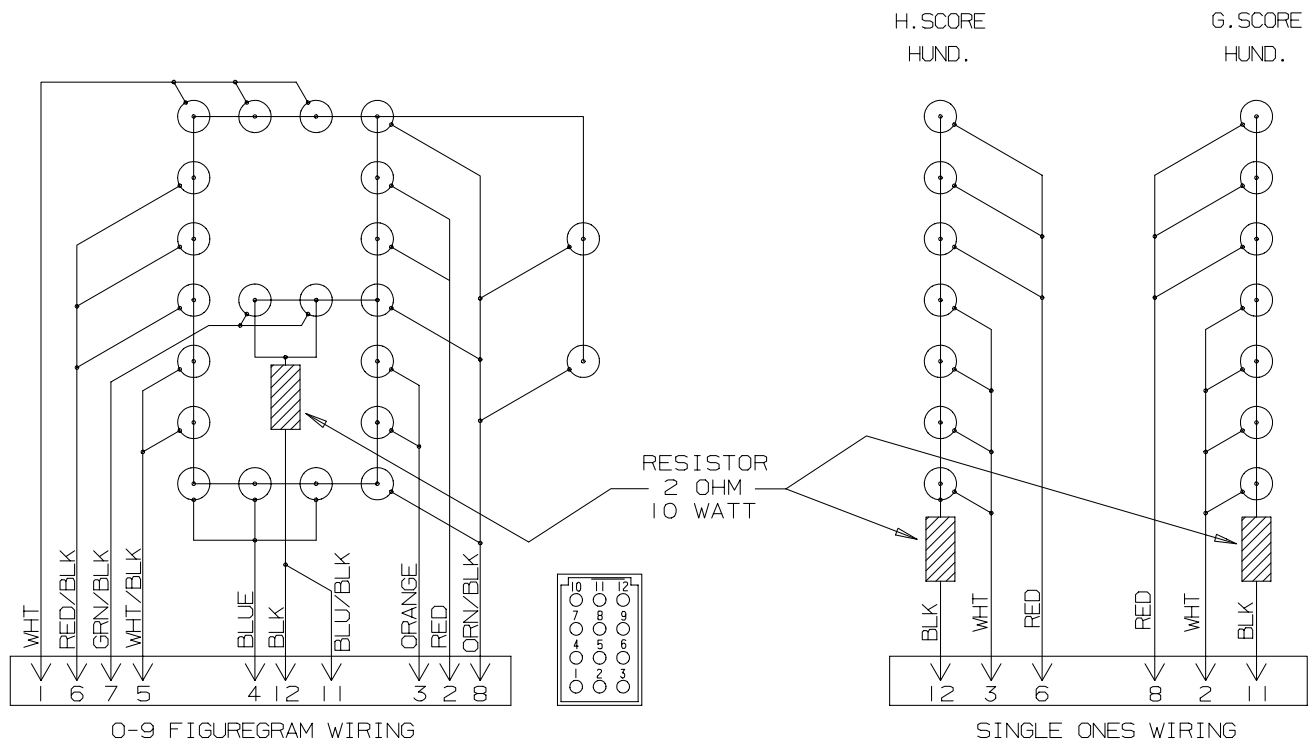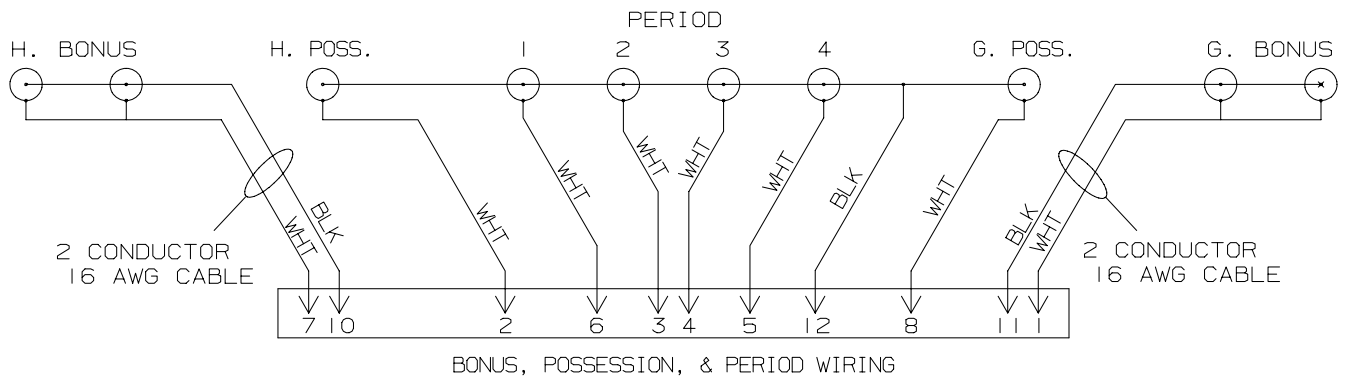

8

## 8 BIT FIGUREGRAM WIRING


### 6.9 Jumper Location on 5 Position System

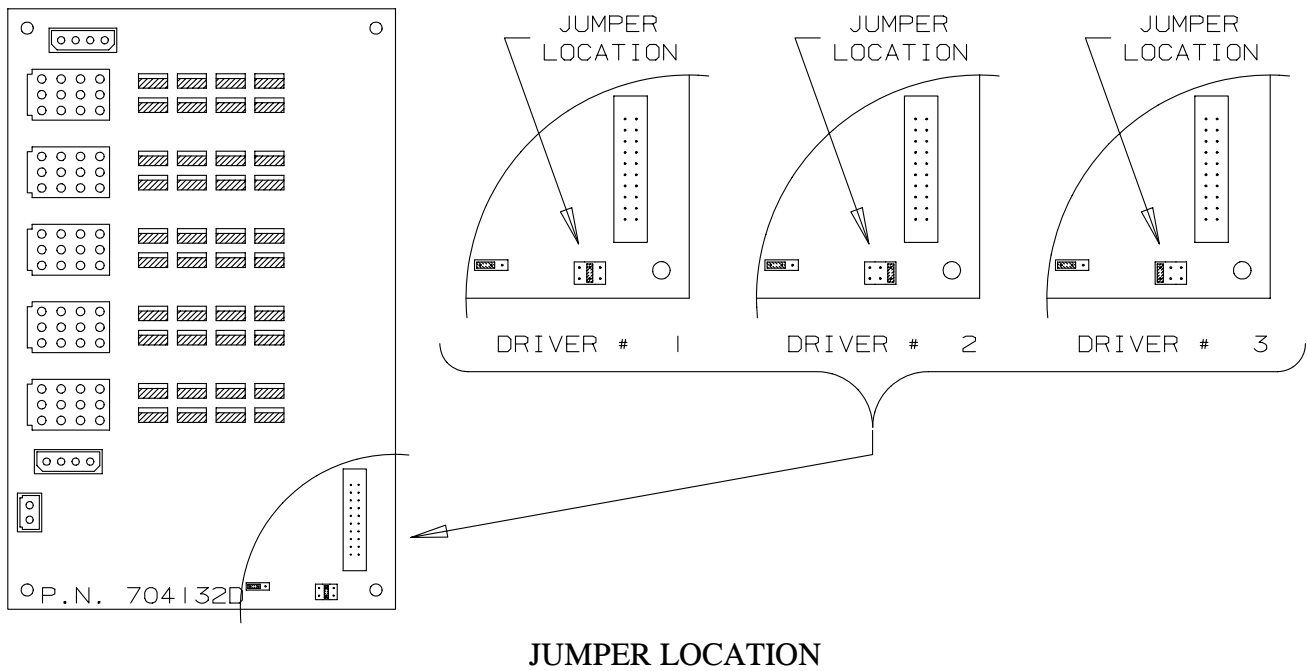

9


## 6.10 Triac Placement

The triac is the switch that controls the figuregram lamps. The triacs for any given figuregram are adjacent to the twelve pin connector on the driver board that controls that figuregram. Shown below is the triac placement and bit designation relative to the figuregram bit pattern.

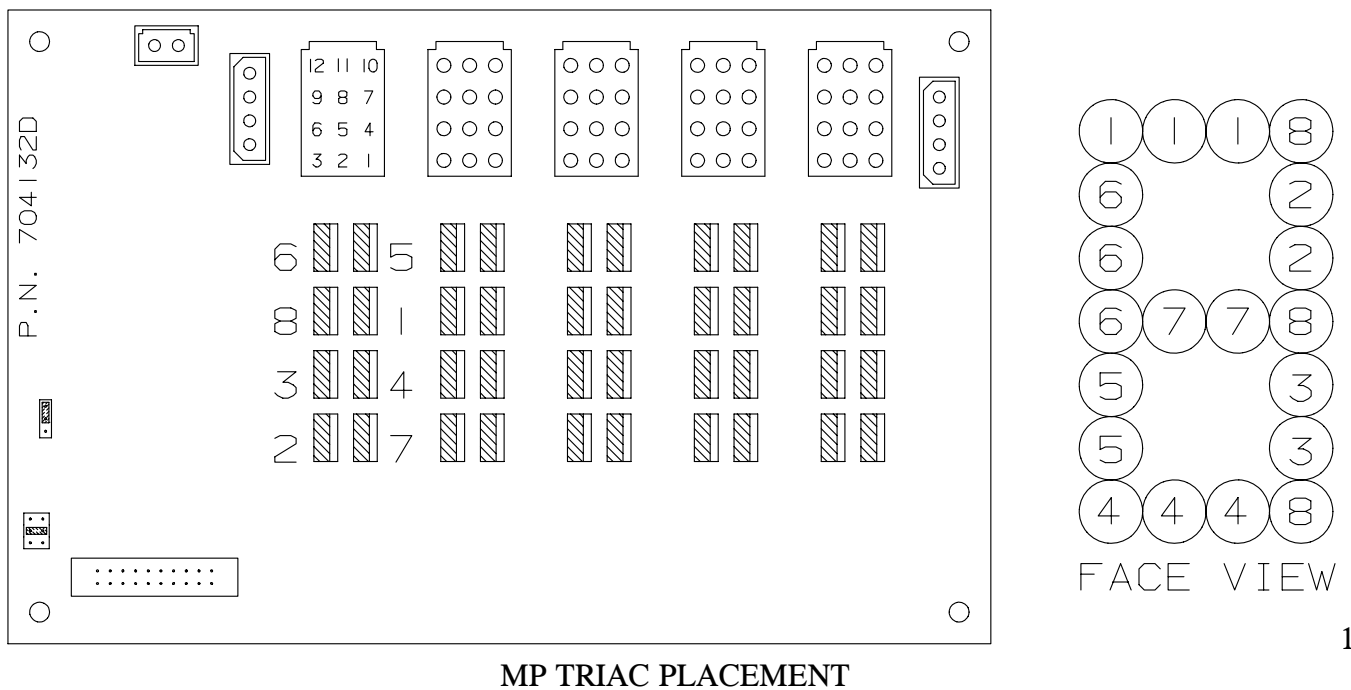

10

## 6.11 Installation Drawing

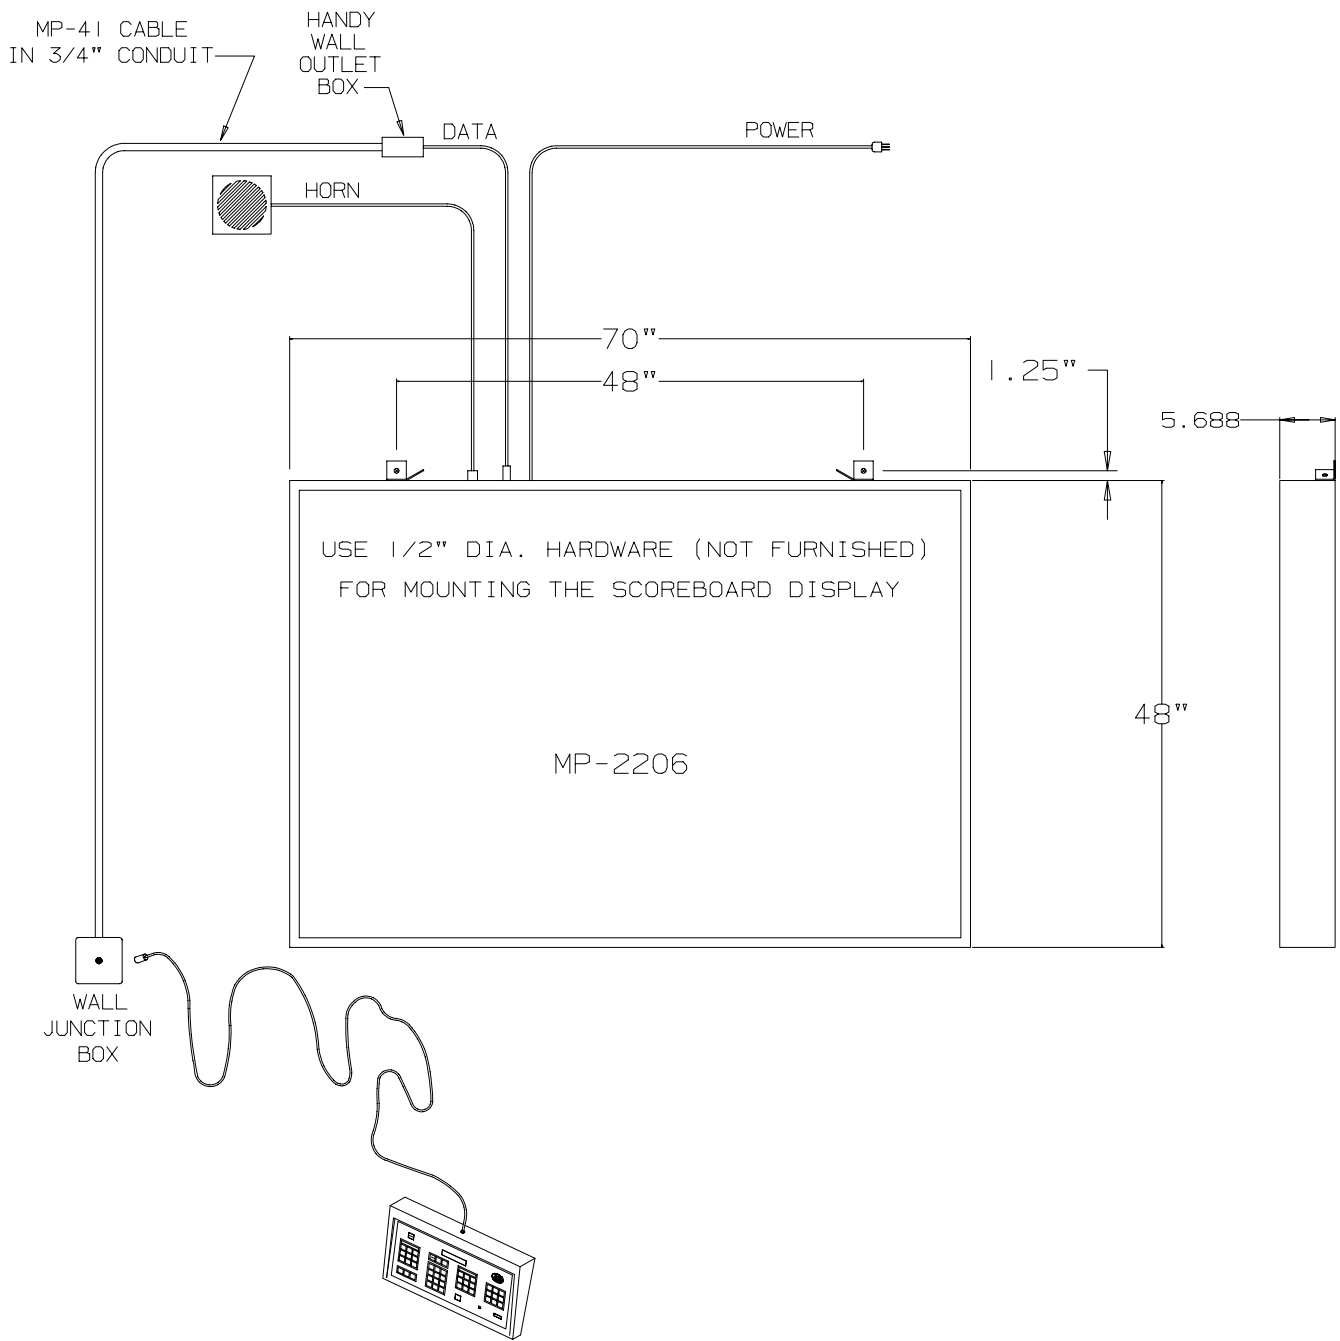

### INSTALLATION DRAWING