




# Operating Instructions & Service Manual

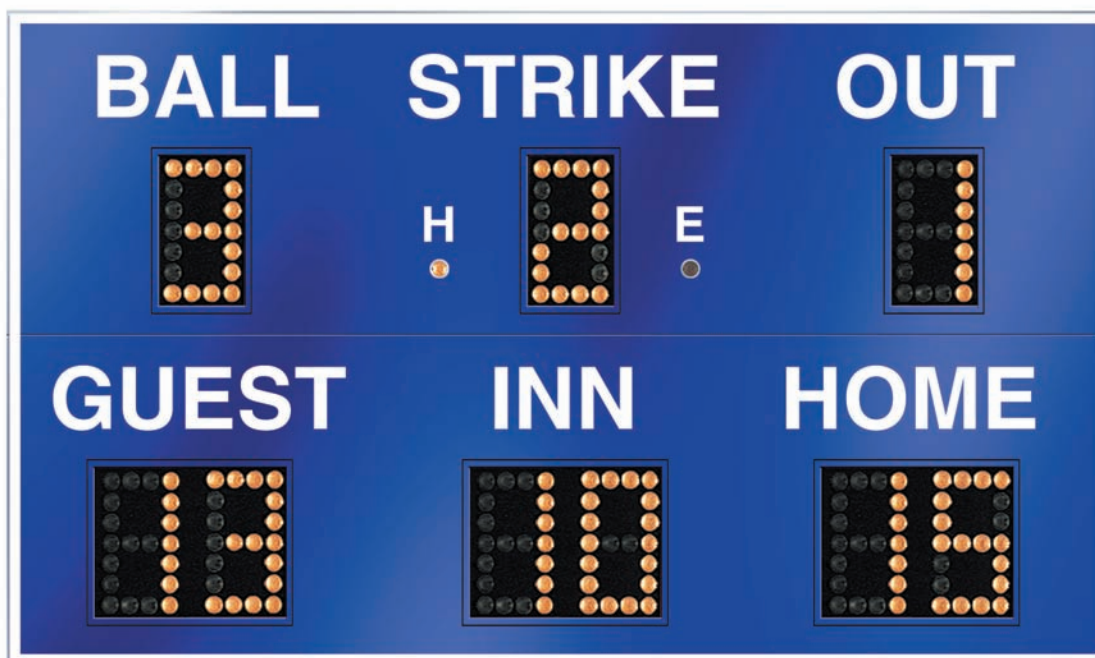

## Baseball Scoreboard Model MP-3376R

# TABLE OF CONTENTS

|                                                        | <b><u>PAGE</u></b> |
|--------------------------------------------------------|--------------------|
| <b><u>1. GENERAL INFORMATION</u></b>                   | <b>3</b>           |
| 1.1 DESCRIPTION                                        |                    |
| 1.2 IDENTIFICATION                                     |                    |
| 1.3 DAMAGE                                             |                    |
| 1.4 DAMAGE CLAIM PROCEDURE                             |                    |
| <b><u>2. INSTALLATION</u></b>                          | <b>4</b>           |
| 2.1 GENERAL INFORMATION                                |                    |
| 2.2 INSPECTION                                         |                    |
| 2.3 INSTALLATION                                       |                    |
| 2.4 ELECTRICAL CONNECTIONS                             |                    |
| <b><u>3. CONTROL CONSOLE OPERATION</u></b>             | <b>5</b>           |
| 3.1 SCOREBOARD POWER                                   |                    |
| 3.2 CONSOLE DISPLAY                                    |                    |
| 3.3 CONSOLE POWER                                      |                    |
| 3.4 INITIALIZING SCOREBOARD                            |                    |
| 3.5 TEAM SCORES                                        |                    |
| 3.6 INNING                                             |                    |
| 3.7 BALL, STRIKE, AND OUT                              |                    |
| 3.8 HIT & ERROR                                        |                    |
| 3.9 DIMMER                                             |                    |
| <b><u>4. MAINTENANCE AND TROUBLESHOOTING</u></b>       | <b>7</b>           |
| 4.1 INTRODUCTION                                       |                    |
| 4.2 TEST EQUIPMENT                                     |                    |
| 4.3 TROUBLESHOOTING                                    |                    |
| 4.4 TROUBLESHOOTING GUIDE                              |                    |
| <b><u>5. REPLACEMENT PARTS LIST</u></b>                | <b>9</b>           |
| 5.1 SCOREBOARD DISPLAY PARTS                           |                    |
| 5.2 SCOREBOARD CONTROLLER ASSEMBLY PARTS               |                    |
| <b><u>6. DIAGRAMS</u></b>                              | <b>12</b>          |
| 6.1 CONTROL CONSOLE KEYBOARD AND SLIPSHEET LAYOUT      |                    |
| 6.2 SCOREBOARD SYSTEM LAYOUT                           |                    |
| 6.3 POWER WIRING                                       |                    |
| 6.4 CONTROLLER ASSEMBLY WIRING                         |                    |
| 6.5 MICROPROCESSOR 4X 7 LAMP PATTERN (8 BIT) (A-12497) |                    |
| 6.6 FIGUREGRAM WIRING DIAGRAM (B-13133)                |                    |
| 6.7 JUMPER LOCATION ON 3 POSITION SYSTEM               |                    |
| 6.8 TRIAC PLACEMENT DIAGRAM                            |                    |
| 6.9 INSTALLATION DRAWINGS (C-150752)                   |                    |

# 1. GENERAL INFORMATION

## 1.1 Description

Your All American Scoreboard has been carefully inspected and tested before leaving the factory. It is possible, however, that components may be loosened or forced out of adjustment in transit. If this occurs, follow the troubleshooting guide (section 4). If equipment then fails to operate, contact immediately:

ALL AMERICAN Service Department  
EVERBRITE Corporation  
P.O. Box 100  
Pardeeville, WI 53954  
Telephone: (608) 429-2121  
Toll Free: 800-356-8146

Parts being returned for repair are to be sent to:

ALL AMERICAN Service Department  
EVERBRITE Corporation  
401 S. Main Street  
Pardeeville, WI 53954  
E-mail [score@everbrite.com](mailto:score@everbrite.com)

### NOTE

If you need to send parts in for repair, please call the ALL AMERICAN service department for a returned goods authorization (RGA) number.

## 1.2 Identification

All American uses a 5 digit serial number for scoreboard identification. The serial number tags are located on the back of the control console and the lower right-hand corner on the face of the scoreboard display. When contacting the factory for assistance it is important that the model number and serial number are known.

## 1.3 Damage

Upon receipt, check for visible damage. If this occurs, or if damage is found after shipment has been accepted, follow the damage claim procedure.

## 1.4 Damage Claim Procedure

An instruction sheet is enclosed advising the consignee in case of damage in transit. If damage is noted at the time of delivery, consignee must obtain an 'Inspection of Bad Order' from the delivering carrier. In order to process your claim, this must be properly filled out with a complete statement of all damage and it must be signed by the carrier.



If damage is discovered after delivery, you should call the delivery company. Have them make out a Concealed Damage Report. Fifteen days after delivery are allowed, so this should be done PROMPTLY or it is impossible to process this claim.

Advise EVERBRITE corporation of necessary replacement parts or repairs.

Consignee will be invoiced and then should file a claim with the carrier to recover charges. TO FILE YOUR CLAIM FOLLOW THIS PROCEDURE:

- (A) Cost of replacement parts or repair charges are invoiced to the carrier by the consignee.
- (B) The following documents, properly filled out, plus invoice are forwarded to the trucking company in support of your claim:
  - (a) Original bill of lading
  - (b) Original paid freight bill
  - (c) Certified copy of original invoice
  - (d) Standard form for presentation of loss and damage claim properly filled out.

## **2. INSTALLATION**

### **2.1 General Information**

Shipping papers accompany each scoreboard. Check carefully to see that you receive the following:

- 1 ea Baseball Display (2 cartons)
- 1 ea Control Console
- 1 ea Service Manual
- 1 ea Mounting Hardware Package
- 1 ea Power Adaptor

### **2.2 Inspection**

Tighten all screws and fittings that may have loosened in shipment.

### **2.3 Installation**

Select the location best suited for visibility by the majority of spectators. Preferred position is facing east or north to avoid direct sunlight on the face of the scoreboard, if day games are played. For permanent mounting to uprights, see the enclosed installation drawing in Section 6.

### **2.4 Electrical Connections**

The scoreboard requires two 120 V. 30 AMP AC circuits or two 120 V. 15 AMP circuits for the exclusive use of the scoreboard.

### **IMPORTANT!!!**

To protect the control from damage, it is advisable that you disconnect the control and store in a dry secure area when not in use.

### **NOTE**

This equipment is **ETL** (Electronics Testing Laboratories) **CSA** and **NRTL** approved and complies with the requirements in part 15 of the FCC rules for a class A computing device. Operation of this equipment in a residential area may cause unacceptable interference to radio and television reception, requiring the operator to take whatever steps are necessary to correct the interference.

## **3. CONTROL CONSOLE OPERATION**

### **3.1 Scoreboard Power**

Turn on the branch circuits to the scoreboard. The Home and Guest scores will show “0”.

### **3.2 Console Display**

The 2 line by 20 character Liquid Crystal Display module displays the scoreboard information entered from the keyboard. The following information is displayed continuously: Home and Guest Scores, Inning, Ball, Strike, and Out.

### **3.3 Console Power**

Plug the AC adaptor into the control console and into a 120 VAC wall outlet.

Push **ON/OFF** once to turn the console on.

Push **ON/OFF** a second time to shut the console off.

When first turned on; the console display should show as follows:

**SCOREBOARD CONTROL**  
**1991 VERSION 3.3**

### 3.4 Initializing Scoreboard

Enter the two digit code (71) shown in the lower left corner of the keyboard as in the following example:

Push **CODE** **7** **1** **ENTER** .

When the proper code has been entered, the console display will show as follows:

|     |   |
|-----|---|
| 0   | 0 |
| 0 H | 0 |

### 3.5 Team Scores

The Home and Guest Scores can be changed in three different ways.

- (A) To add 1 to the existing score: Push **+1** .
- (B) To directly enter or correct a score: Push Home or Guest **SCORE** followed by the desired number, then **ENTER** . Example: Present Home Score is 15. Change the score from 15 to 23.

Push: Home **SCORE** **2** **3** **ENTER** .

- (C) To clear the score: Push **SCORE** **CLEAR** .

### 3.6 Inning

Entry to the above function is made in the same manner as direct entry for Team Scores.

### 3.7 Ball, Strike, and Out

Push **BALL** , **STRIKE** , or **OUT** , once for each increment of the appropriate indicator.

### 3.8 Hit & Error

Push **HIT** , or **ERROR** to increment the appropriate indicator.

### 3.8 Dimmer

Push **DIMMER** to dim the lamps during night use.

#### WARNING

120 VAC wires are exposed whenever the cover over the controller assembly is removed from the scoreboard. Use extreme caution during troubleshooting or repair. To avoid possible damage to equipment or personal injury, always turn off the main power before removing the cover or replacing assemblies, or replacing lamps.

## 4. MAINTENANCE AND TROUBLESHOOTING

### 4.1 Introduction

This section gives maintenance and troubleshooting information. Included are troubleshooting guides for typical scoreboard malfunctions. If the cause of a problem cannot be determined, please contact the Customer Service Department.

### 4.2 Test Equipment

A simple analog or digital voltmeter will be sufficient for all user repairable problems. Printed circuit boards requiring troubleshooting should be returned to the factory.

### 4.3 Troubleshooting

Whenever possible, follow the troubleshooting guides prior to contacting the customer service department. If a problem not described in the guides exists, contact the customer service department immediately. Refer to the diagrams provided for assistance in troubleshooting scoreboard malfunctions.

### 4.4 Troubleshooting Guides

(A) Scoreboard doesn't light and console doesn't work:

- (a) Check that the main power switch is turned on.
- (b) Replace any defective or blown fuses.
- (c) Check the power connections and voltages at the scoreboard.
- (d) Contact the Customer Service Department.

(B) Scoreboard digits don't light but the console works:

- (a) With the main power switch "OFF"; remove the cover over the controller assembly.
- (b) Check all connections.
- (c) Turn the main power "ON".
- (d) If the scoreboard still doesn't light, check the transformer voltage going to the receiver PCB (printed circuit board) assembly (blue wires) using a voltmeter set on the 12 VAC or higher scale.

If the voltage is less than 8 VAC contact the Customer Service Department.

If the voltage is between 8-12 VAC see the replacement parts list for a receiver PCB assembly, and contact the Customer Service Department.

(C) The scoreboard digits light but the console doesn't work:

- a) Check the voltage between the black and red wires from the transceiver on the controller assembly with a voltmeter set on the 3 VDC or higher scale. The voltage should read somewhere between 2-3 VDC when the console is working properly.

- (b) If the voltage is 0 VDC contact the Customer Service Department for assistance, or see the replacement parts list for a receiver PCB assembly.
- (D) The scoreboard digits light, the console works but there is no control of the scoreboard:
  - (a) Check the voltage between the black and red wires in the junction box with a voltmeter set on the 3 VDC or higher scale. The voltage should read somewhere between 2-3 VDC when the console is working properly.
  - (b) If the voltage is 0 VDC contact the Customer Service Department for assistance.
  - (c) If the voltage is correct, (2-3 VDC) check that this reading also appears at the scoreboard.
  - (d) If the correct voltage also appears at the scoreboard, see the replacement parts list for a receiver PCB assembly.
- (E) The scoreboard works, but some lights stay on all the time:
  - (a) With the main power “OFF”, switch the plug from the bad digit with the plug for a known good digit. EXAMPLE: Plug “C” into “D” and “D” into “C” locations.
  - (b) Turn the power back on. If the same lamps remain lit all the time, the problem is a shorted lamp socket. If the lamps on a different digit now stay lit all the time, the problem is on the driver PCB assembly. See the replacement parts list for the proper replacement part.
- (F) The scoreboard works but some lights do not come on:
  - (a) Check for burned out lamps.
  - (b) Check for a broken wire or bad connection on the 12 pin connector.
  - (c) See the replacement parts list for the proper replacement driver board.

### **IMPORTANT !!!**

In this scoreboard the 120 volt line is on the lamp socket all the time, and the common is switched to turn the lamps on and off. For this reason, to avoid damage to the equipment or personal injury, it is important to turn the main power off when changing the lamps.

## 5. REPLACEMENT PARTS

### 5.1 Scoreboard Display Parts

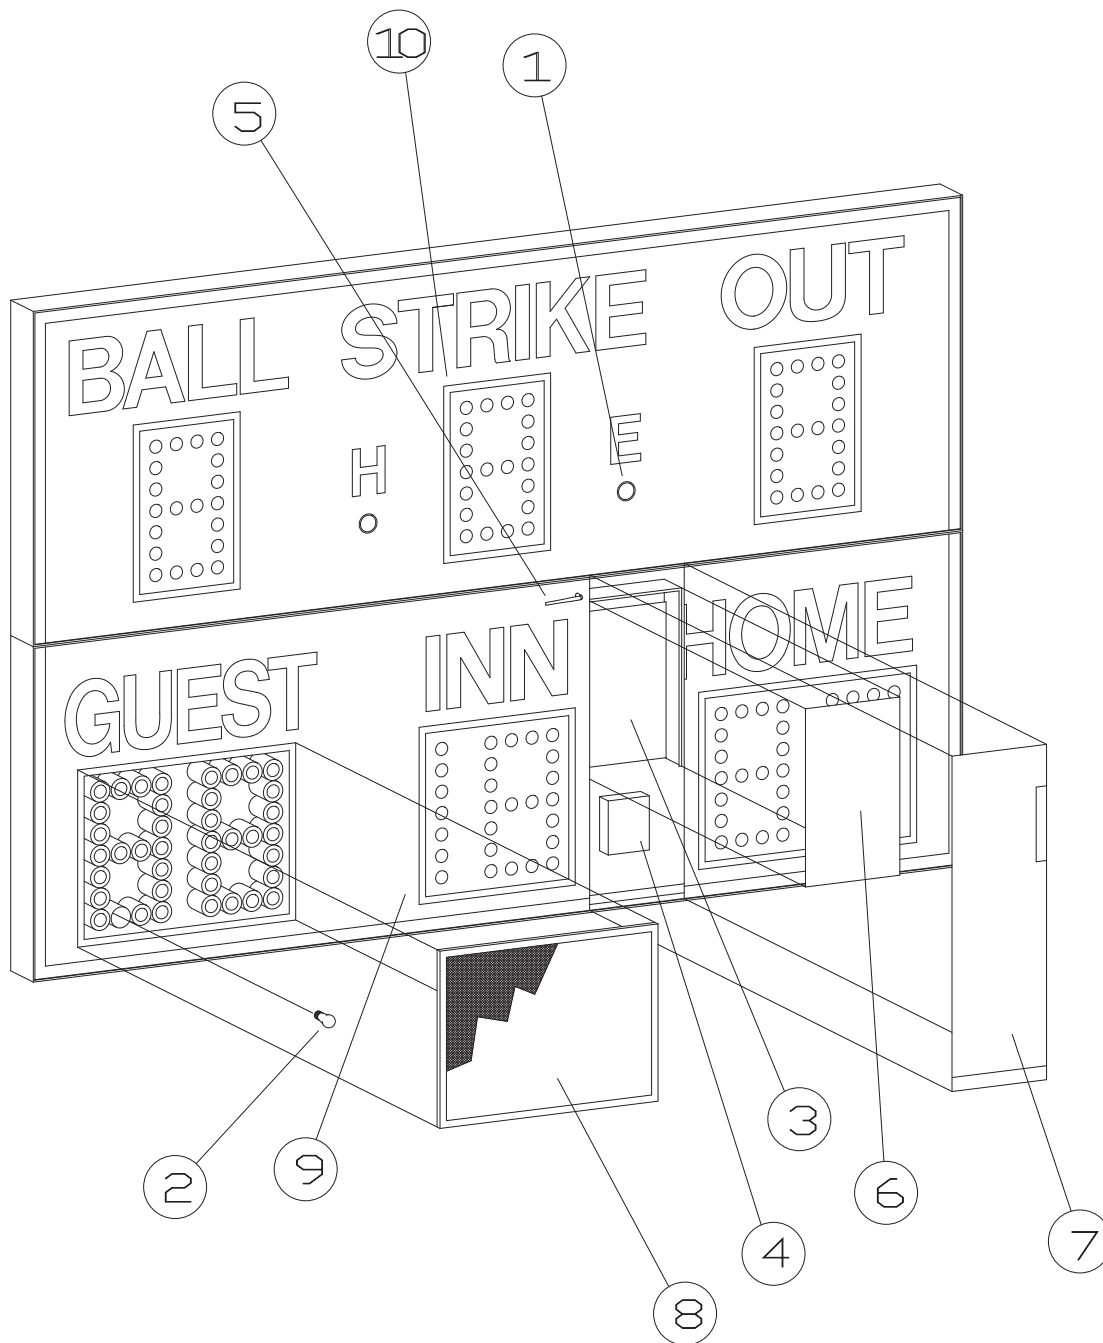


figure 1

### DISPLAY ASSEMBLY

## REPLACEMENT PARTS LIST (MP-3376R Baseball)

| fig.&<br>index | MFG PART<br>NUMBER                           | DESCRIPTION                                                                                                       | REF<br>DES | VENDOR<br>PART #                            |
|----------------|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------|------------|---------------------------------------------|
| 1-             | 151152                                       | Display Set,                                                                                                      |            | 151152                                      |
| 1-1            | 850032                                       | Lamp, 40W/130V Clear                                                                                              |            | 40A19 CL                                    |
| 1-2            | 850022                                       | Lamp, 15W/130V Clear                                                                                              |            | 15A15CL                                     |
| 1-2A           | 930677                                       | Lamp, 30W/130V IF                                                                                                 |            | 30A15 IF                                    |
| 1-3            | 151207                                       | Controller Assembly, W/3-3P Drivers<br>*****SEE DETAIL FIGURE 2*****                                              | A2         | 151207                                      |
| 1-4            | SU00038                                      | Fuse box,                                                                                                         |            | SU00038                                     |
| 1-4A           | 121880                                       | Fuse, 15A 250V 1/4 X 1 1/4"                                                                                       | F1-F5      | ABC-15                                      |
| 1-5            | EL00474P                                     | Antenna, External                                                                                                 |            | EL00474P                                    |
| 1-5A           | WI00018P                                     | Antennae Cable, 2.4 GHZ                                                                                           |            | WI00018P                                    |
| 1-6            | EL00083                                      | Rain Shield                                                                                                       |            | EL00083                                     |
| 1-7            | 150785                                       | Service Door                                                                                                      |            | 150785                                      |
| 1-8            | 705909                                       | Screen, (Home & Guest Score)                                                                                      |            | 705909                                      |
| 1-9            | 705908                                       | Screen, (Inning)                                                                                                  |            | 705908                                      |
| 1-10           | 705916                                       | Screen, (Ball, Strike, & Out)                                                                                     |            | 705916                                      |
| 1-11           | EL044100                                     | Resistor, 2 OHM 30 WATT Wire Wound                                                                                |            | HL-24-09Z                                   |
|                | 150021<br>HB005500<br>150031                 | Control Console, 3000 Radio<br>Slipsheet Pair<br>Transmitter PCB Assembly<br>***** PROGRAM MP3V38W *****          | A1         | 150021<br>HB005500<br>150031                |
|                | EL00479P<br>EL00473P<br>SW005100             | Tranceiver, 2.4 GHZ Zeus<br>Antenna, Internal<br>Toggle Switch,                                                   | S1         | EL00479P<br>EL00473P<br>SW005100            |
|                | EL057700<br>HB002400<br>WH009100<br>EL00476P | LCD Display, 2 Line 20 Character<br>Keyboard Assembly,<br>Ribbon Cable Assembly, 14C 8"<br>Con, Jack 12 VDC Power | J1         | EL057700<br>HB002400<br>WH009100<br>CP-5-ND |
|                | EL00478P                                     | Power Adaptor, 9 VDC 1 AMP                                                                                        |            | EL00478P                                    |

## 5.2 Scoreboard Controller Assembly Parts

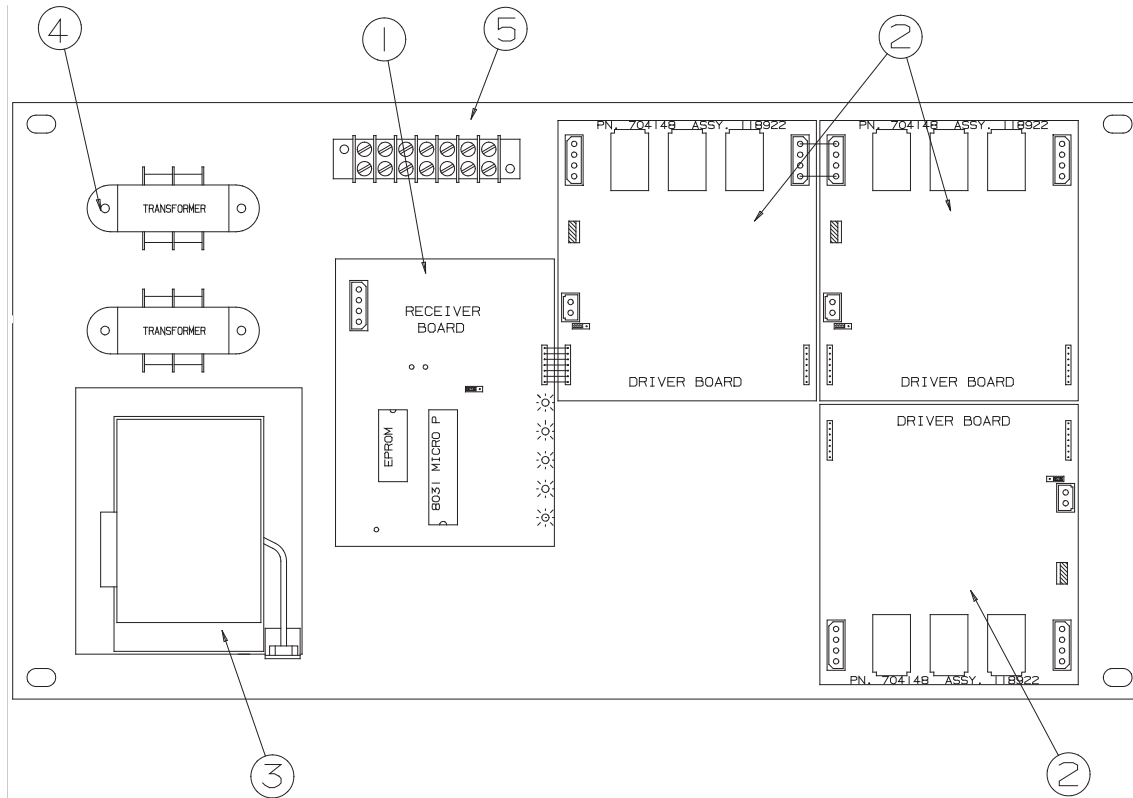


figure 2

### CONTROLLER ASSEMBLY

#### REPLACEMENT PARTS LIST (MP-3376R) Controller Assembly

| fig.&<br>index | MFG PART<br>NUMBER | DESCRIPTION                                         | REF<br>DES | VENDOR<br>PART # |
|----------------|--------------------|-----------------------------------------------------|------------|------------------|
| 2-             | 151207             | Controller Assembly                                 | A2         | 151207           |
| 2-1            | 150040             | Receiver PCB Assembly<br>*** PROGRAM 3MP-CNT-V00*** | A3         | 150040           |
| 2-2            | 118922             | Driver PCB Assembly, 3 Position                     | A4-A6      | 118922           |
| 2-3            | EL00479P           | Transceiver, 2.4 GHZ Zeus                           |            | EL00479P         |
| 2-4            | 703719             | Transformer, 8V/18V                                 | T1/T2      | CS-697           |
| 2-5            | 701137             | Terminal Block, 7C                                  | TB1&2      | 670-7            |
| 2-6            | 705723             | Spacer, P.C.Board                                   |            | LCBS-6-01        |

6.     **DIAGRAMS**

6.1   **Control Console Keyboard and Slipsheet Layout**


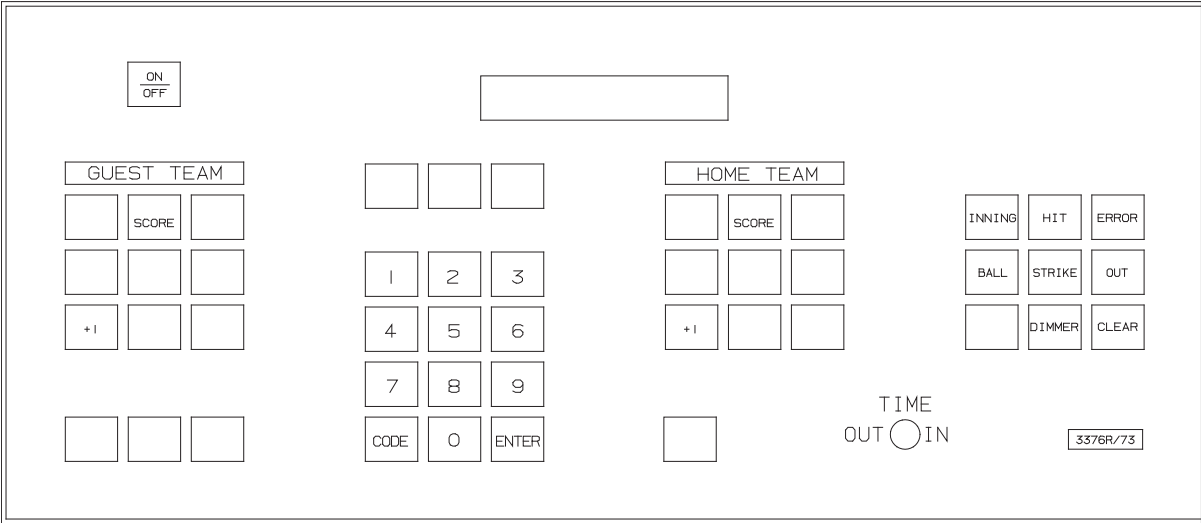


figure 3


**CONSOLE KEYBOARD**

6.2 Scoreboard System Layout

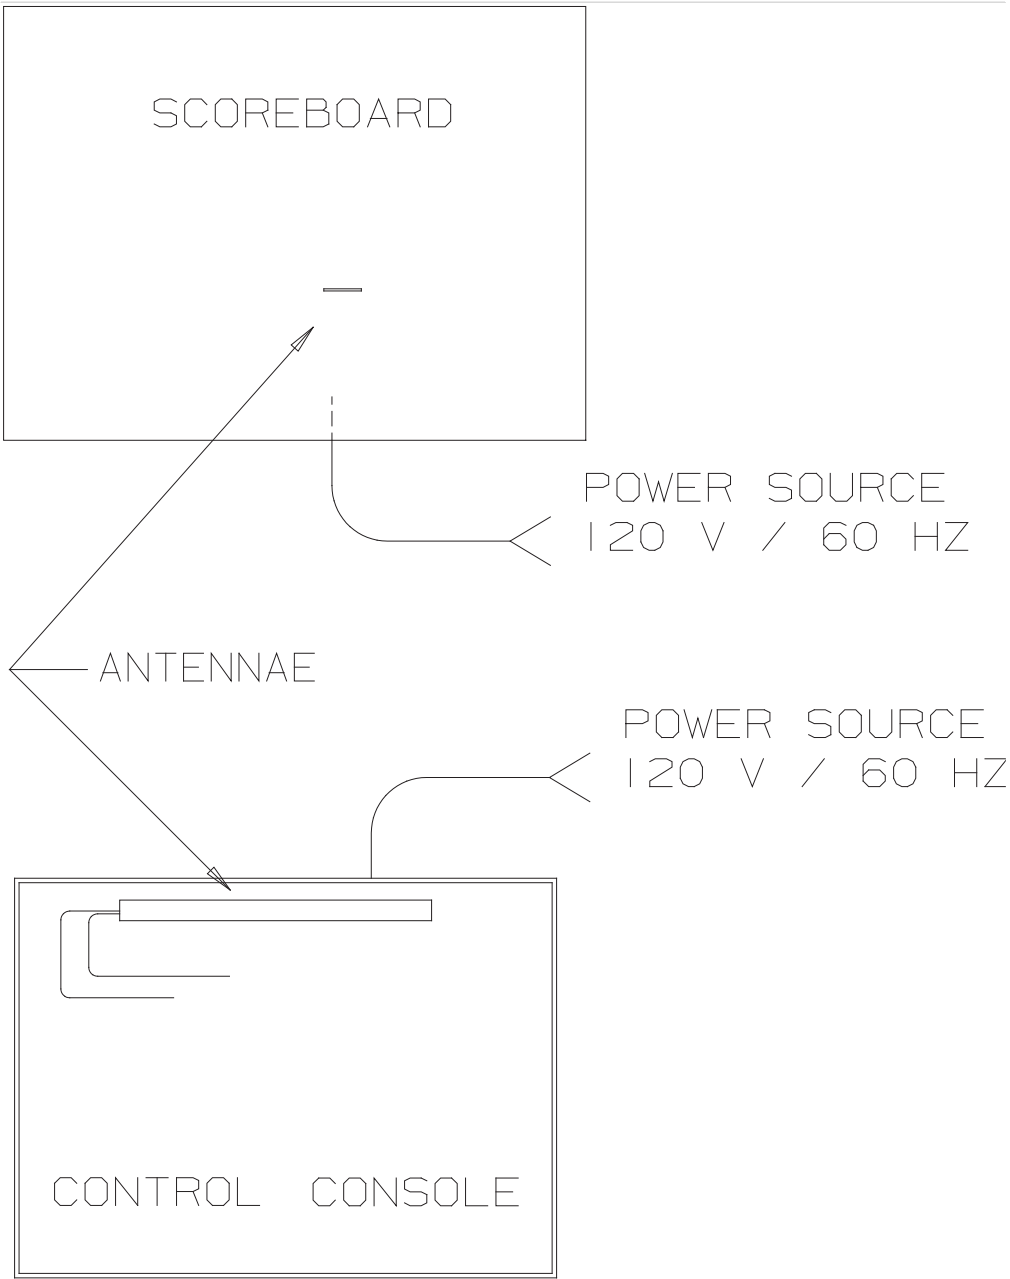


SYSTEM LAYOUT

## 6.3 Power Wiring

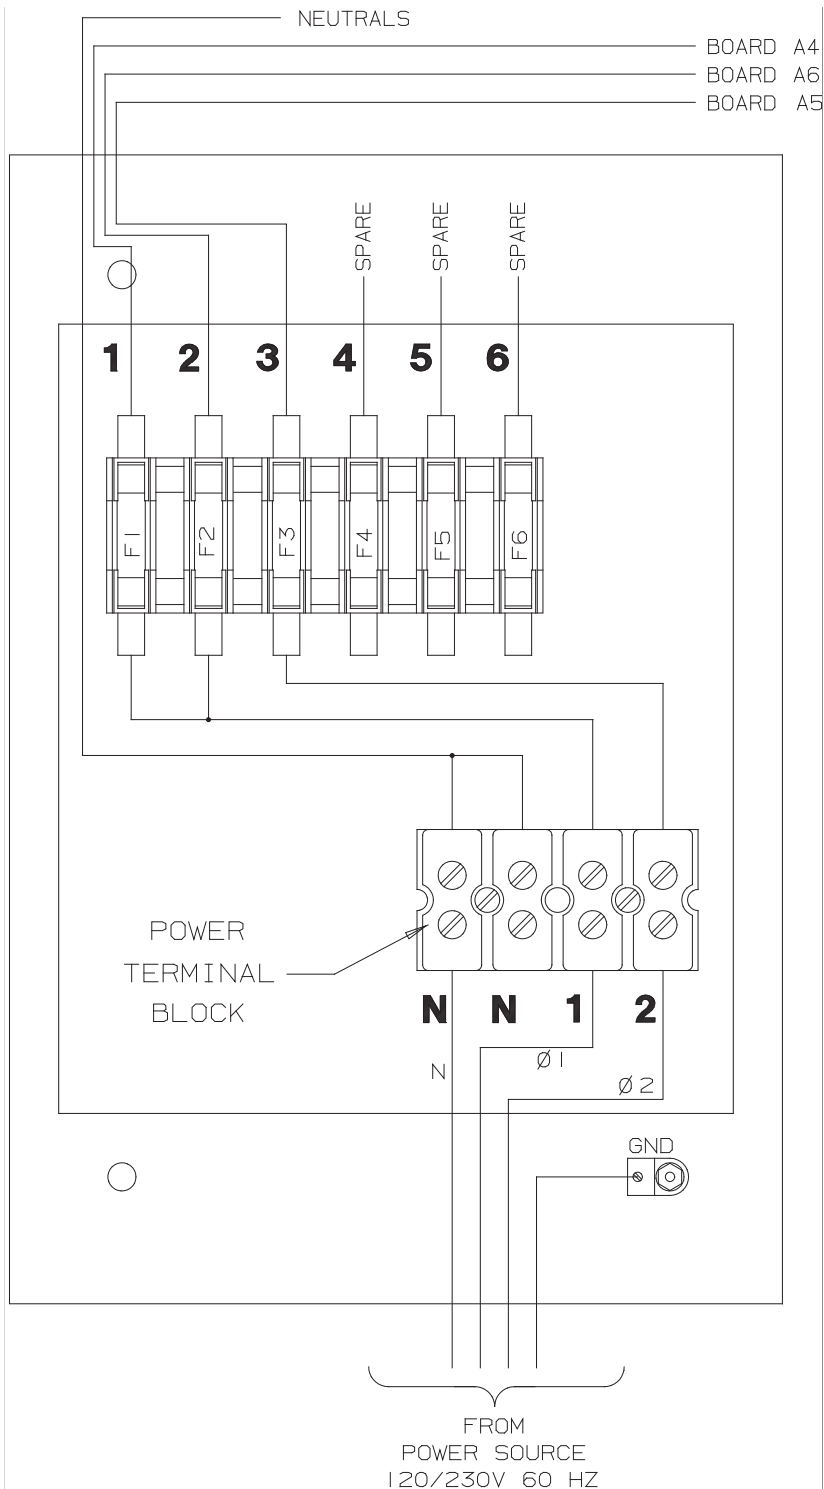



## POWER WIRING

6.4 Controller Assembly Wiring

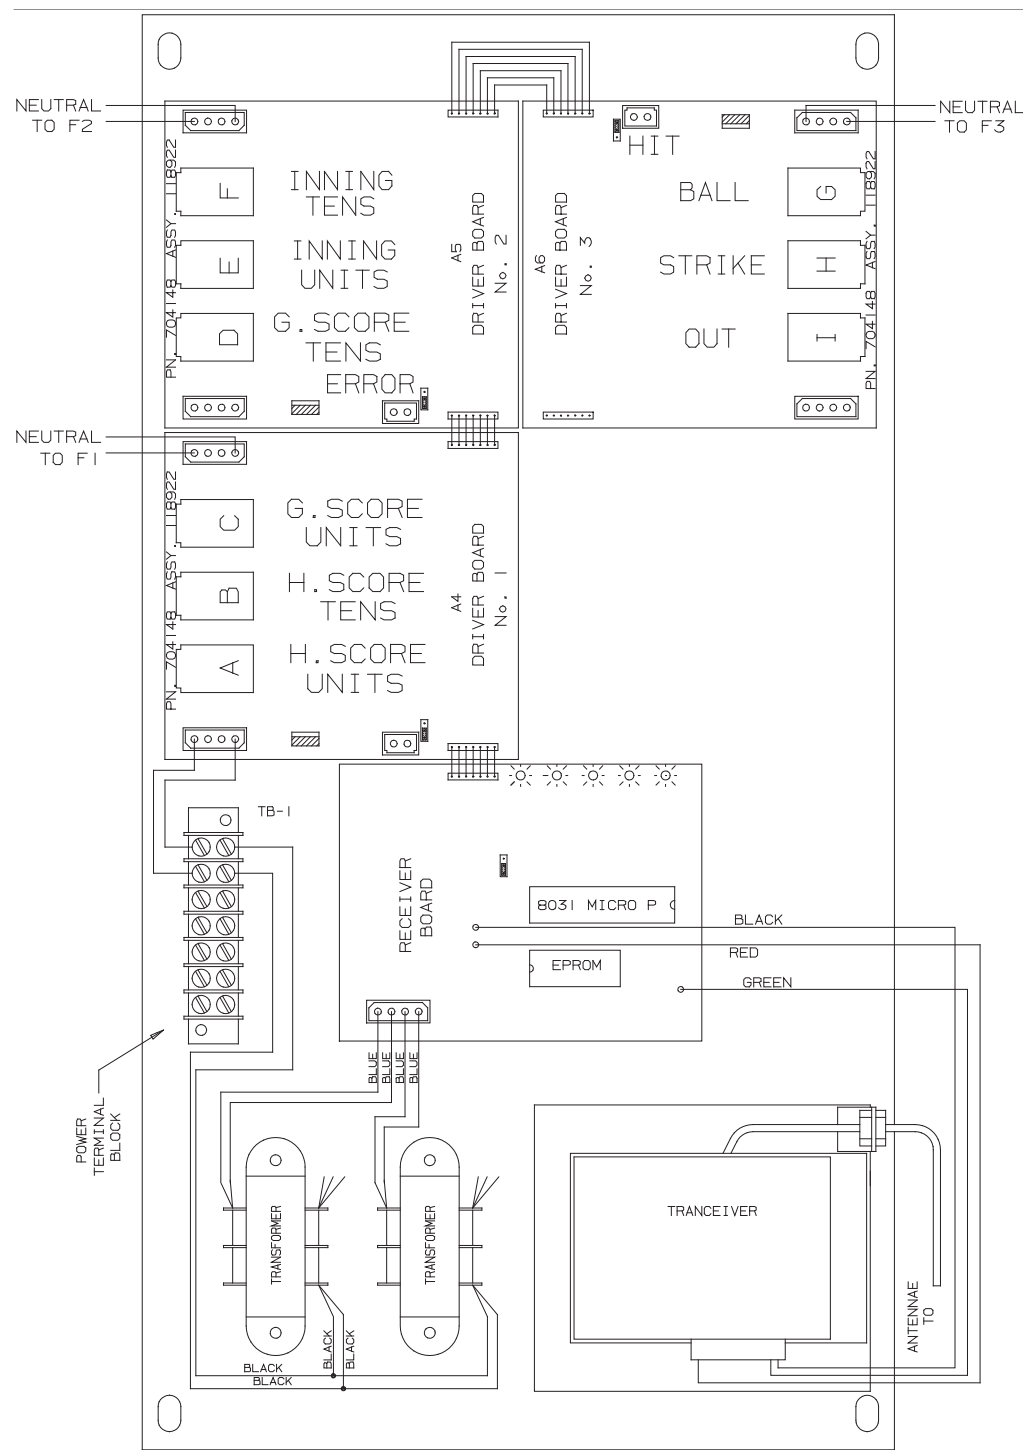

CONTROLLER ASSEMBLY



### 6.5 Microprocesor 4 X 7 Lamp Pattern (8 Bit)

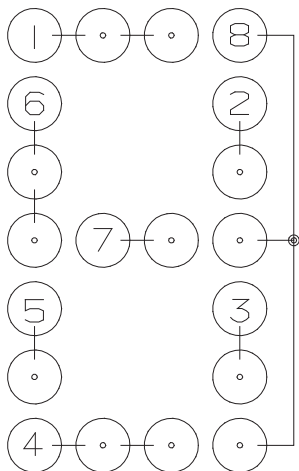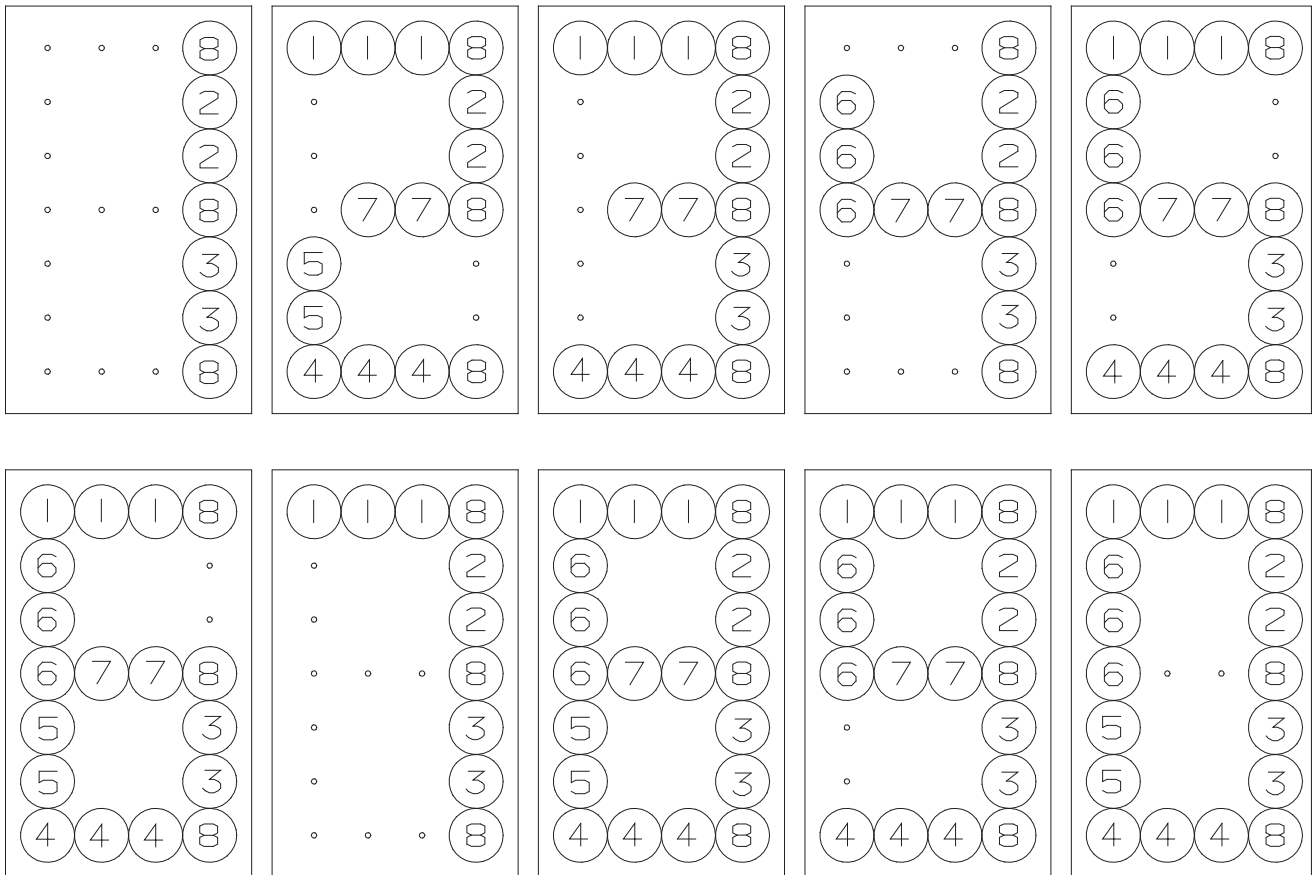

|                |   | NUMERALS |   |   |   |   |   |   |   |   |   |
|----------------|---|----------|---|---|---|---|---|---|---|---|---|
|                |   | 0        | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| BIT<br>NUMBERS | 1 | 0        | . | 2 | 3 | . | 5 | 6 | 7 | 8 | 9 |
|                | 2 | 0        | 1 | 2 | 3 | 4 | . | . | 7 | 8 | 9 |
|                | 3 | 0        | 1 | . | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|                | 4 | 0        | . | 2 | 3 | . | 5 | 6 | . | 8 | 9 |
|                | 5 | 0        | . | 2 | . | . | . | 6 | . | 8 | . |
|                | 6 | 0        | . | . | . | 4 | 5 | 6 | . | 8 | 9 |
|                | 7 | .        | . | 2 | 3 | 4 | 5 | 6 | . | 8 | 9 |
|                | 8 | 0        | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |

### MICROPROCESSOR 4 X 7 (8 BIT) LAMP PATTERN

6.6 Figuregram Wiring

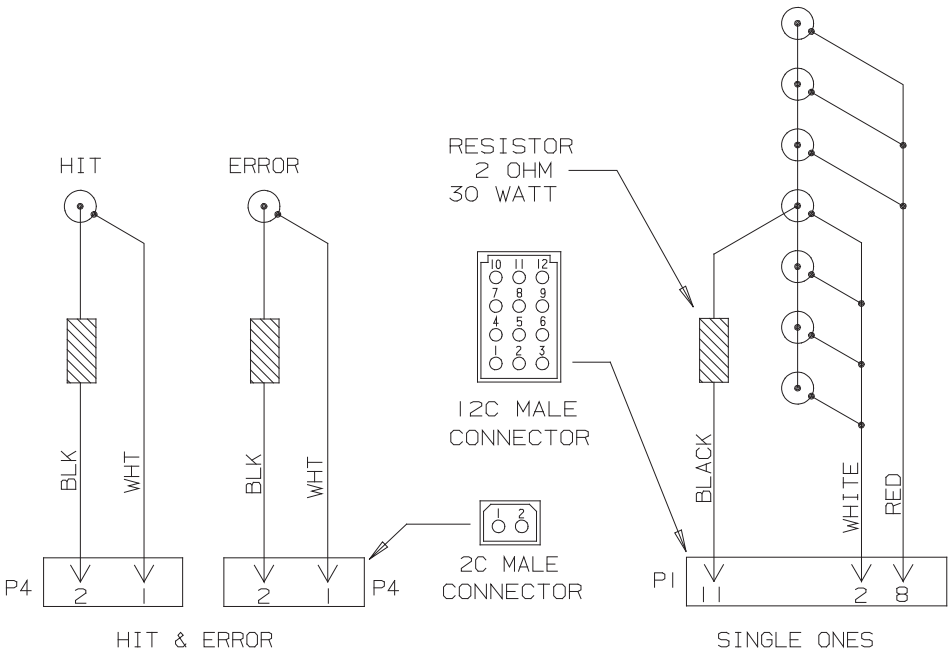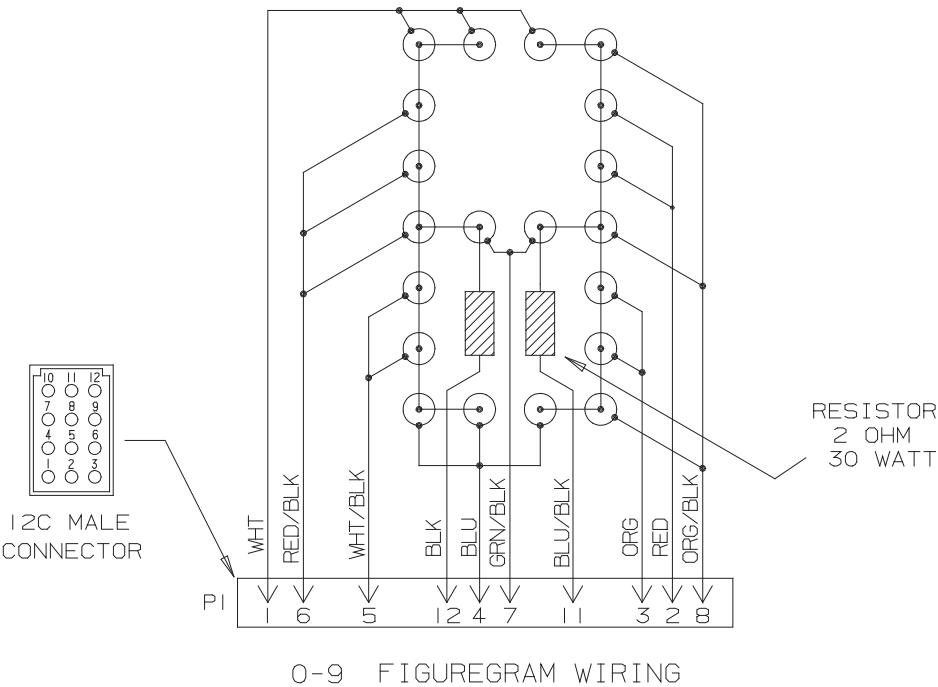


8 BIT FIGUREGRAM WIRING

## 6.7 Jumper Location on 3 Position System

All of the 3 position drivers and receivers are identical except for the jumper on each board. Make sure the jumpers are set for the model of scoreboard you are installing them into.


- (A) On the receiver board (refer to figure 11); Jumper pins 2 & 3 for models MP-3385, MP-3312, MP-3529, and MP-3549. Jumper pins 1 & 2 for all other models.
- (B) On the driver board (refer to figure 10); Jumper pins 1 & 2 for use of a horn. Jumper pins 2 & 3 for all others.

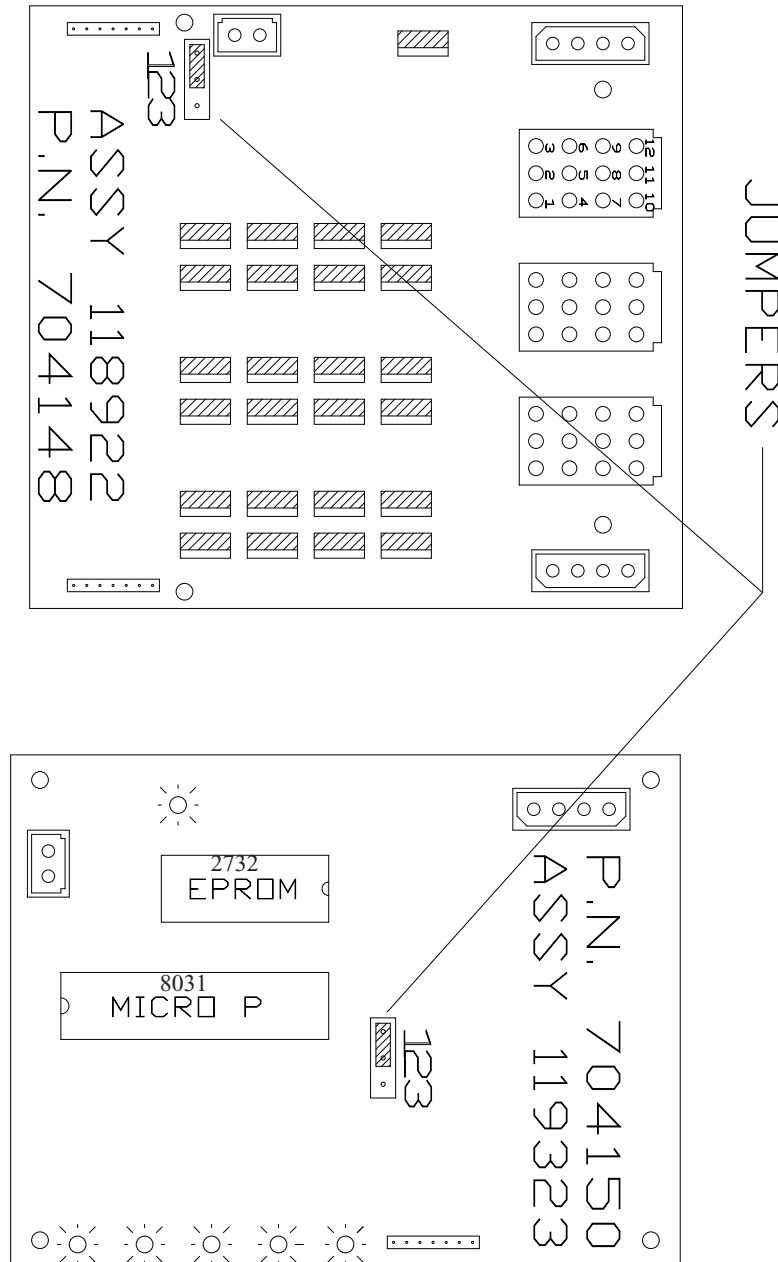

JUMPER LOCATION


6.8 Triac Placement

The triac is the switch that controls the figuregram lamps. The triacs for any given figuregram are adjacent to the twelve pin connector on the driver board that controls that figuregram. Shown below is the triac placement and bit designation relative to the figuregram bit pattern.

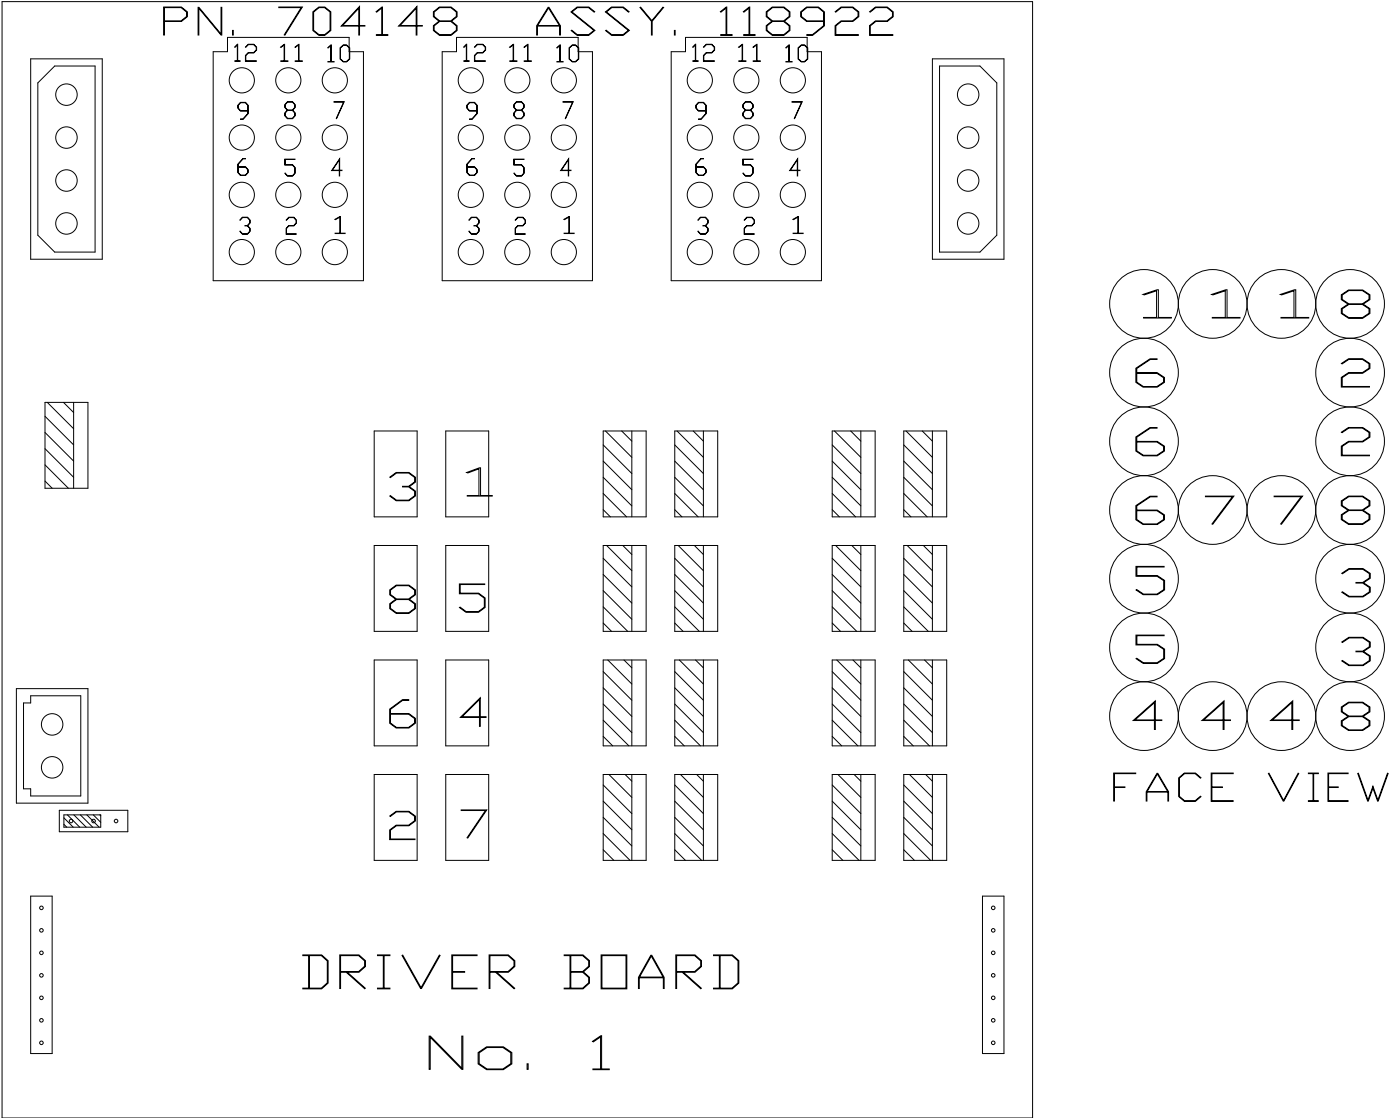


MP TRIAC PLACEMENT

6.9 Installation Drawing

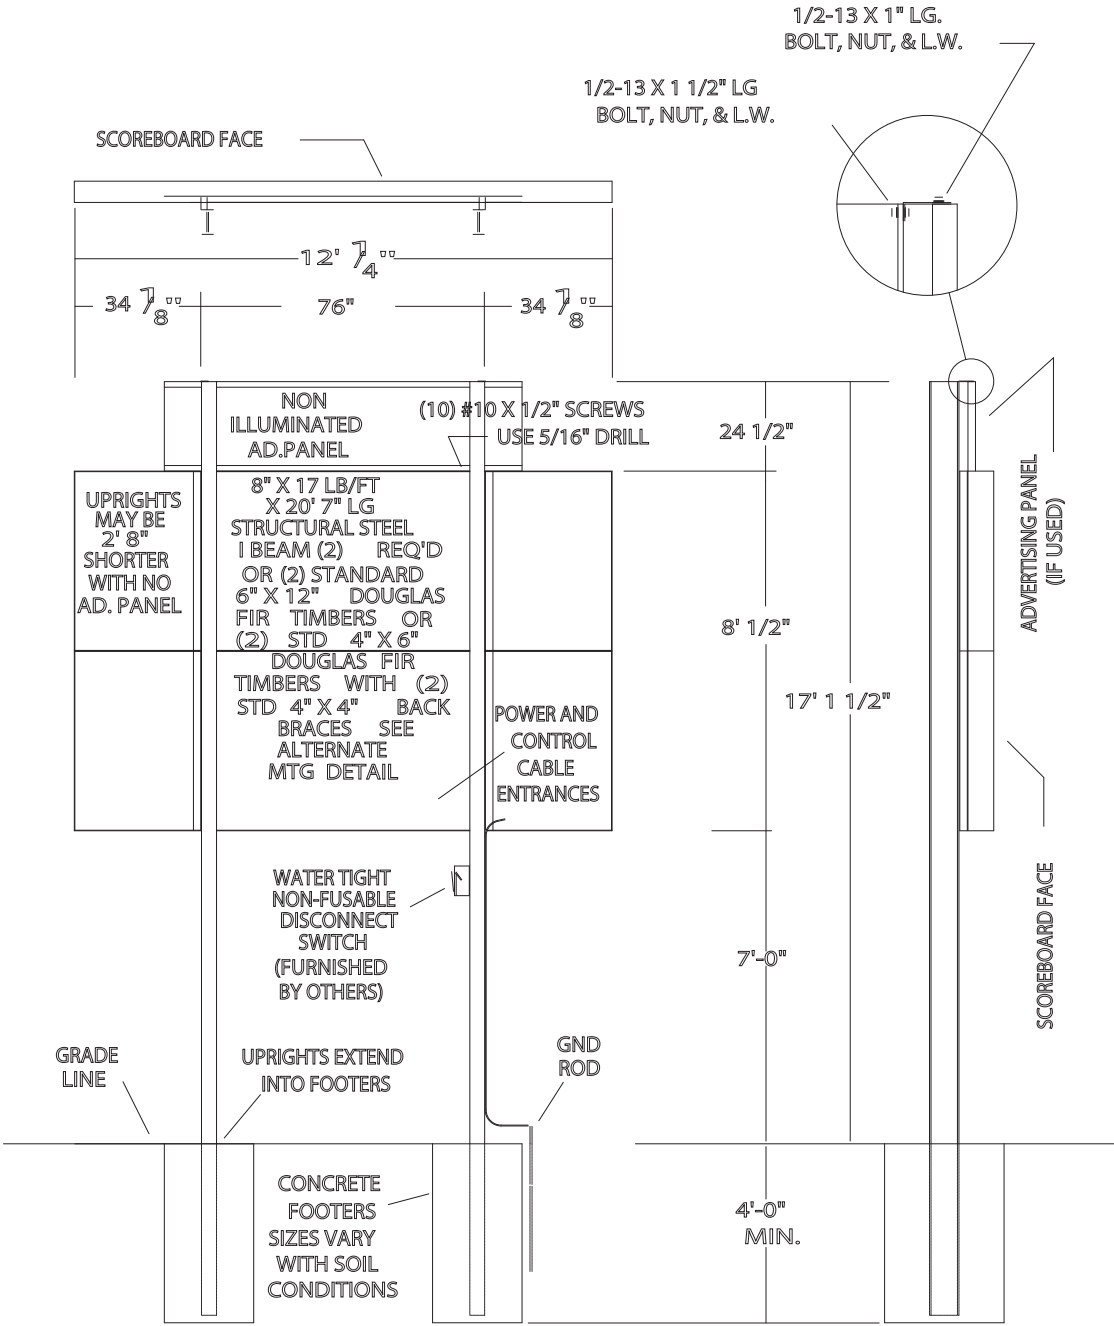

INSTALLATION DRAWING

6.9 Installation Drawing

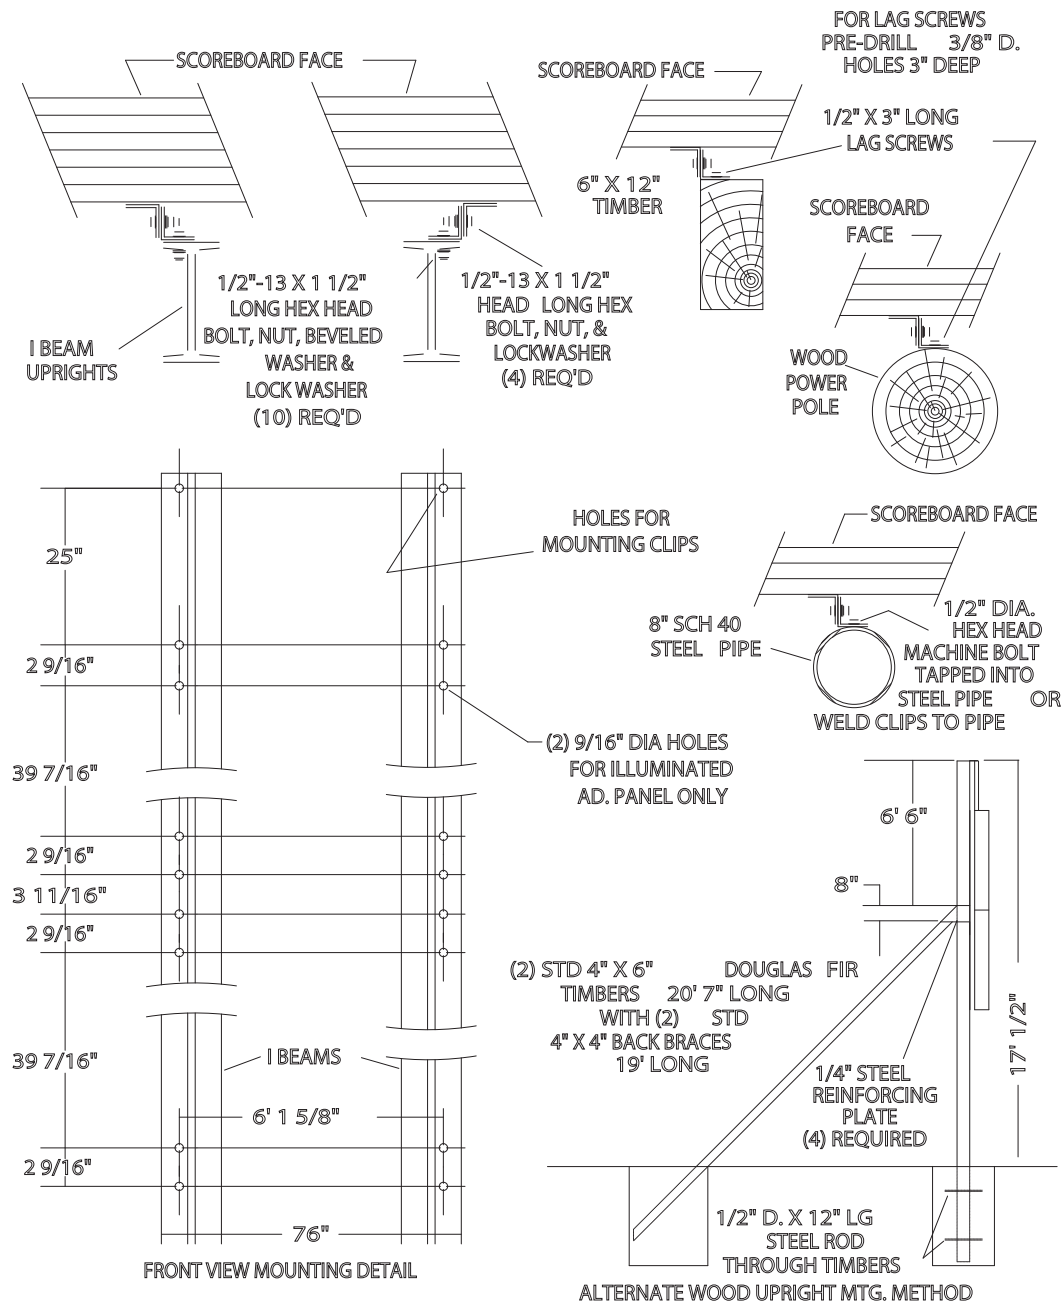

INSTALLATION DRAWING